




Dragon Touch A1x Plus Battery Replacement

This guide will walk you through how to replace...

Written By: Josh Null

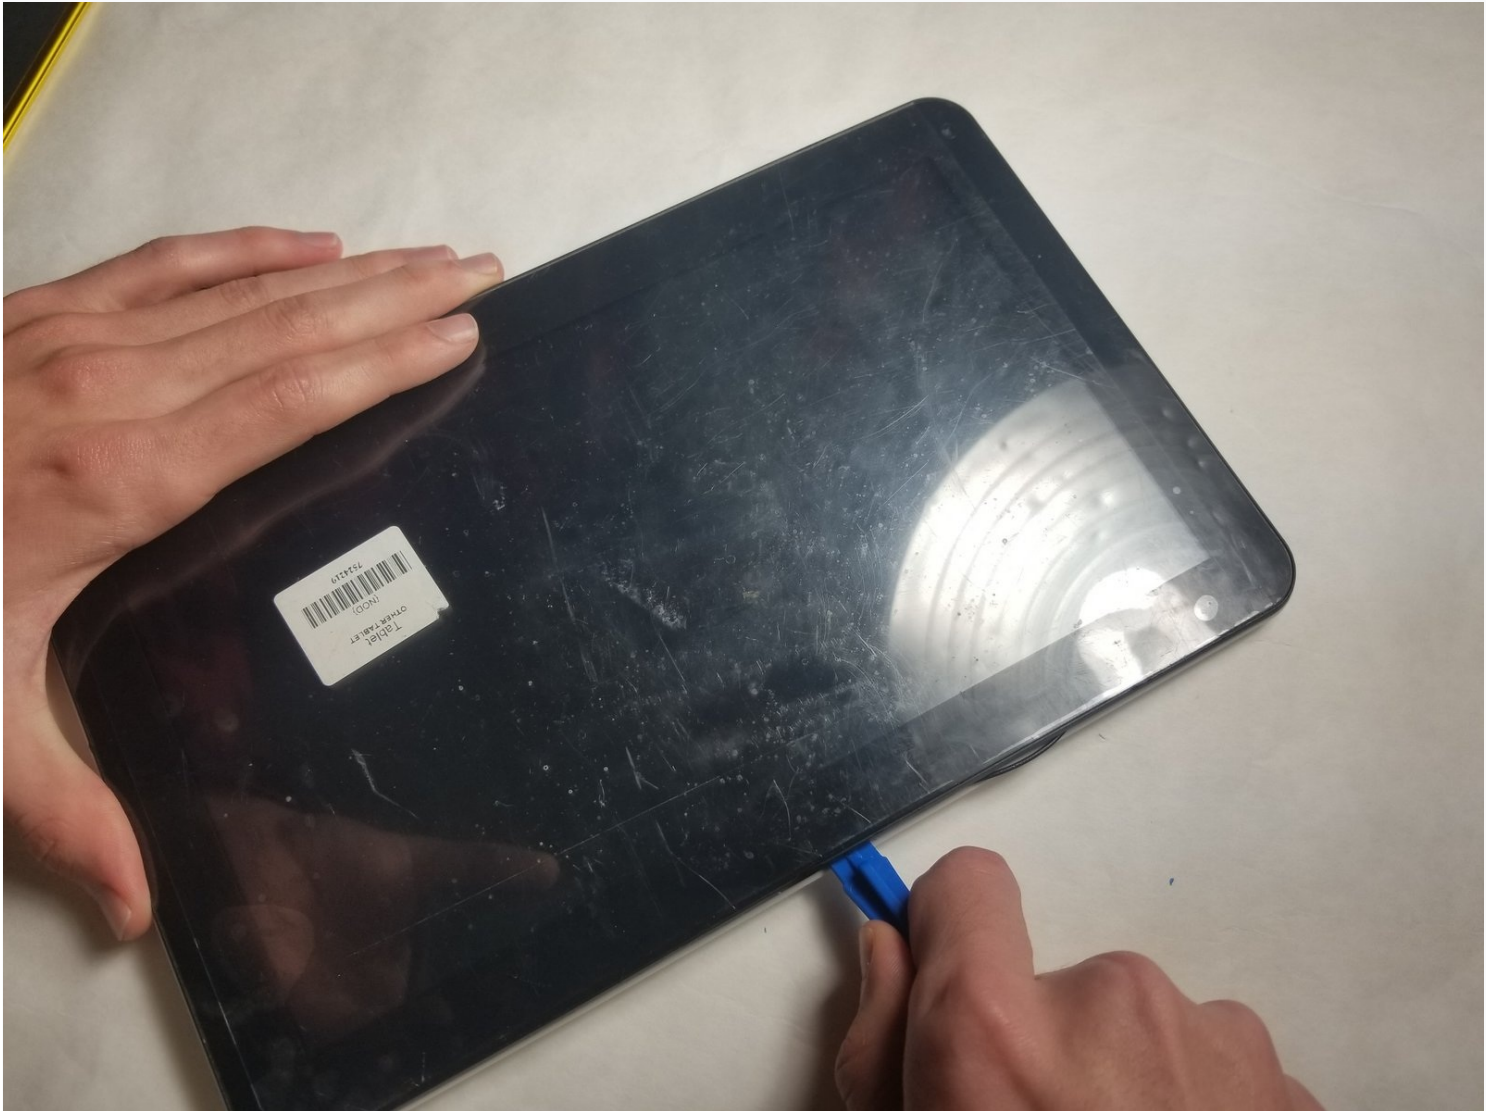

INTRODUCTION

This guide will walk you through how to replace the battery of the device. In order to do this you must first remove the back cover. Once the back cover is off, you can remove and replace the battery.

TOOLS:


[iFixit Opening Tool](#) (1)

[Plastic Cards](#) (1)

[Hair Dryer](#) (1)


[Soldering Iron 60w Hakko 503F](#) (1)

Step 1 — Battery

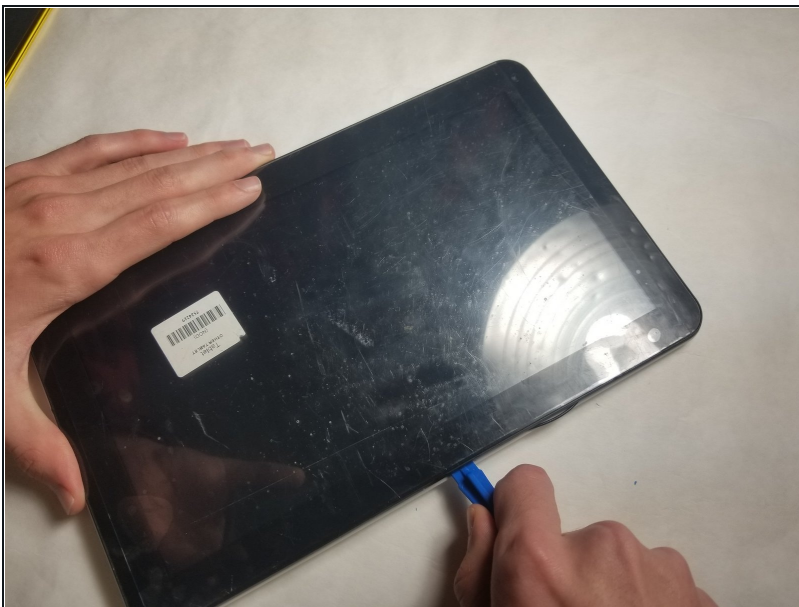


- Insert the plastic opening tool between the white back cover and black front over.

Step 2

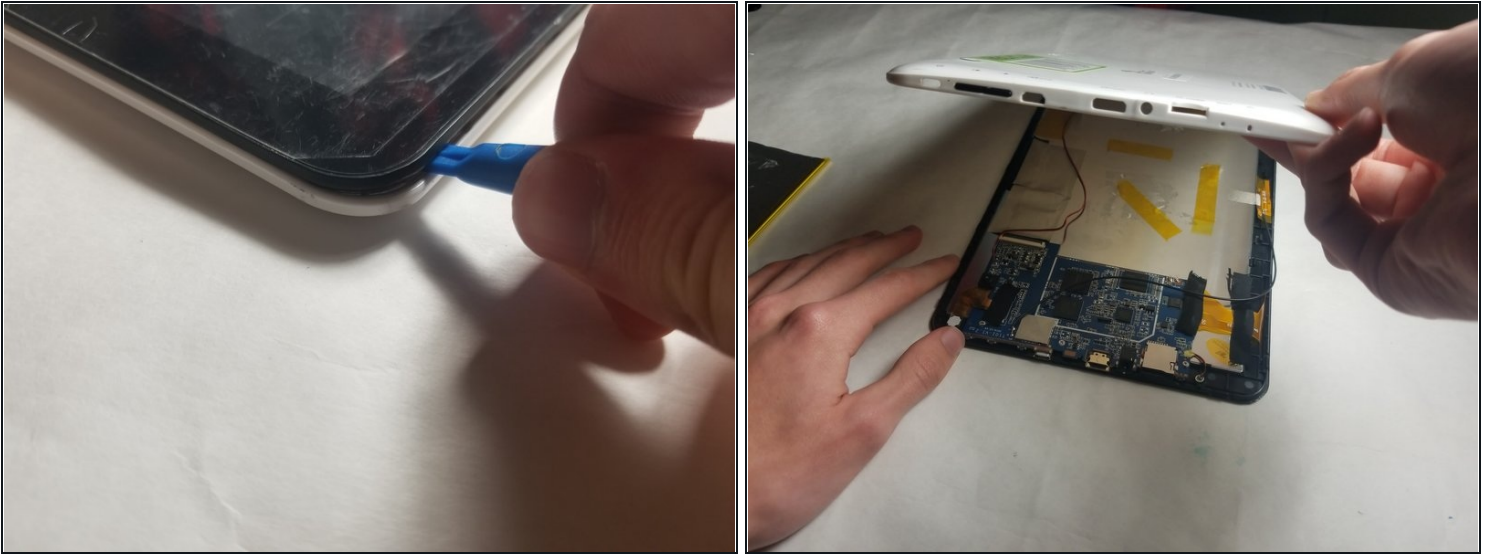


- Slide the plastic opening tool along the edge of the device until back cover is detached and remove the cover.
- ① You may need to pry the back cover off using the opening tool while moving it along the edge.

Step 3

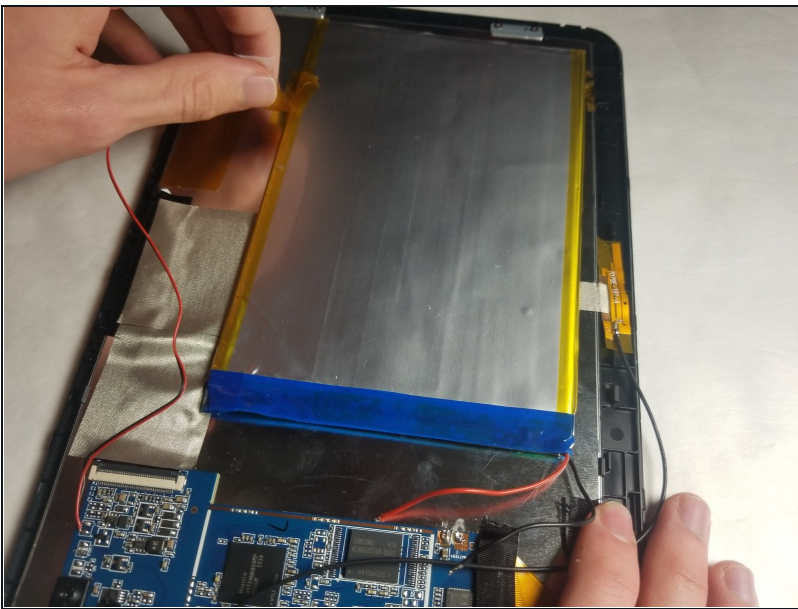

- Remove the yellow tape holding the battery to the device using your fingers or plastic opening tool if necessary.


Step 4

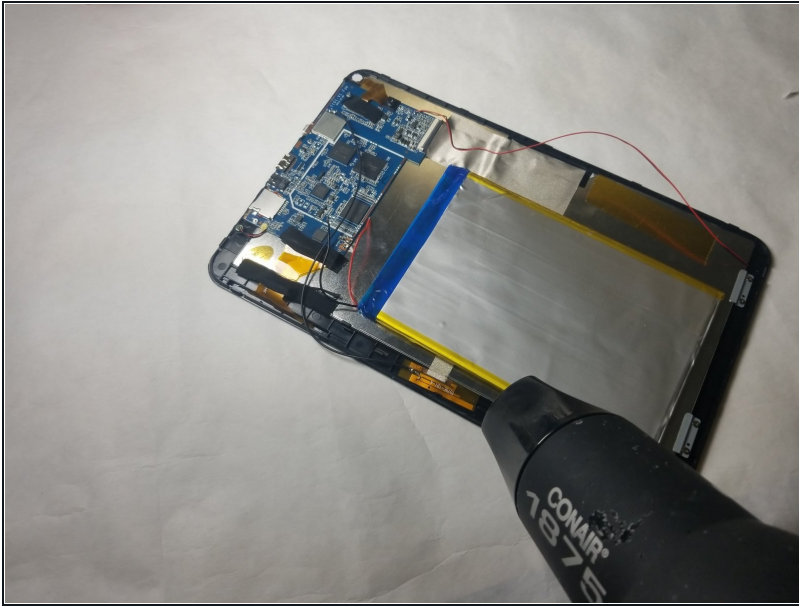

- Use the hair dryer to melt the glue holding the battery to the device.

⚠ Be careful not to overheat the battery as it could cause the battery to combust.



Step 5

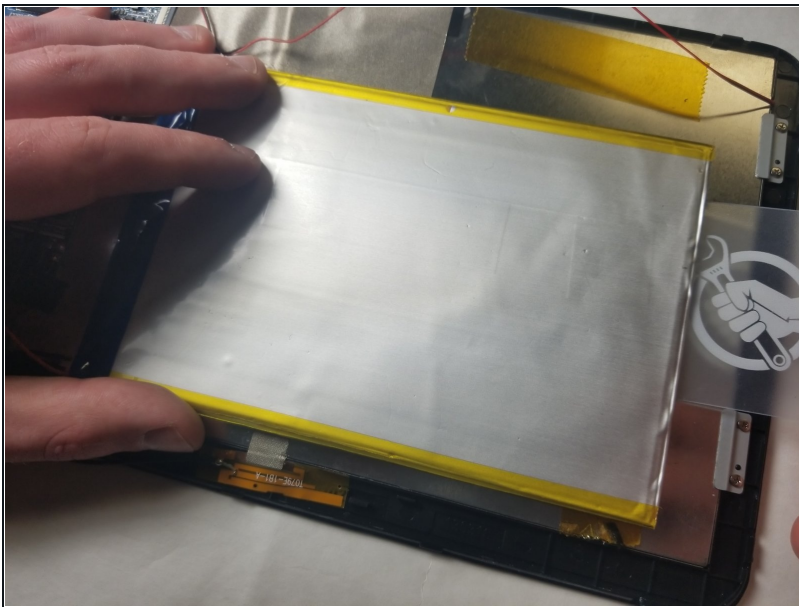

- Insert the [plastic card](#) under the battery and use it to remove the battery from the device.

⚠ Be careful not to deform the battery.

Step 6

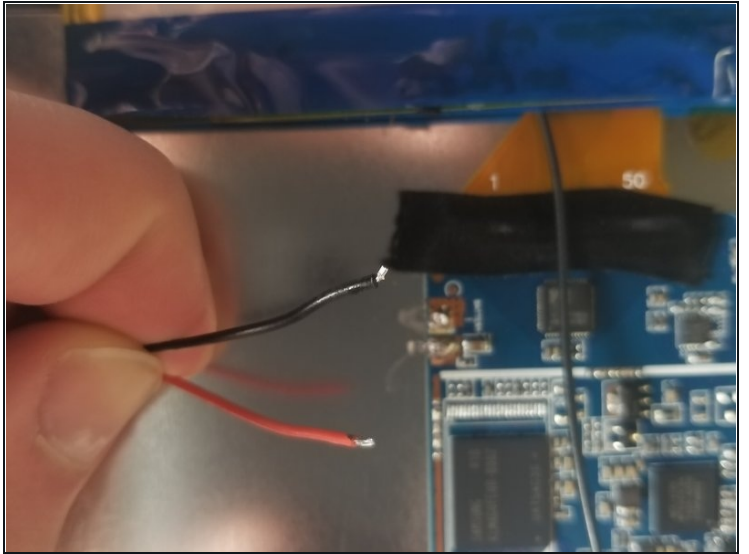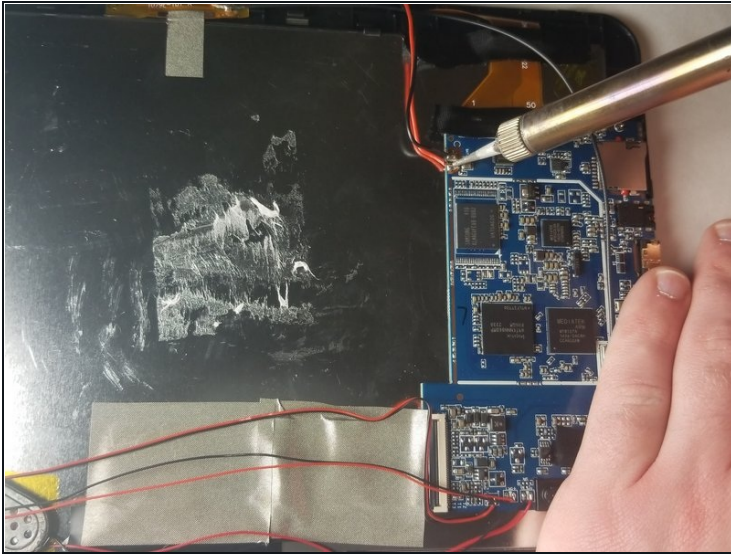

- [Desolder](#) the red and black wires connecting the battery to the motherboard and remove the battery.

To reassemble your device, follow these instructions in reverse order.