




HP Pavilion g4-1117dx Hard Drive Replacement

How to replace aHP Pavilion g4-1117dx hard drive.

Written By: Robert Hamilton

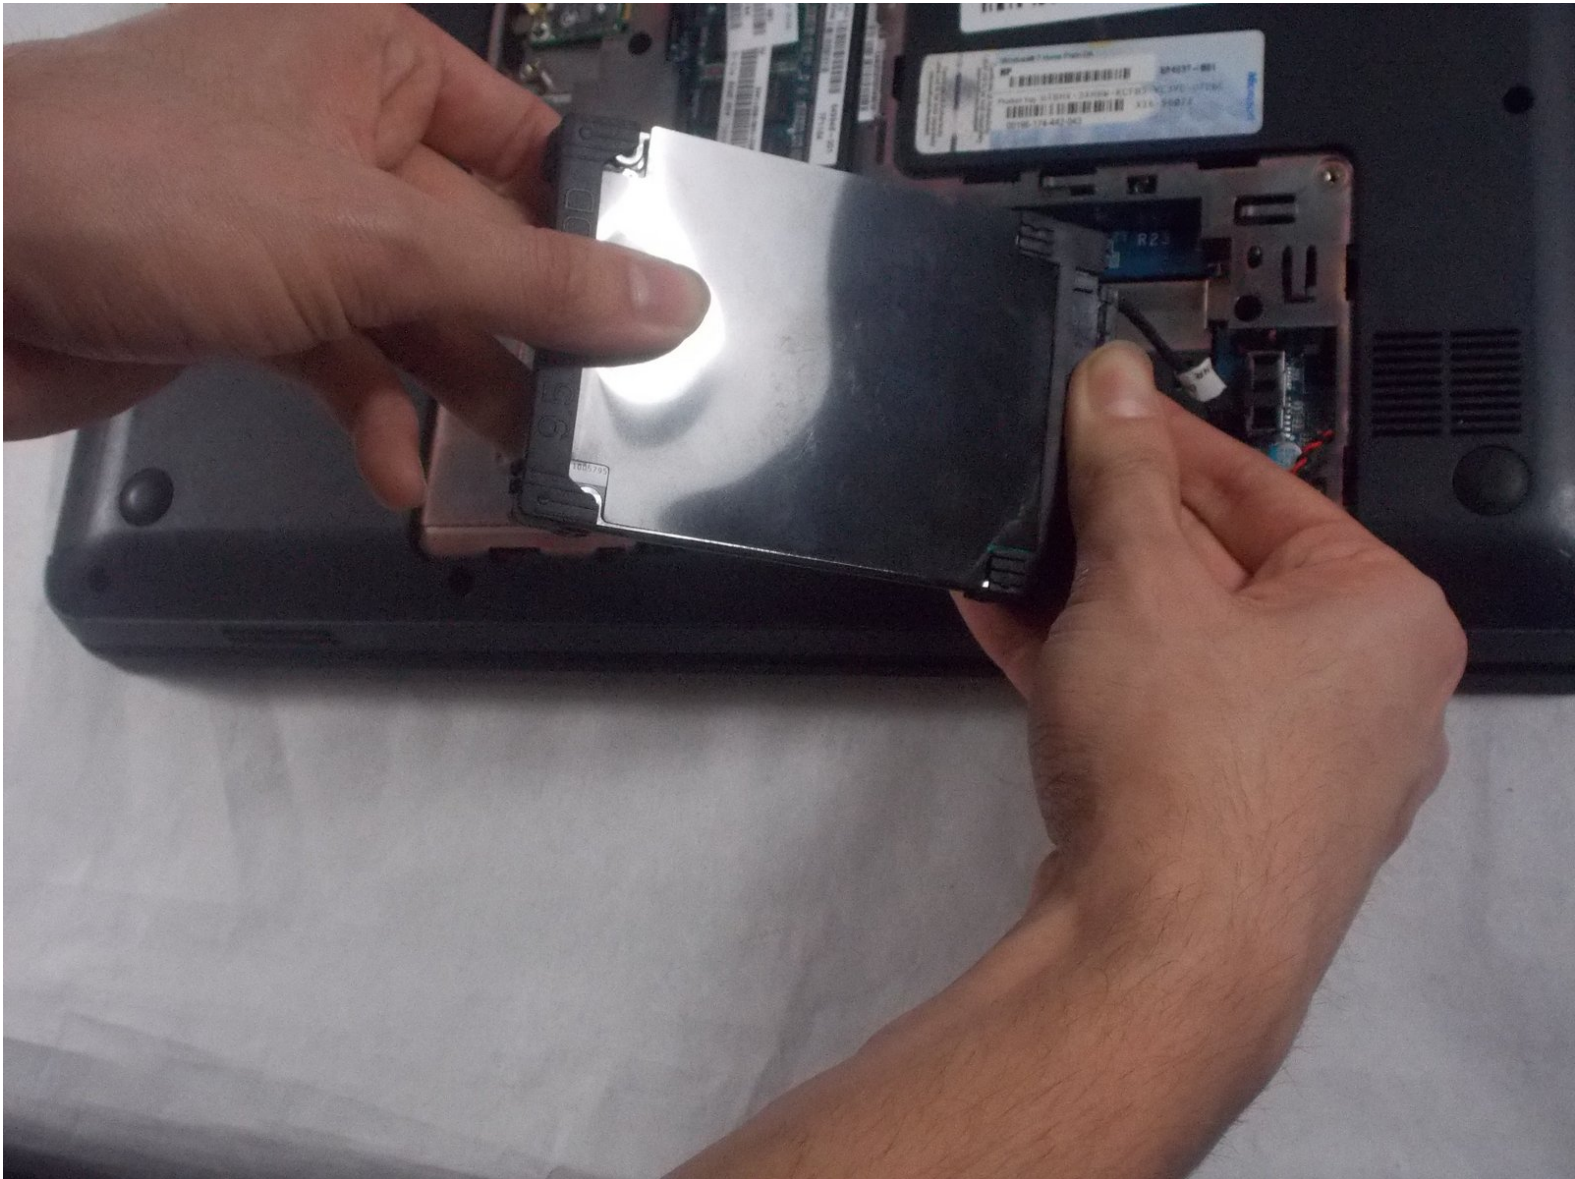

INTRODUCTION

The hard disc drive, also known as HDD for short is what stores all the memory on your device. It's a thin black box right under the smaller panel and is very easy to remove.

TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

Step 1 — L-Shaped Back Panel




- Unscrew the two screws JIS #0 located on opposite sides of the panel.
- ❗ Screws are attached to the panel and will not fully come out.

Step 2



- Carefully pry off the L-shaped panel.

Step 3 — Hard Drive

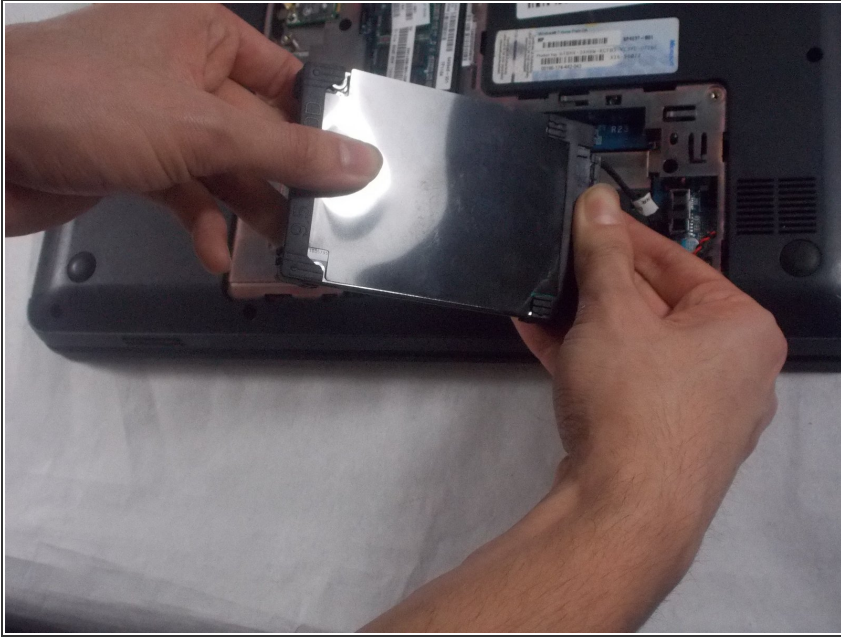

- Pull out and unplug the tab on the right hand side.

To reassemble your device, follow these instructions in reverse order.