



## **Dell Vostro 14 3449 Battery Replacement**

Written By: Johnathan Hammond

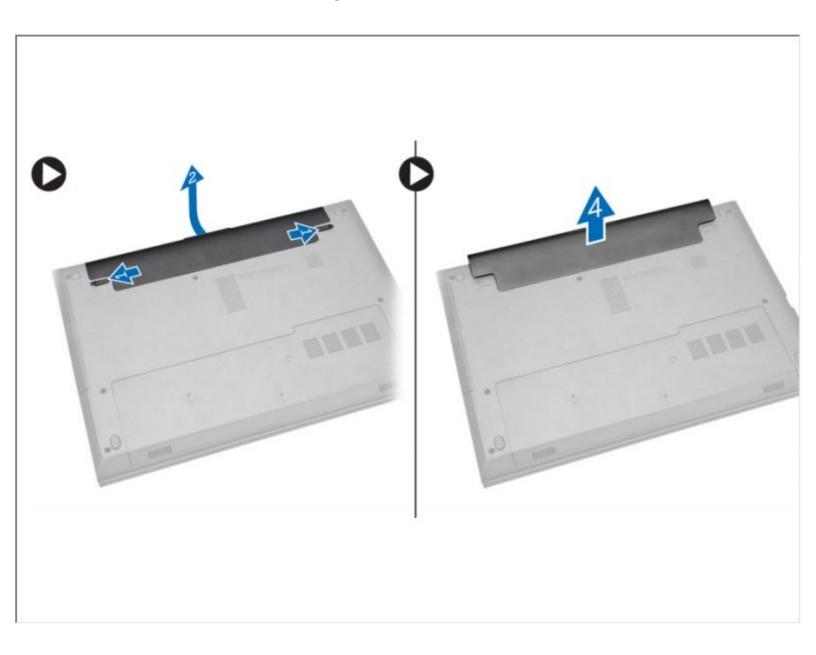

## Step 1 — Battery

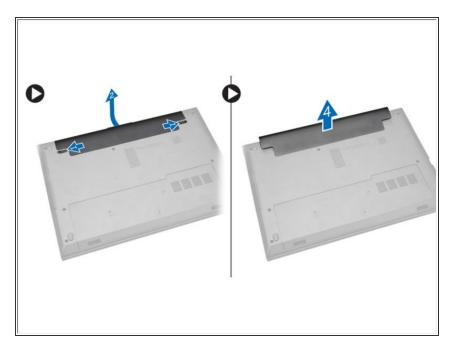

 Slide the release latches outwards to unlock the battery and lift the battery to remove it from the computer.

To reassemble your device, follow these instructions in reverse order.