



Alcatel One Touch Elevate (5017B)

Motherboard Replacement

This guide will help you disassemble the Alcatel One Touch Elevate 5017b to replace its motherboard.

Written By: Yahriel Negrete






TOOLS:

- [Fingers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

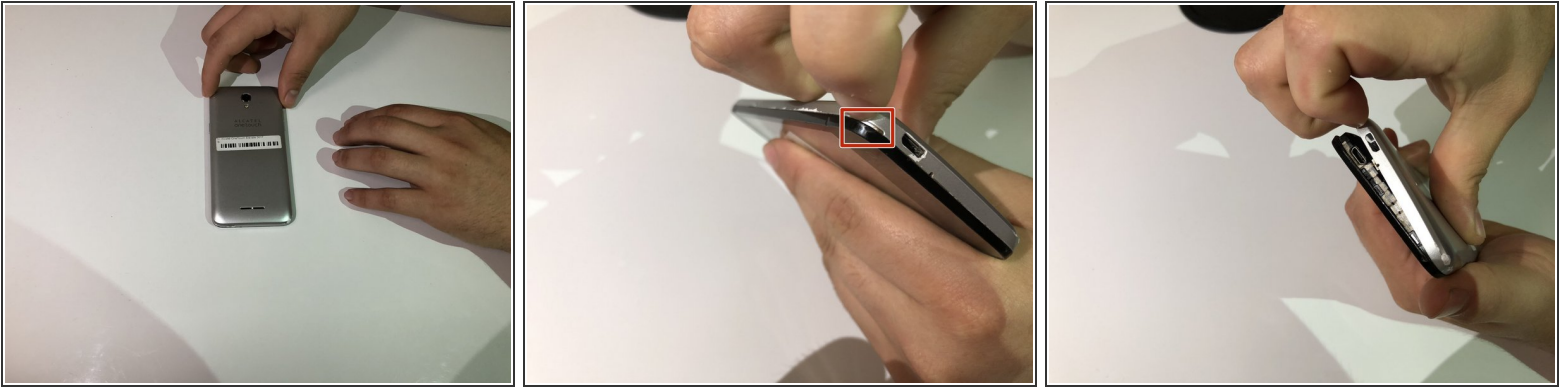

- Locate the small indent on the lower left corner.
- Use your fingers or a small plastic opening tool to lift the back cover off.

Step 2




- Locate the indent between the battery and your phone.
- Use your finger or a small plastic opening tool to lift the battery free.

Step 3 — Motherboard



- Using the Phillips screw driver, remove the 9 screws from the phone.

Step 4

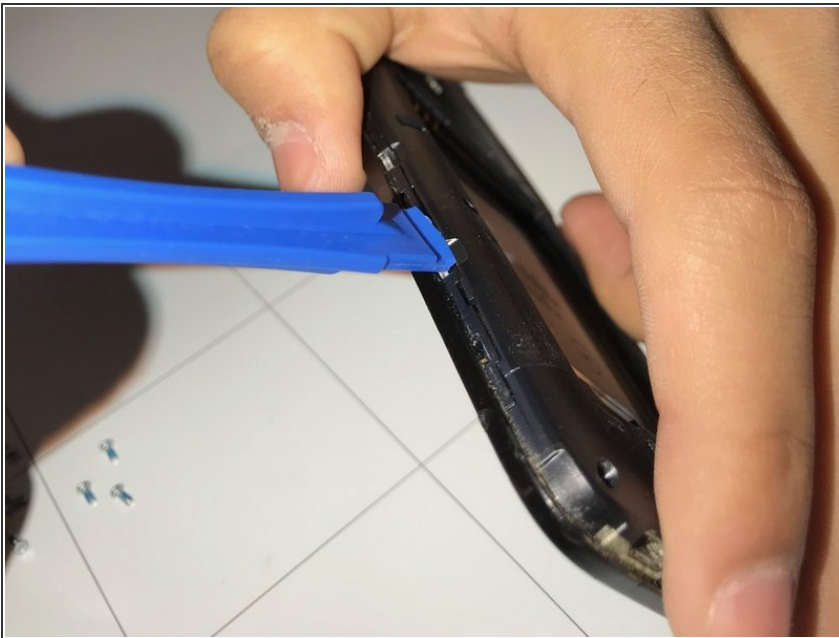


- Using your prying tool, place it between the screen and the back cover and pry it open.

Step 5



- Disconnect the camera from the motherboard with your prying tool.

Step 6

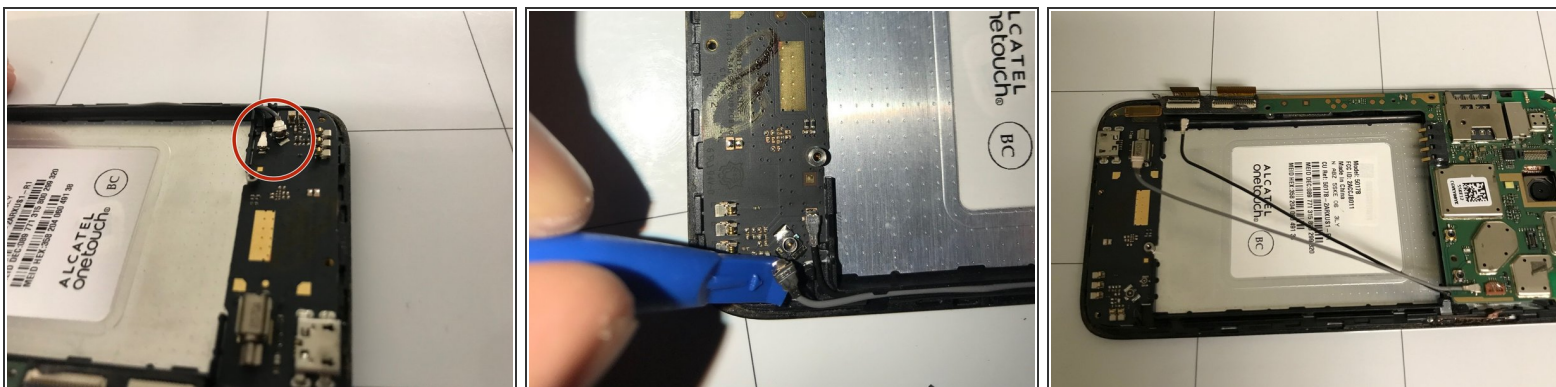


- Remove both of this cables located on the bottom left corner of the phone.

Step 7





- Remove the volume and power button using your prying tool.
- Go underneath the bronze plate with your prying tool and carefully pry it off.

Step 8

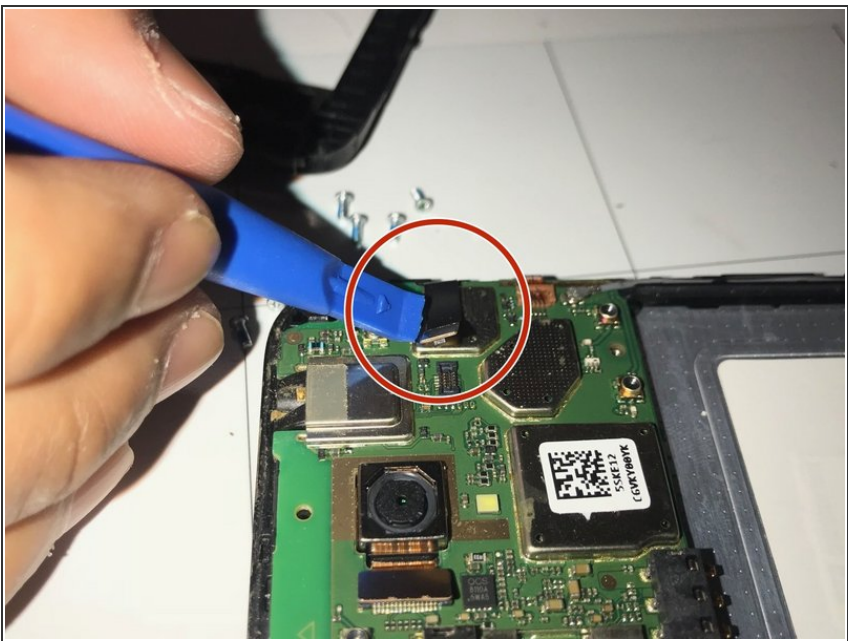

- Remove this piece that is to the right of the camera with your prying tool.

Step 9

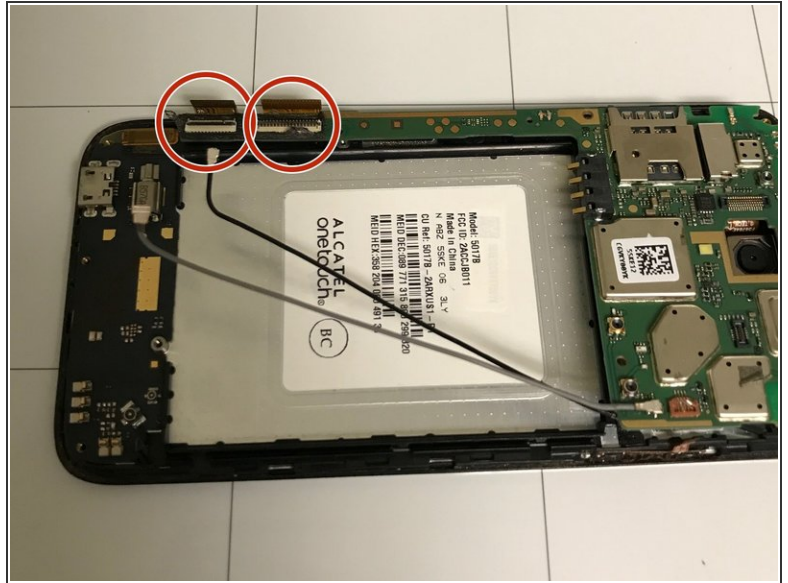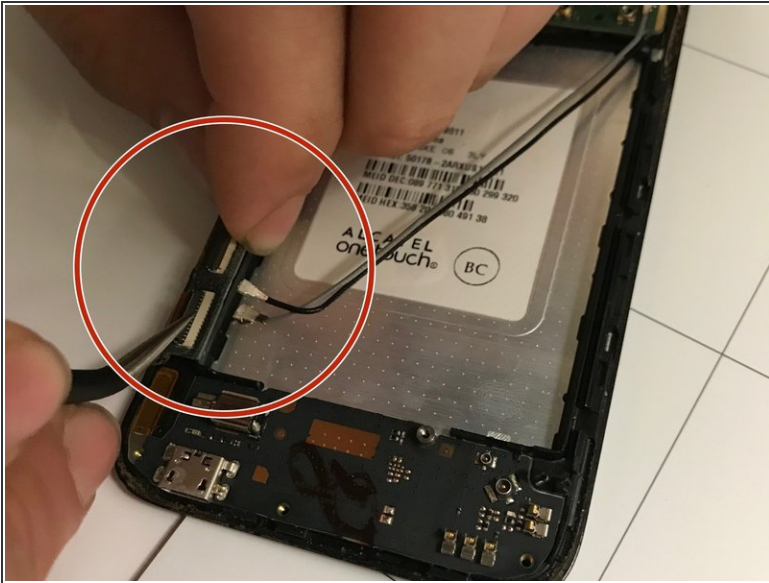

- Remove this two pieces by using your tweezers.
- Carefully pull them off. There will be a black flap where you can place your tweezers to pull.

Step 10



- Using you prying tool, go in-between the phone.
- Carefully pry it off.

To reassemble your device, follow these instructions in reverse order.