




# Fujitsu Lifebook S6120 Keyboard Replacement

If the keyboard is not responding or inputs...

Written By: Jessi Gallant

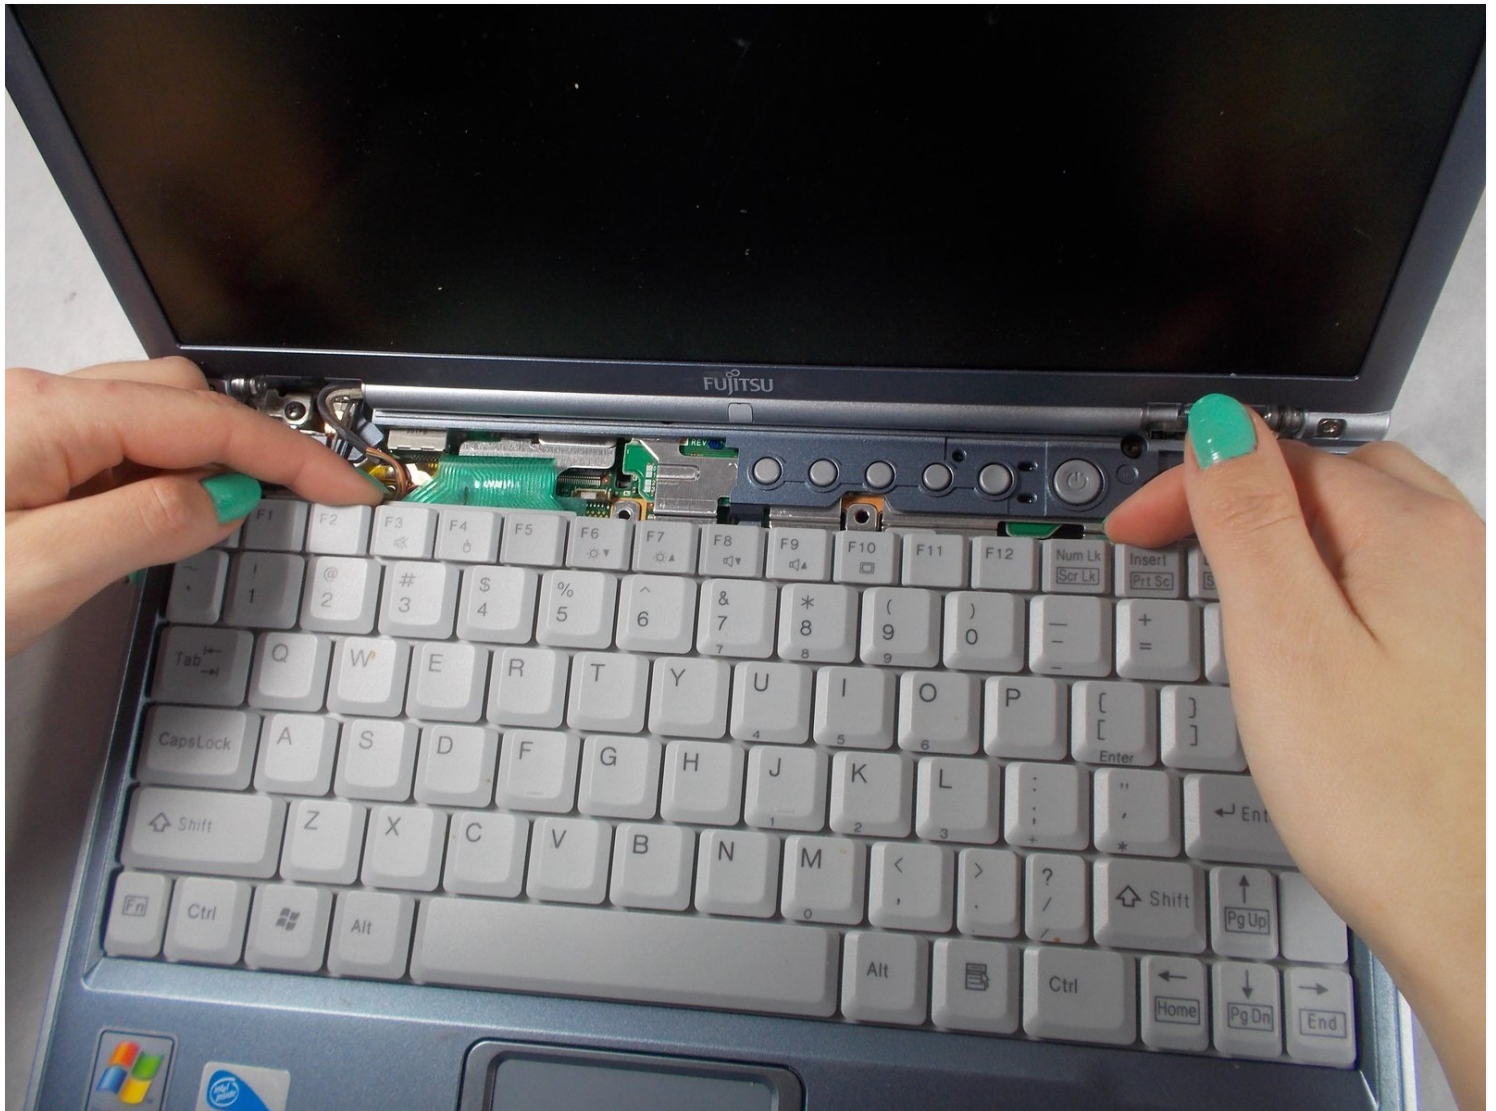

# INTRODUCTION

If the keyboard is not responding or inputs incorrectly then your keyboard may need to be replaced, this guide will show you how to remove the keyboard from the Fujitsu Lifebook S6120.

---


## TOOLS:

[Tweezers](#) (1)

[iFixit Opening Tool](#) (1)

---

## Step 1 — Battery

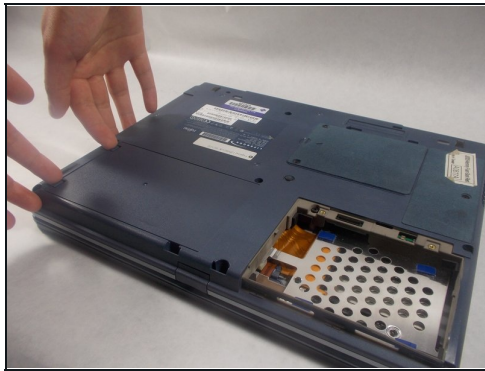

 To prevent injury, make sure the laptop is unplugged and turned off before removing the battery.

- Push the two tabs in towards the laptop.
- Lift the battery up and out from the frame of the laptop.

## Step 2 — Hinge Cover



- Use a plastic opening tool to lift the back of the hinge cover on the left and right sides of the computer.

## Step 3



- Lift the hinge cover.

⚠ The hinge cover is connected to the motherboard by a ribbon cable. To prevent damage, lift hinge cover slowly.



## Step 4



- Use the [tweezers](#) to disconnect the ribbon cable from the motherboard.

## Step 5



- With the tweezers detach hinge cover cables from the motherboard.
- Remove hinge cover.

## Step 6 — Keyboard



- Lift keyboard enough to show the ribbon cable.

⚠ The keyboard has a ribbon cable attached to the motherboard. Lift keyboard carefully to prevent damage.

## Step 7



- Use a plastic opening tool to release the ribbon cable from the motherboard.

To reassemble your device, follow these instructions in reverse order.