


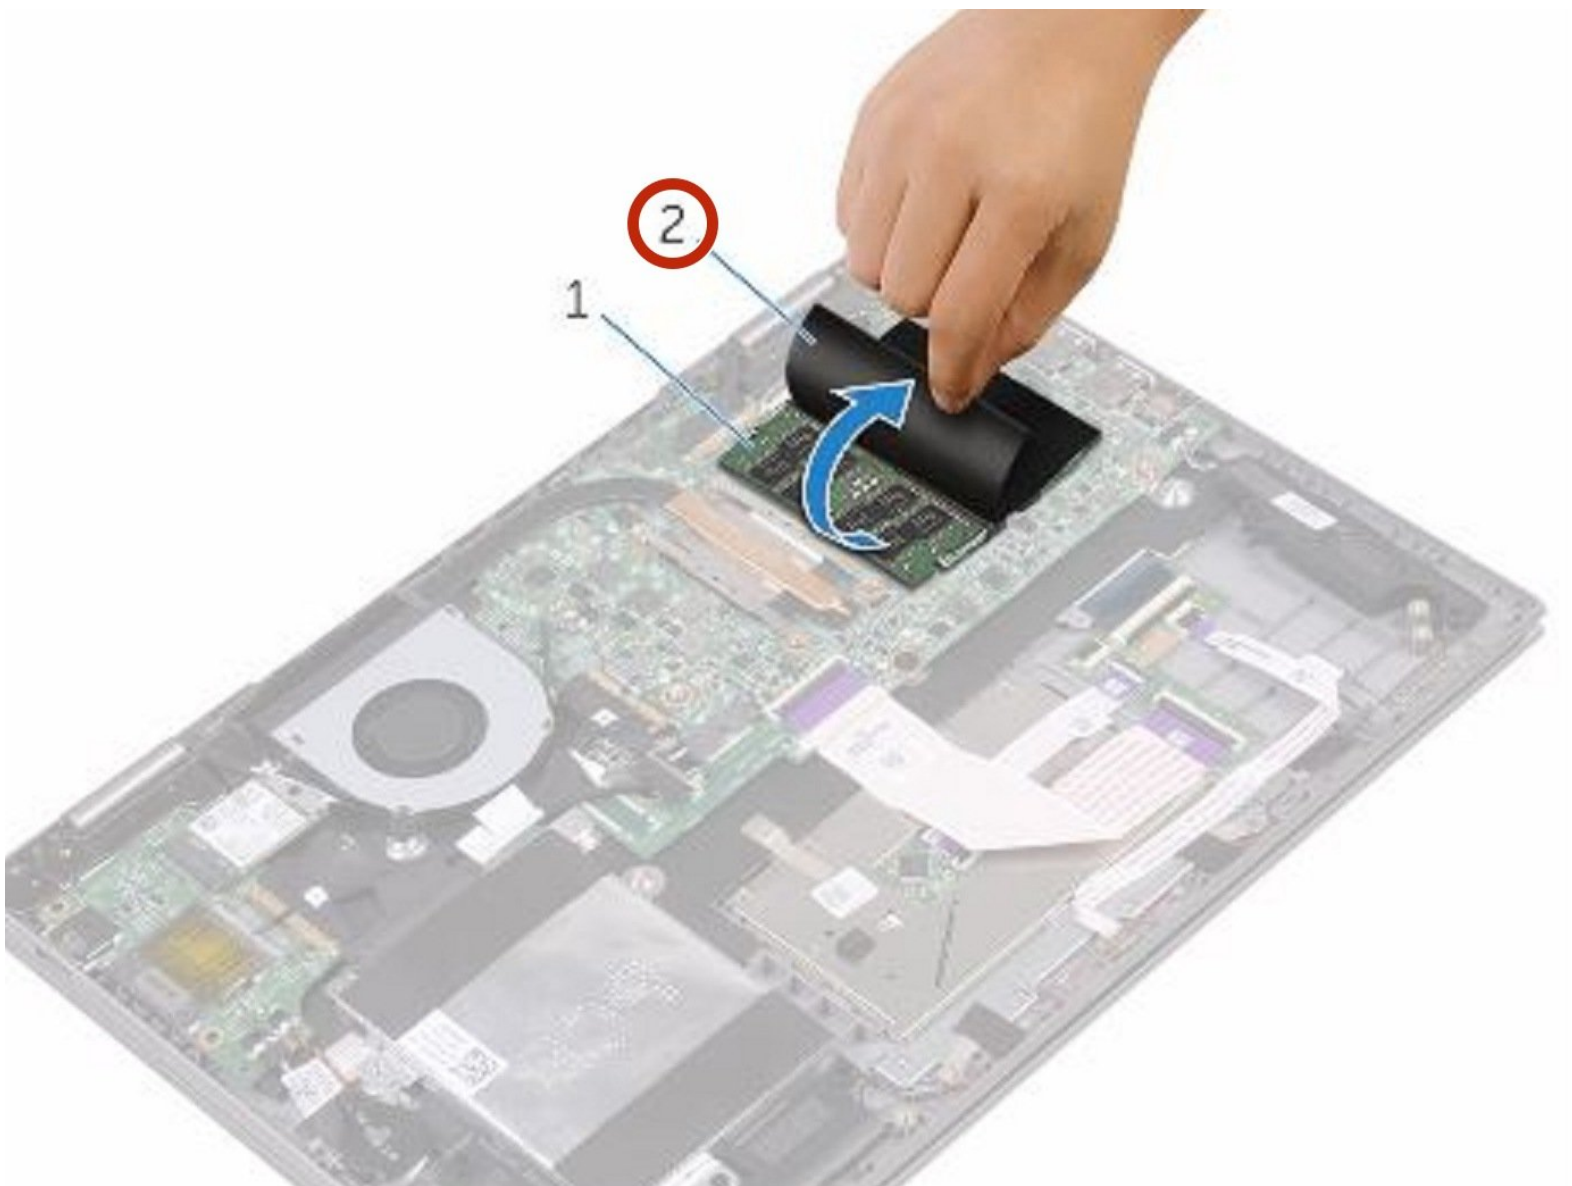

Dell Inspiron 13-5378 Memory Modules Replacement

Written By: Terrence15



INTRODUCTION


In this guide, we will show you how to remove and replace the Memory Modules.



TOOLS:

- [Essential Electronics Toolkit](#) (1)
-



Step 1 — Lifting the Mylar

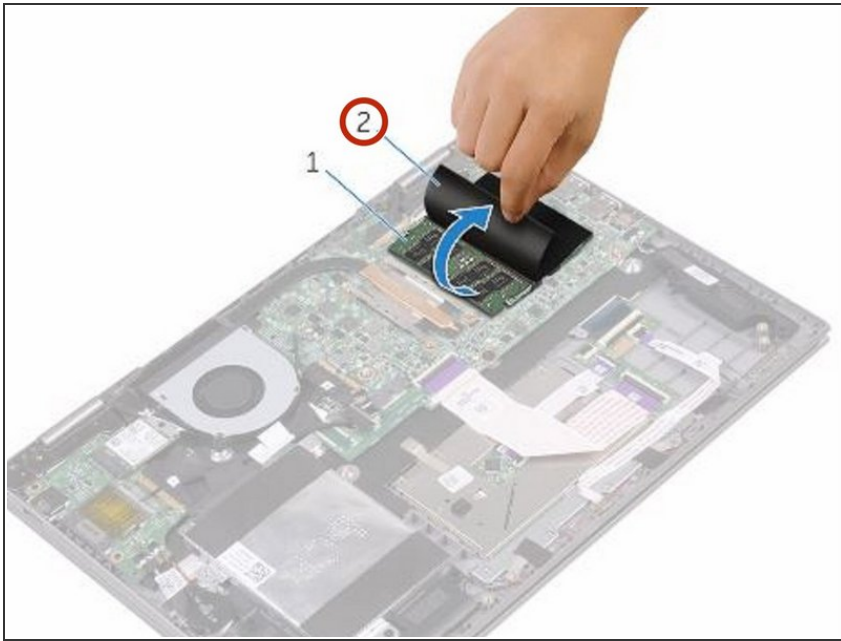

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Lift the Mylar to access the memory module.

Step 2 — Popping up the Memory Module

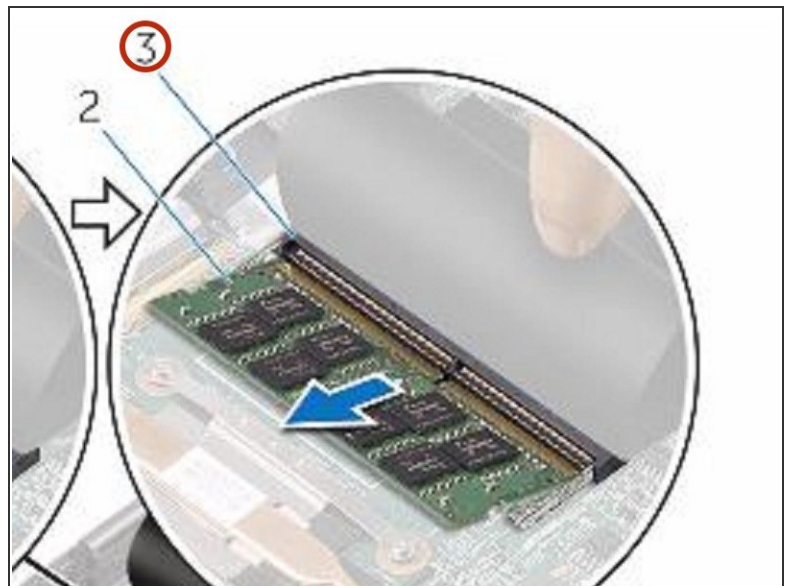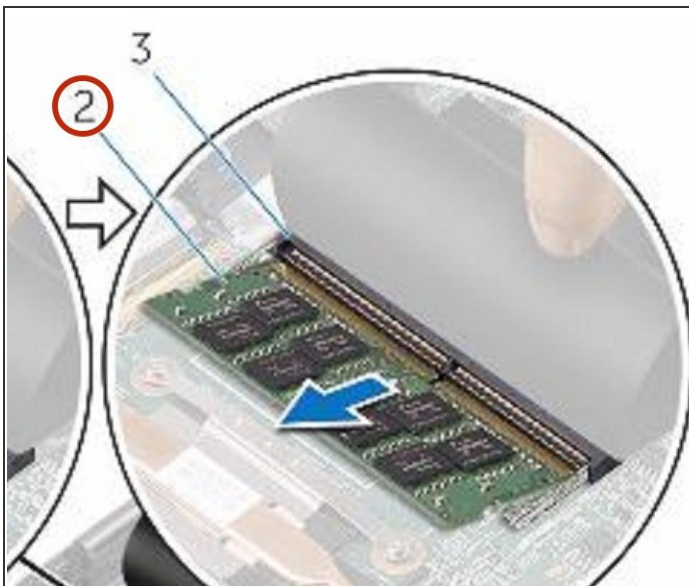


- Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.

Step 3 — Lifting the Mylar

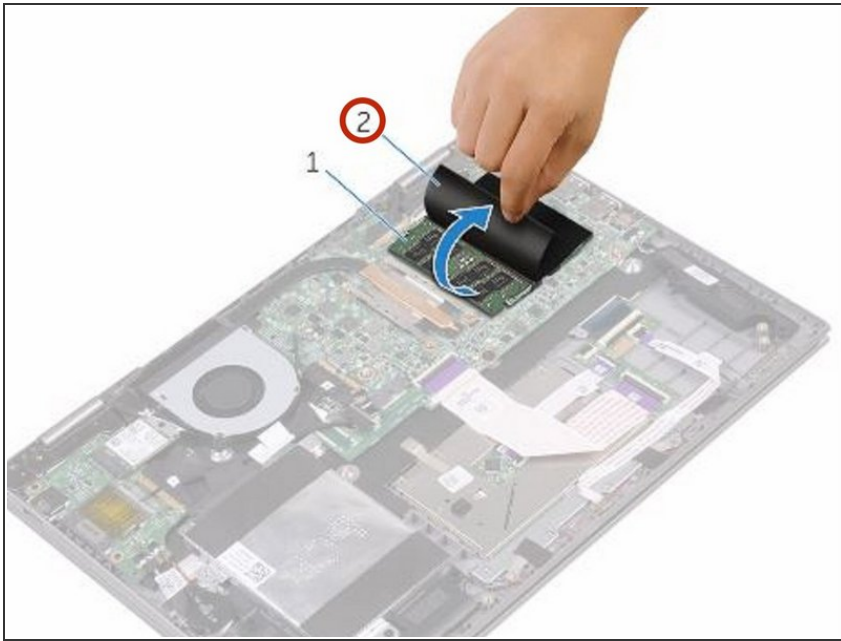

- Lift the Mylar to access the memory-module slot.

Step 4 — Align the Notch

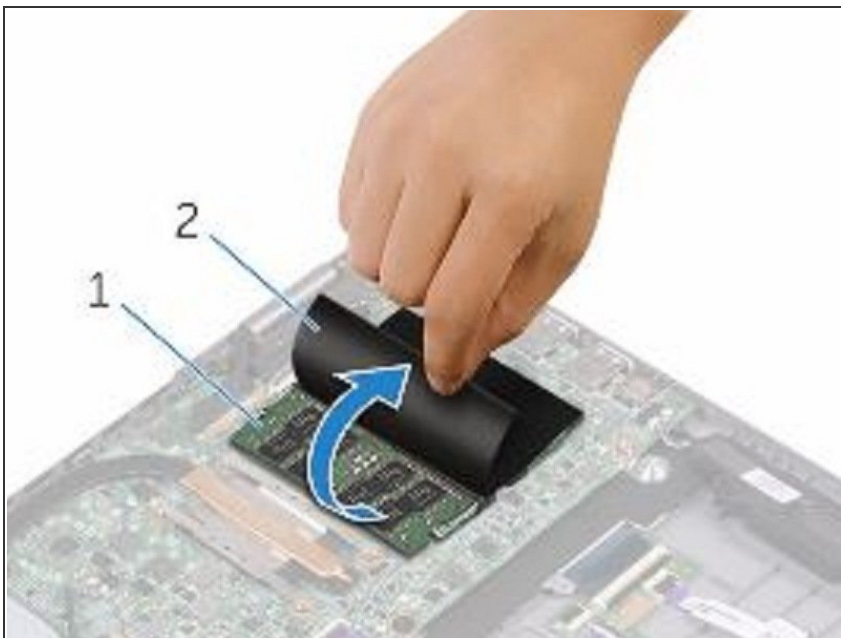

- Align the notch on the **NEW** memory module with the tab on the memory-module slot.