




Dell Inspiron 14 3468 Hard-Drive Replacement

Written By: darrius

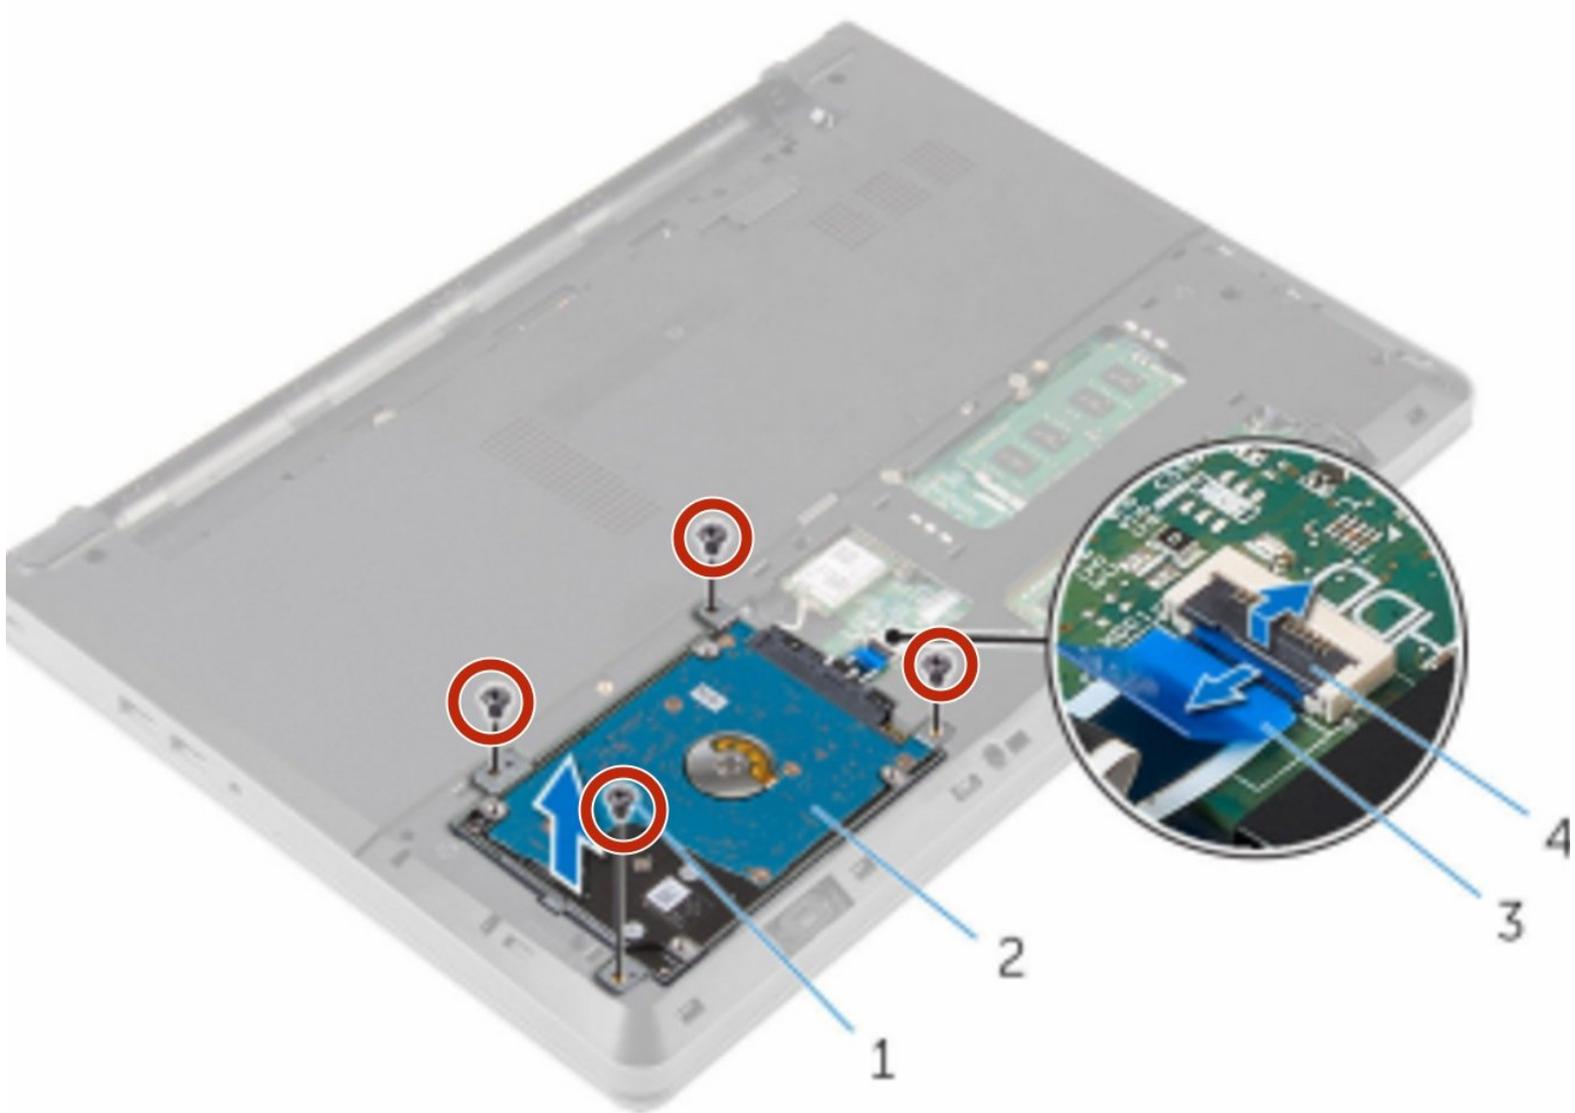


INTRODUCTION

How to remove and replace the Hard-Drive.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Removing the Screws

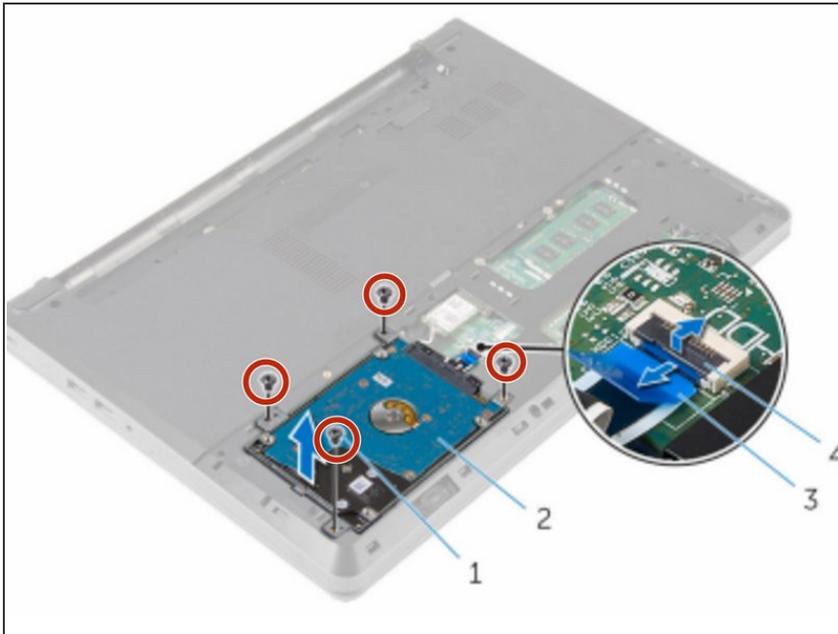


- Remove the screws that secure the hard-drive assembly to the computer base.

Step 2 — Disconnecting the Hard-Drive Cable

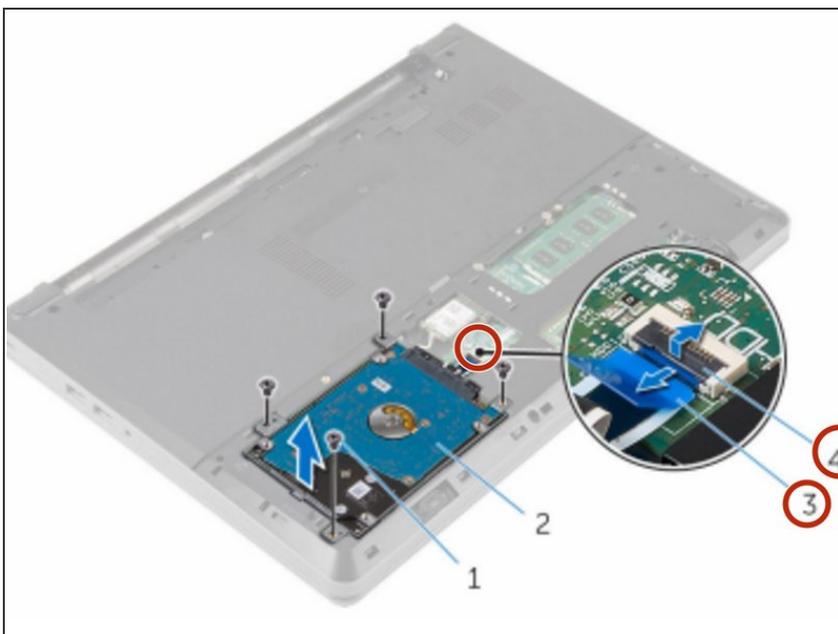


- Open the latch and disconnect the hard-drive cable from the system board.

Step 3 — Lifting the Hard-Drive

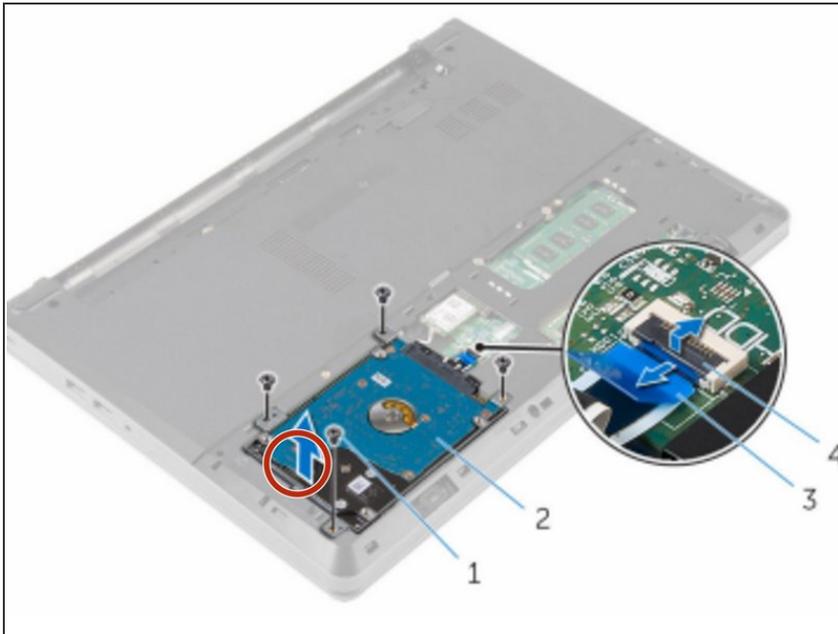


- Lift the hard-drive assembly off the computer base.

Step 4 — Removing the Screws

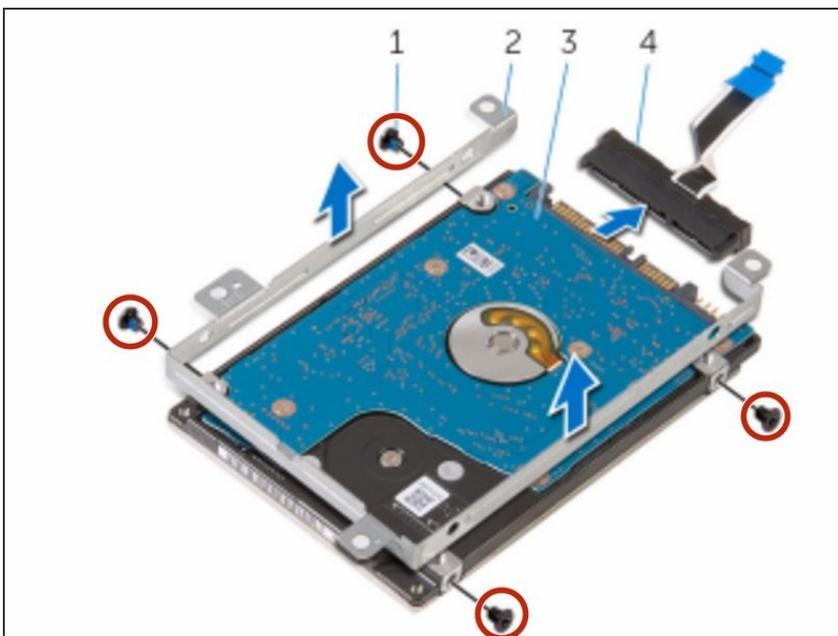


- Remove the screws that secure the hard-drive bracket to the hard drive.

Step 5 — Lifting the Hard-Drive Bracket

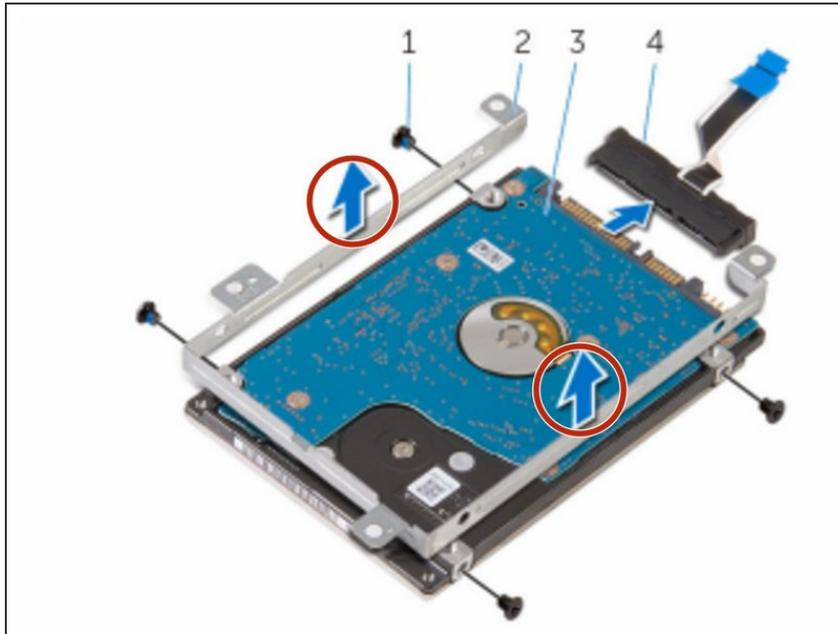


- Lift the hard-drive bracket off the hard drive.

Step 6 — Disconnecting the Interposer

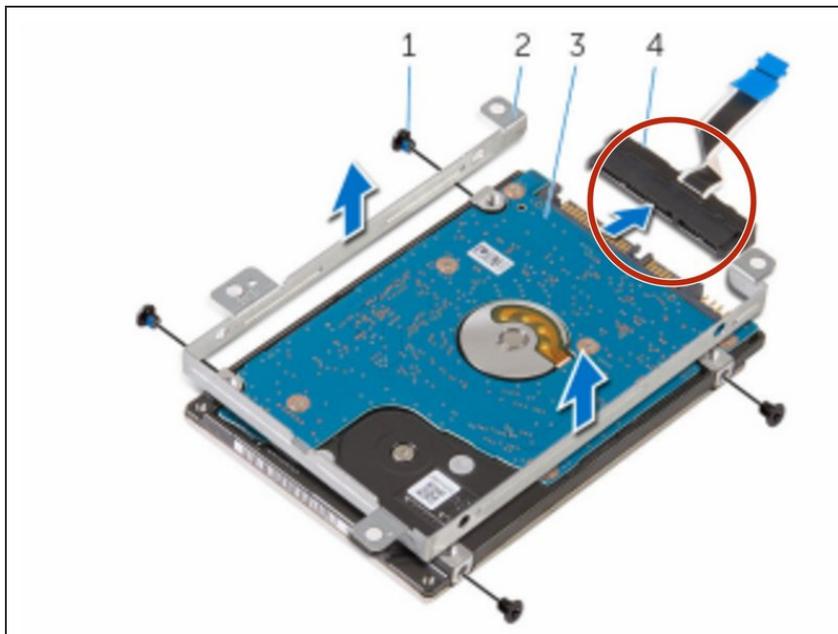


- Disconnect the interposer from the hard drive.

Step 7 — Connecting the Interposer

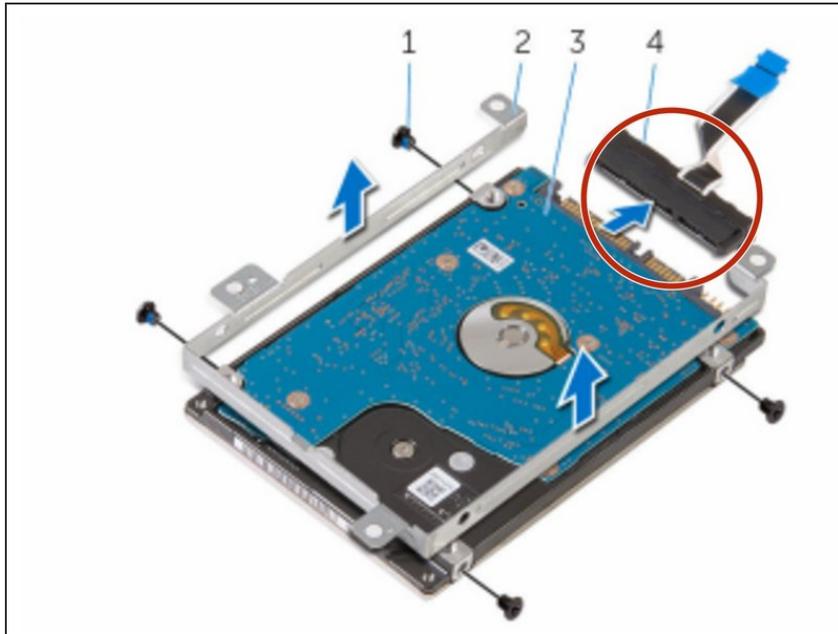


- Connect the interposer to the **NEW** hard drive.

Step 8 — Align the Screws

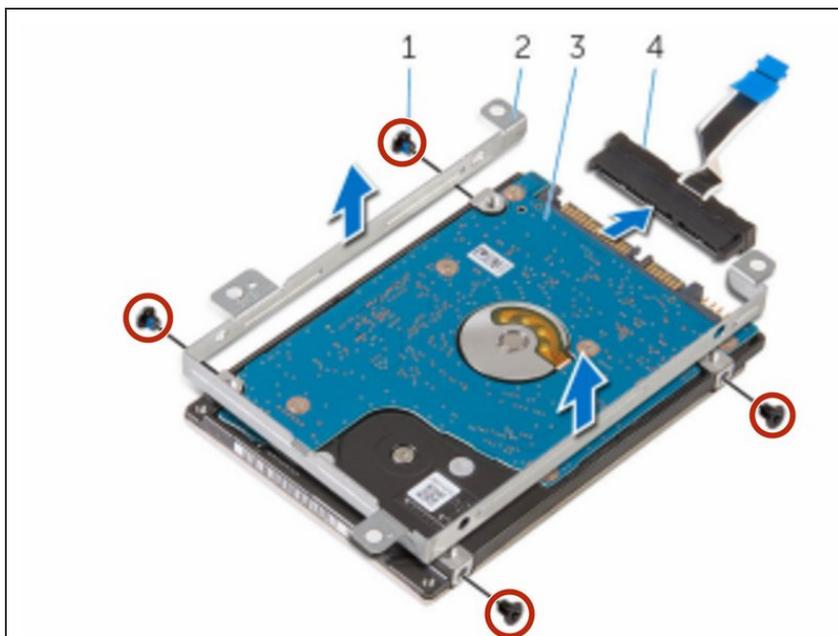


- Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.

Step 9 — Securing the Screws

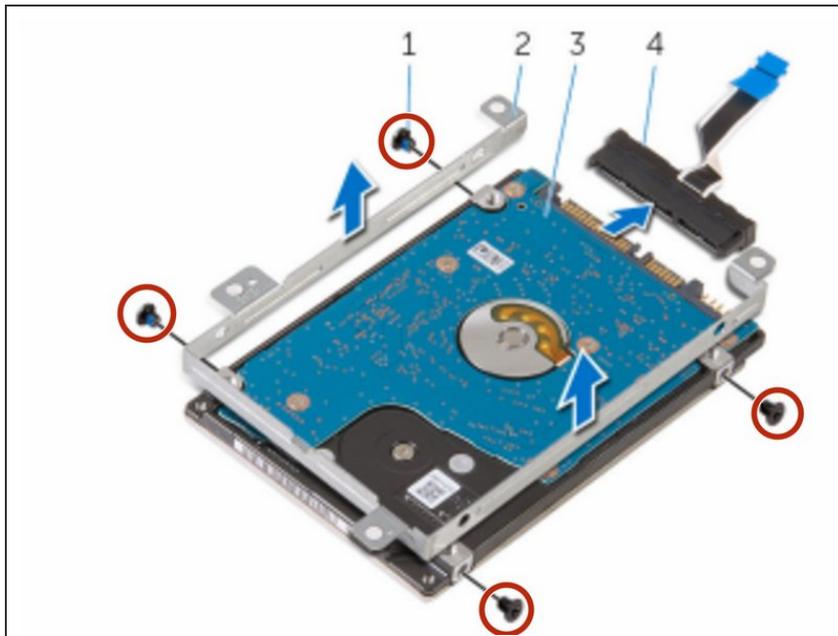


- Replace the screws that secure the hard-drive bracket to the hard drive.

Step 10 — Align the Screw Holes

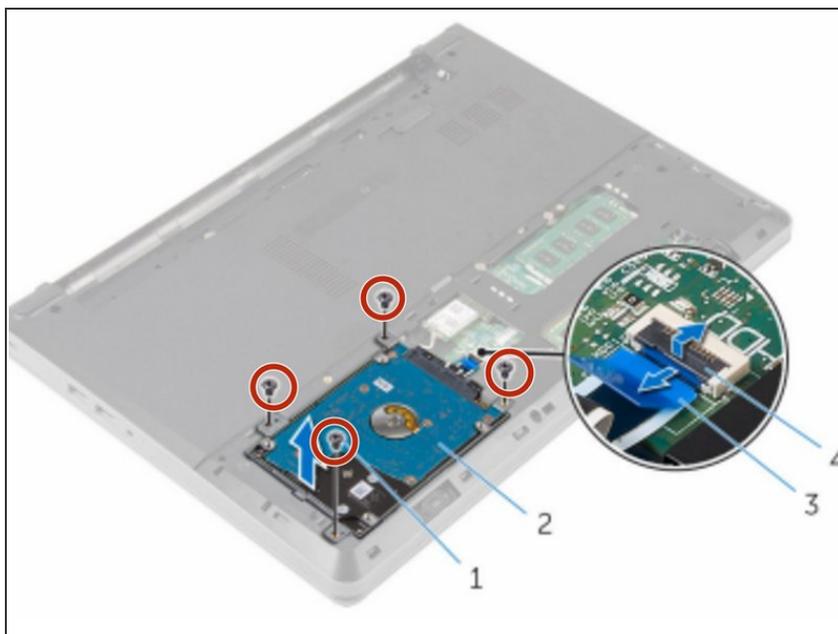


- Align the screw holes on the hard-drive assembly with the screw holes on the computer base.

Step 11 — Securing the Screws

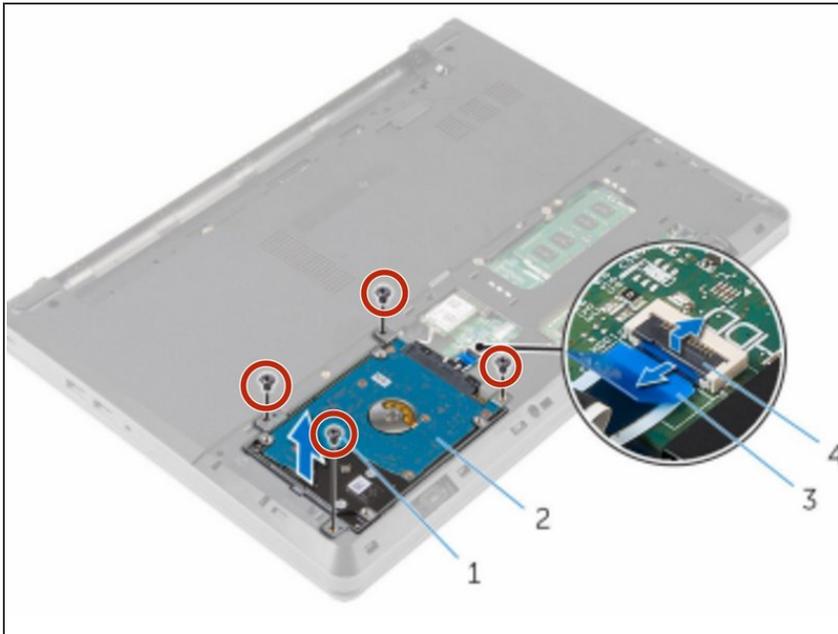

- Replace the screws that secure the hard-drive assembly to the computer base.

Step 12 — Sliding the Hard-Drive Cable

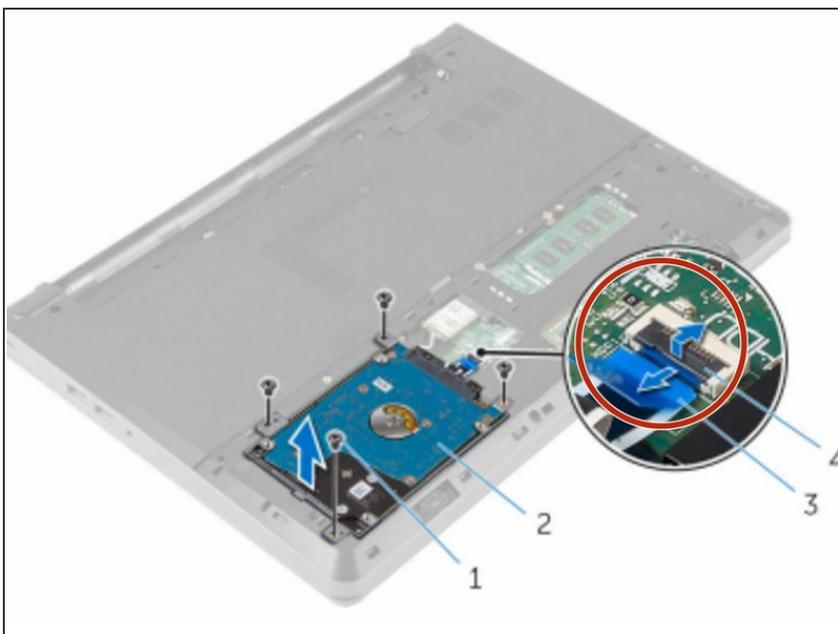

- Slide the hard-drive cable into the system board and close the latch to secure the cable.