



# AOC monitor Teardown

Written By: riley pacello






## TOOLS:

- [Essential Electronics Toolkit \(1\)](#)
-

## Step 1 — Unscrew the back of the monitor

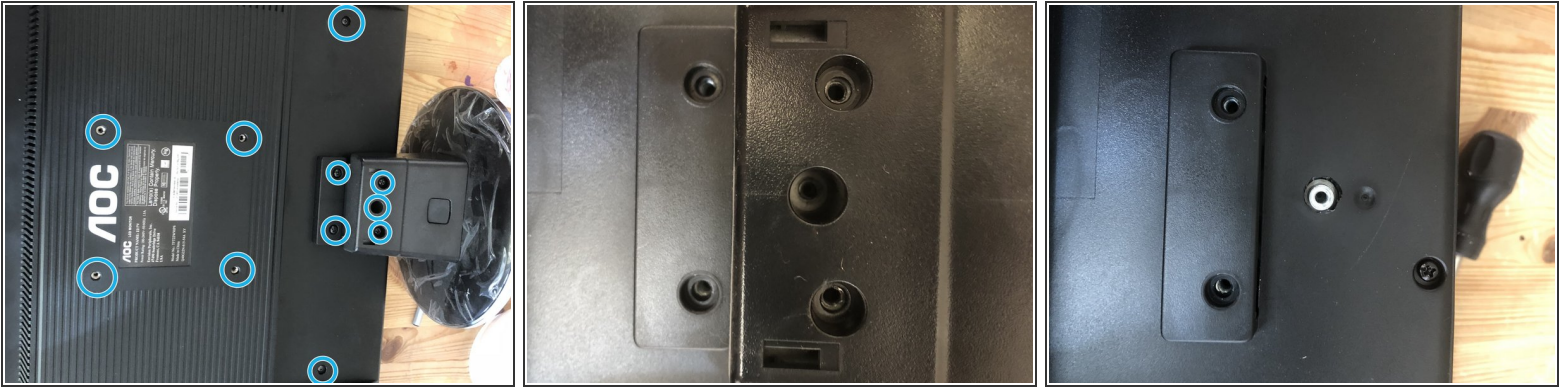

- There are 12 screws connecting the back of the monitor and the stand to the front, make sure to keep track of the screws and put them back in the correct spot.

## Step 2 — Open the Monitor



- The back of the monitor unclips with the help of a butter knife or any other somewhat stiff and thin object such as a spudger or razor.
- When you open the monitor there is a circuit board that controls the buttons on the monitor. There are two screws that connect this circuit to the back of the monitor. When you unscrew the circuit board, gently lift it off of the back of the monitor to remove it.




### Step 3 — Take of the Metal covers



- The First one is connected by four screws in every corner. The second bigger one is connected by 9 hooks like on a picture frame, bend them back to free the cover. For the second one you also have to unscrew the ports for the plugs, screw them to the left to take them off. Once you have lifted the tabs and unscrewed the ports, just lift it off

### Step 4 — Take off the Circuit boards

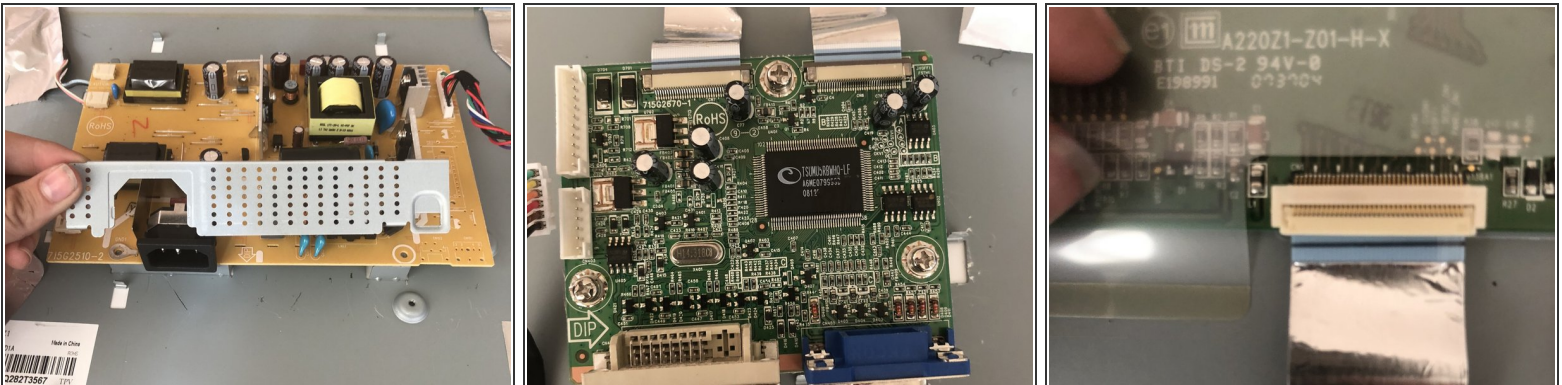

- To remove this board unhook the four wires to the left and then unscrew the four screws on the board.
- To remove the second board, unscrew the three screws and the unhook the two wires on the other circuit board to remove it.

## Step 5 — Separate the layers of the monitor



- The last step in to separate the layers of the screen. Simply pull the monitor of the metal and you will automatically see the layers of the screen.