



Makita GA4030K CARBON BRUSH Replacement

EDGE PROJECT

Written By: leo





TOOLS:


- [Essential Electronics Toolkit](#) (1)
-

Step 1 — CARBON BRUSH




- First, remove the single black screw from the end of the handle

Step 2

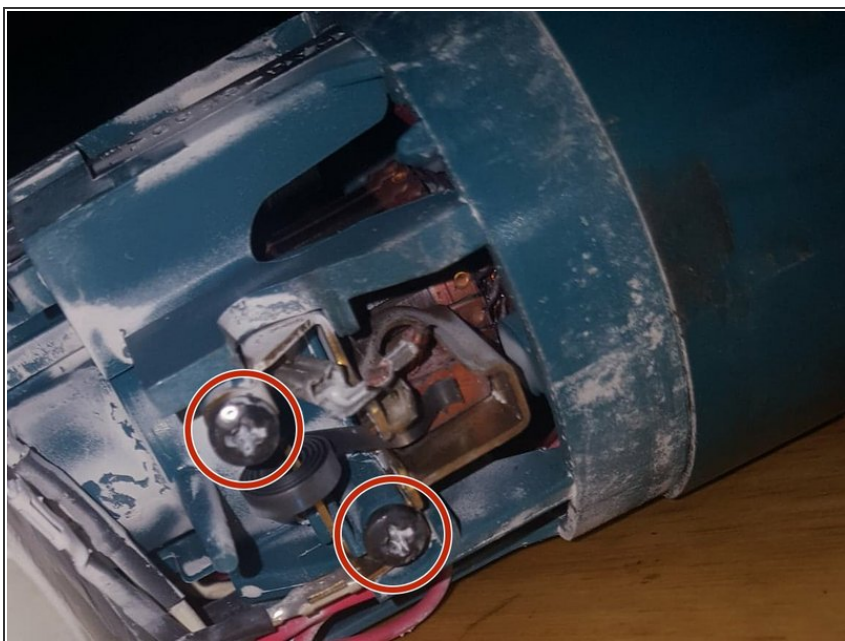


- Separate the handle by pulling the two ends apart.
- Remove the two screws.

Step 3

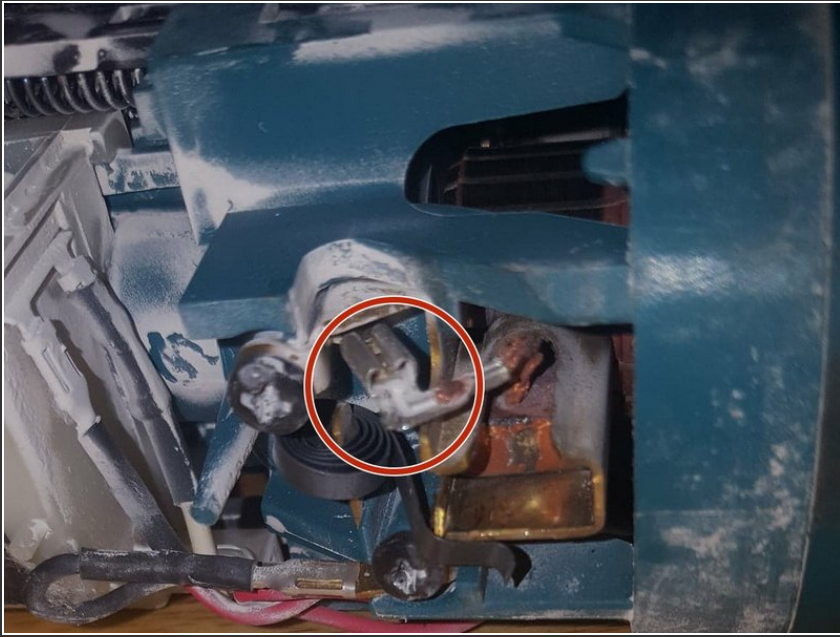

- Remove the carbon, and unclip the wires connected to it.

Step 4

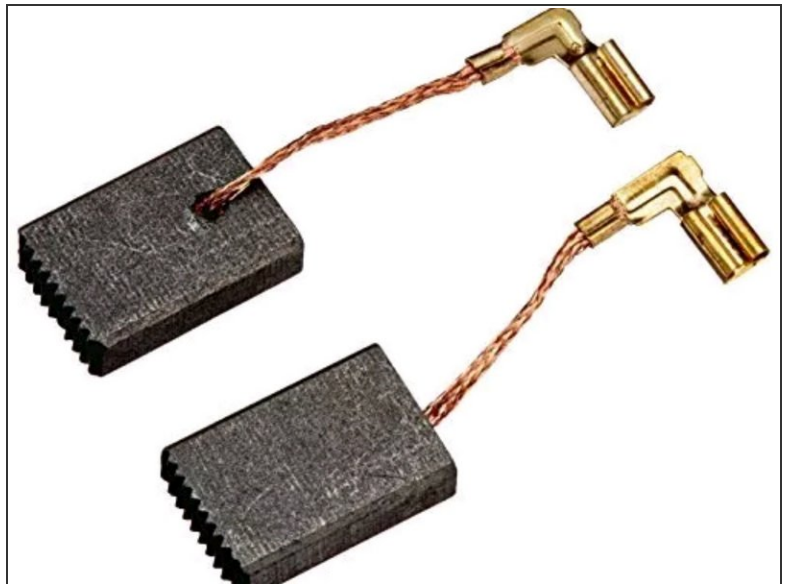

- Old vs. new carbon.

To reassemble your device, follow these instructions in reverse order.