



Toshiba Satellite C55-a5310 Keyboard Replacement

How to replace a Toshiba Satellite C55-a5310 keyboard.

Written By: Kari Rodgers





TOOLS:


- [iFixit Opening Tools](#) (1)
- [JIS #000 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery



- Push the left tab with your left hand.
- Then push the right tab with your right hand.
- While your right hand is still pushing, remove the battery with your left hand.

Step 2 — Keyboard

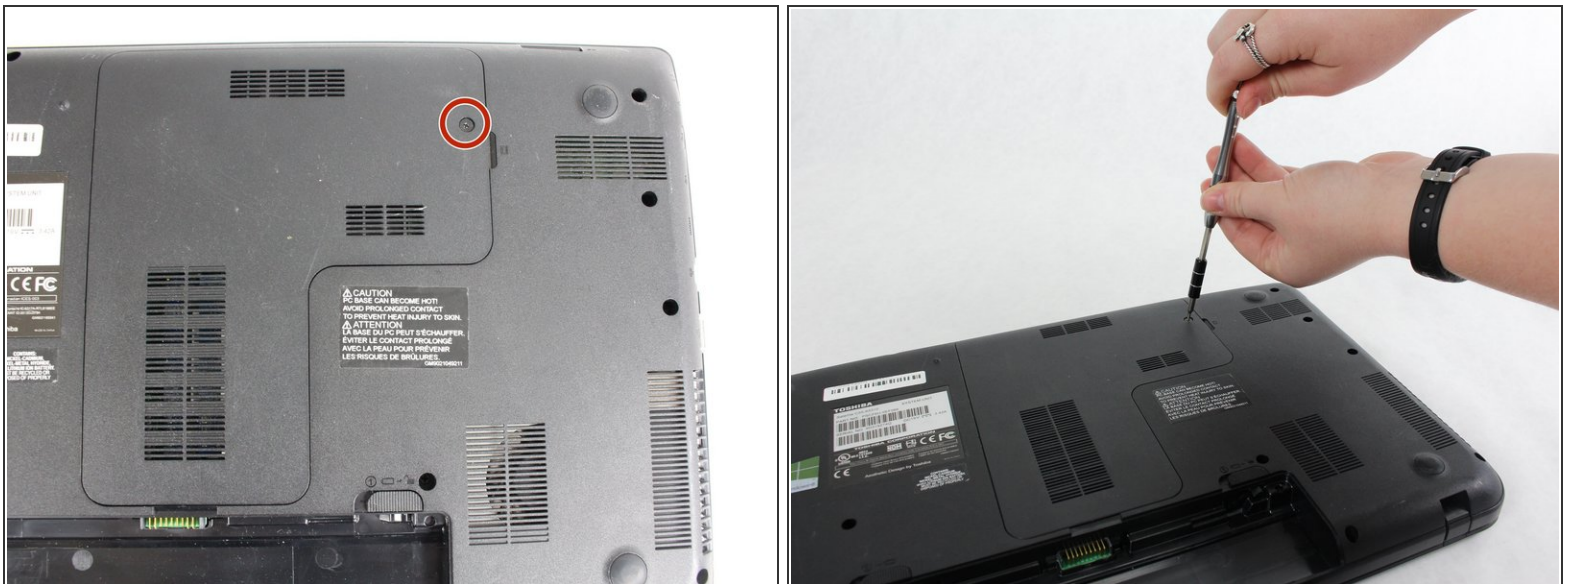

- Remove this screw with a JIS #000 screwdriver.
- ⓘ This screw does not come out all the way.

Step 3



- Remove the panel with the plastic opening tool. Make sure you lift it on all four sides.

Step 4



- Using the JIS #000 screwdriver, remove the .5mm screw.

Step 5



- Use the plastic opening tool to remove the keyboard from the laptop.

Step 6



- Once keyboard is popped out, use a nylon spudger to undo the ribbon or flap that attaches the back of the keyboard to the inside base of the laptop.

To reassemble your device, follow these instructions in reverse order.