



# Dell Vostro 1700 Keyboard Replacement

Dell Vostro 1700 Keyboard will sometimes stop responding. This guide will show you how to replace a keyboard that has stopped working or with broken keys.

Written By: Nathan Valm



---

## INTRODUCTION

This quick and easy guide will show you how to remove and replace the keyboard on a Dell Vostro 1700 Laptop.


---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

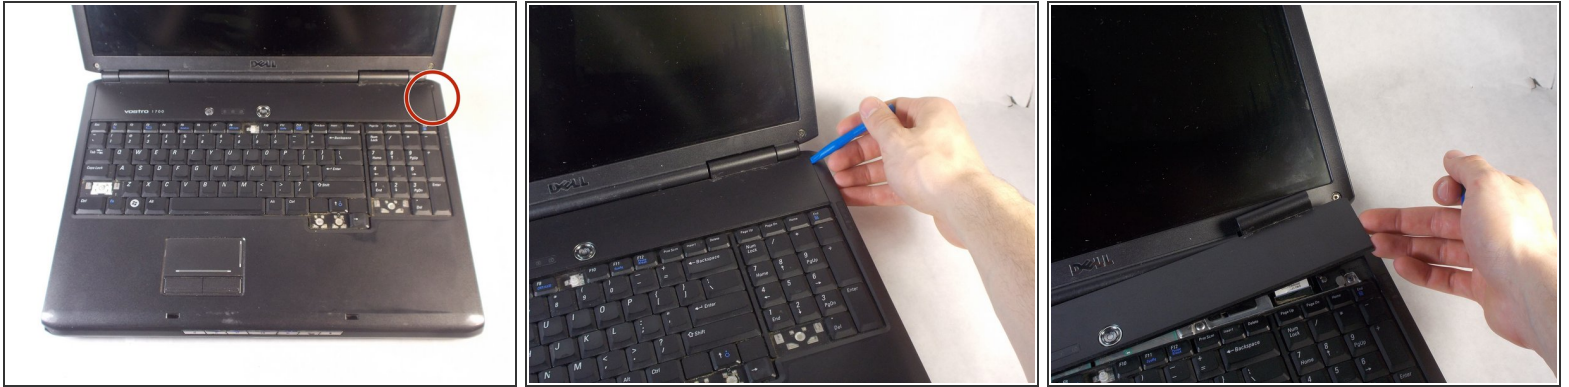

- Use the Plastic Opening Tools to pry off the tab located on the right side of the top face plate.


## Step 2



- Lift the plate off the laptop from right to left.
- Pull the plate out and remove it.




## Step 3

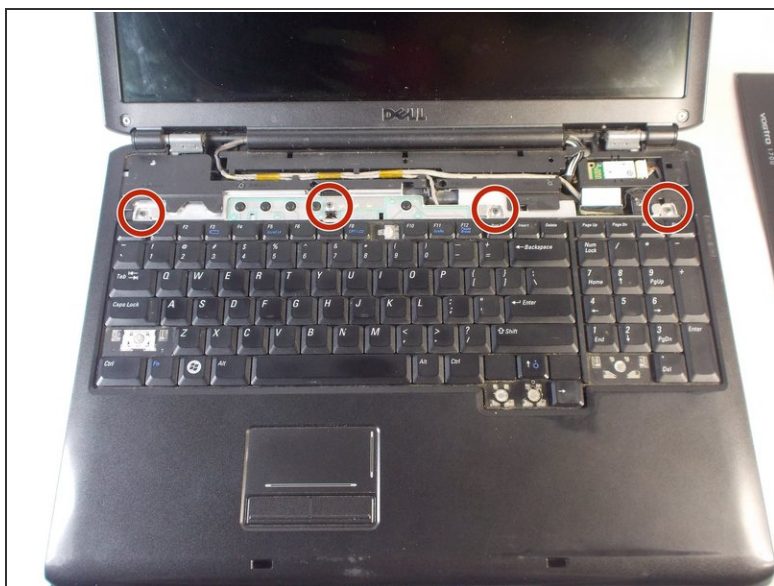


- Remove the four 3mm Phillips #0 screws.

## Step 4

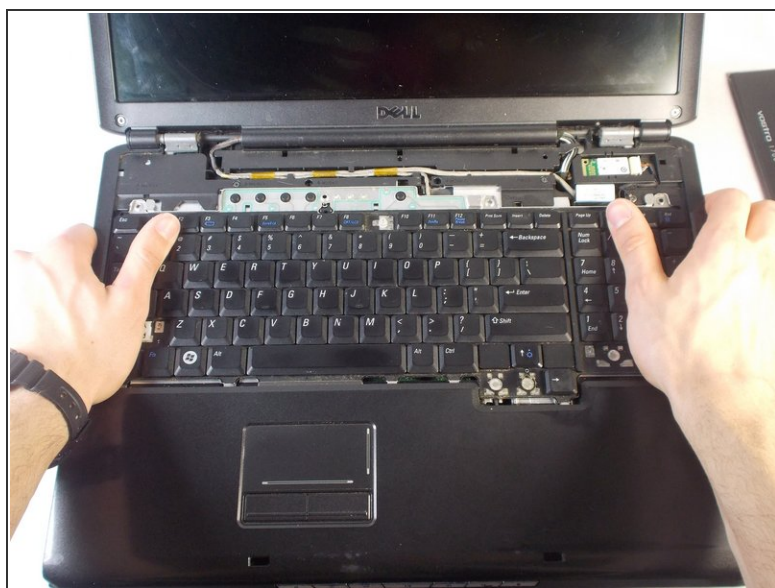

- Grasp the laptop with both hands as shown.
- Push the keyboard upwards with your thumbs to disconnect it.

## Step 5

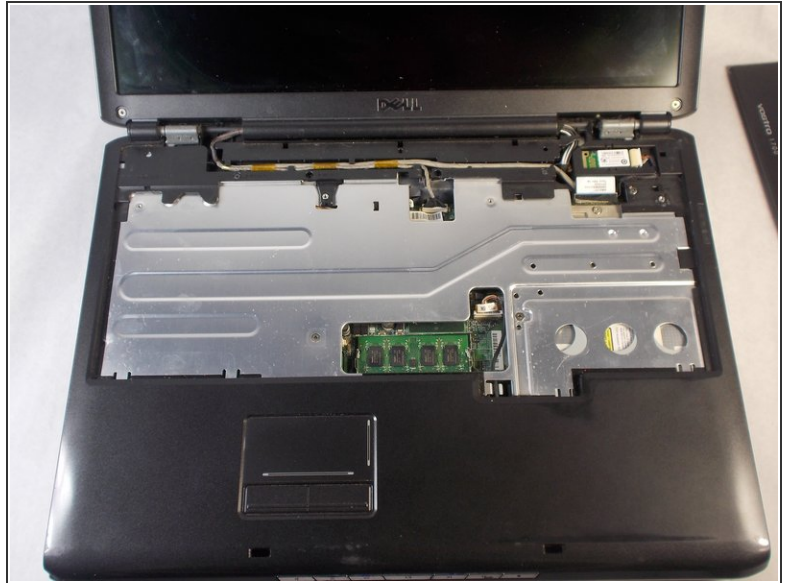

- Lift the keyboard from the laptop and remove it.

⚠ Ensure the connector is fully disconnected before lifting the keyboard out.

To reassemble your device, follow these instructions in reverse order.