




Dell Inspiron 13z 5323 Display Assembly Replacement

Written By: Terrence15

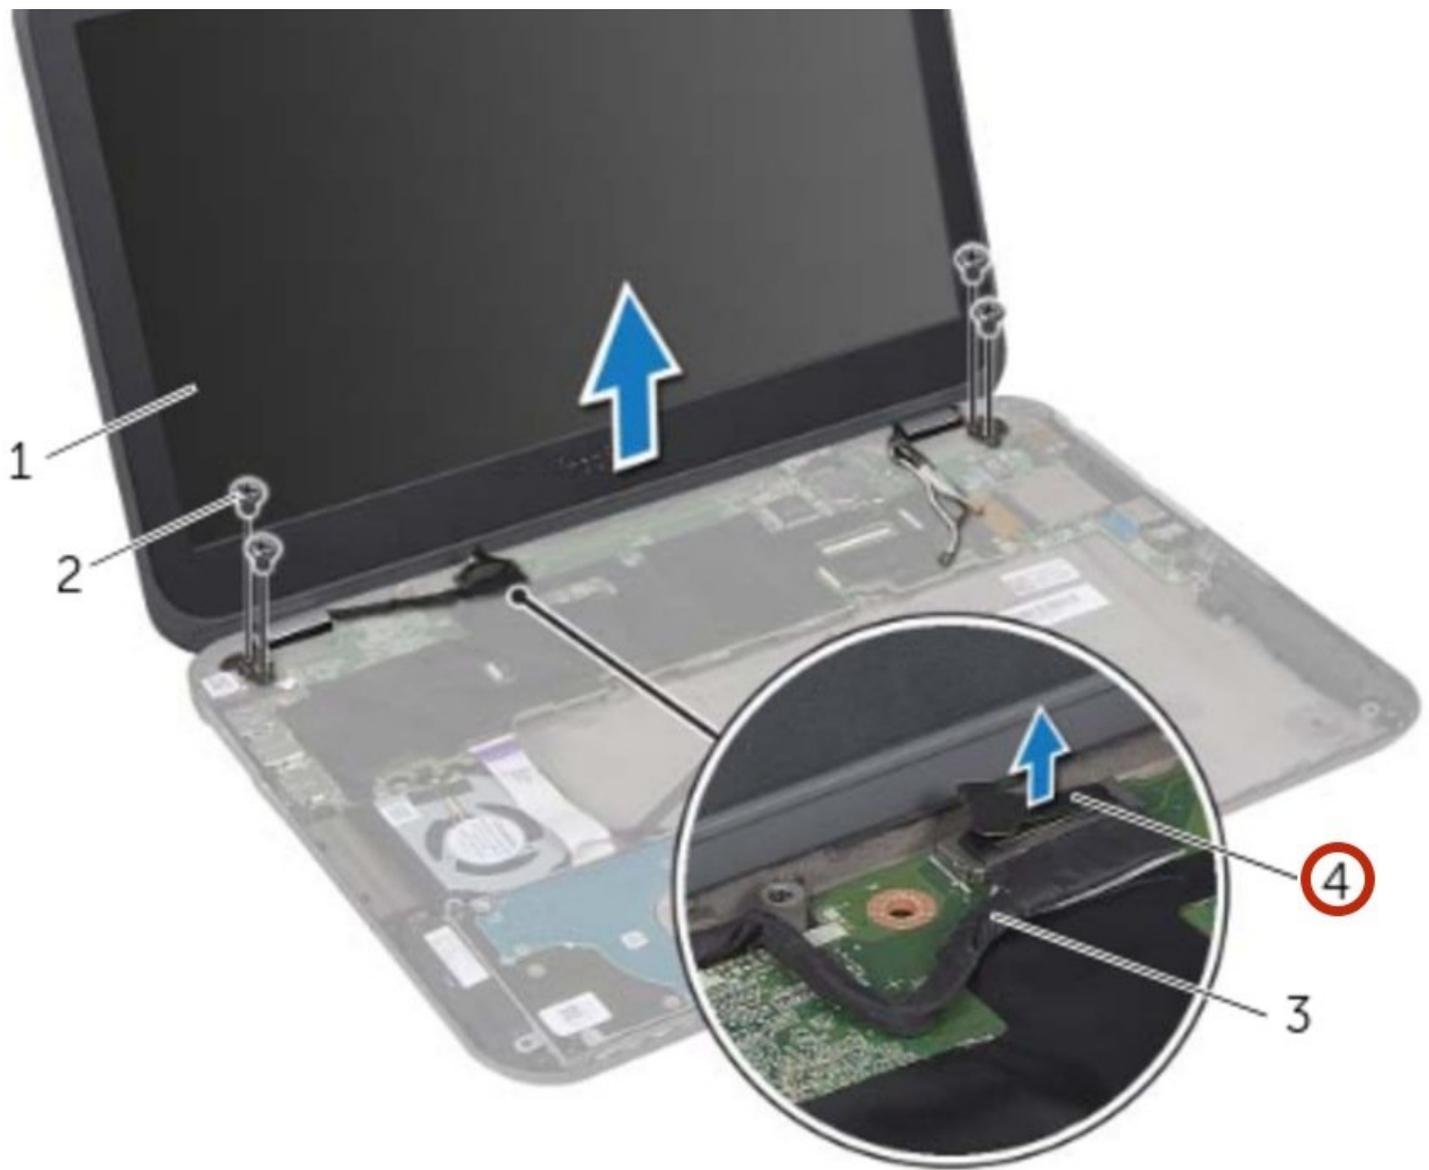


INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Noting the Antenna Cables

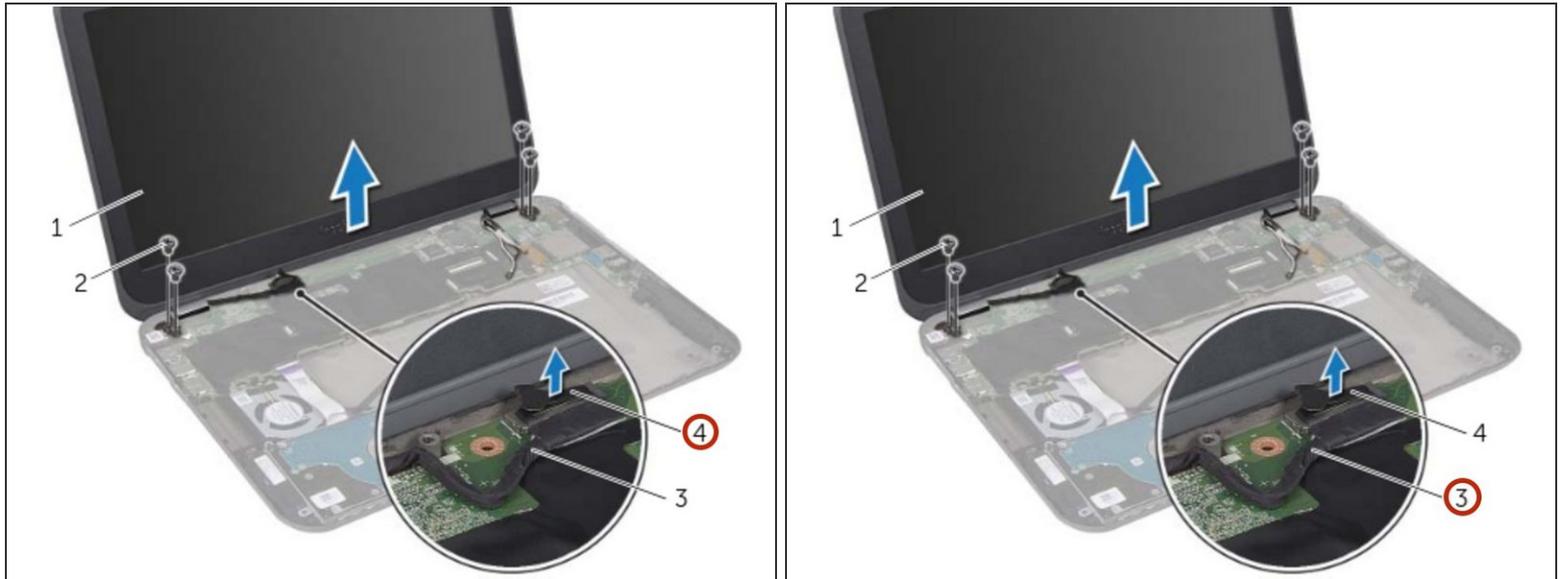

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Pull the pull-tab to disconnect the display cable from the system-board connector.

Step 2 — Remove the Screws

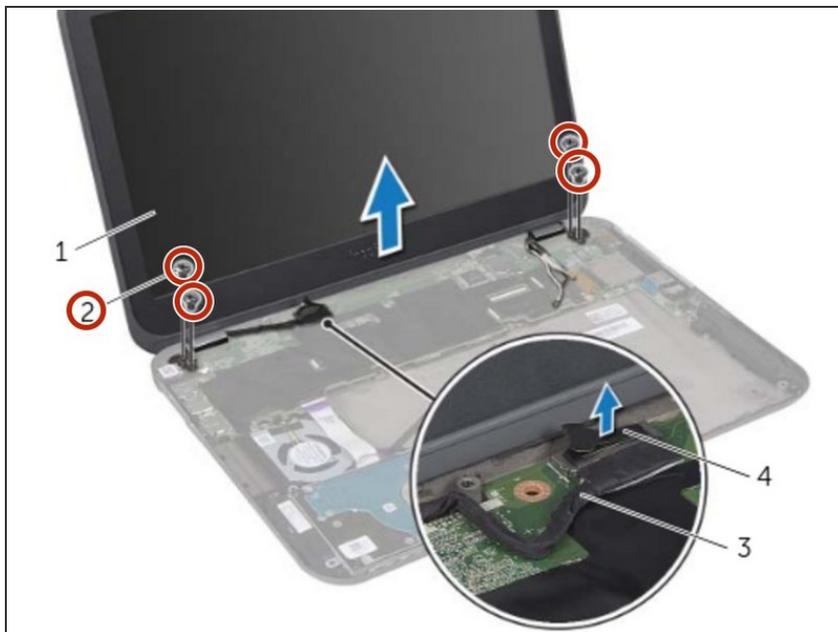


- Remove the screws that secure the display assembly to the computer base.

Step 3 — Lifting the Display Assembly



- Lift the display assembly off the computer base.

Step 4 — Replace the Screws

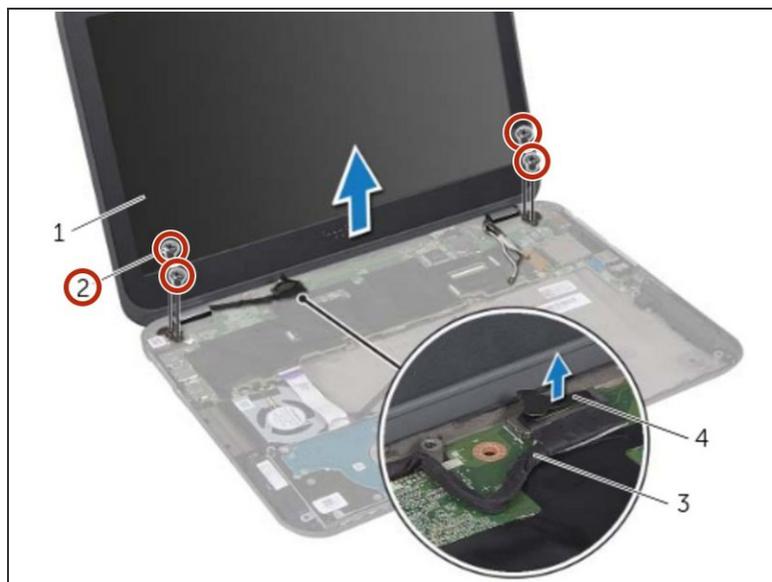

- Place the **NEW** display assembly in position and replace the screws that secure the display assembly to the computer base.

Step 5 — Connecting the Display Cable



- Connect the display cable to the system-board connector.