



# T-Mobile Sparq Battery Replacement

A guide detailing how to replace the battery in your T-Mobile Sparq (or Alcatel 606a).

Written By: LeAnn Lewis



## INTRODUCTION

This guide will show you how to replace the battery in your T-Mobile Sparq or (Alcatel 606a). This is a fairly straight forward procedure that involves removing the back cover of the phone, removing the old battery and installing a new one.



### TOOLS:

- [Spudger](#) (1)



### PARTS:


- [Alcatel Battery](#) (1)

## Step 1 — Battery



- If you're looking at your phone from the front, feel the upper left hand rounded corner. You'll notice a thin opening between the front of the phone and the back cover.
- Flip the phone over (as in the picture) and use a spudger or your finger to gently separate the back cover from the phone.

## Step 2

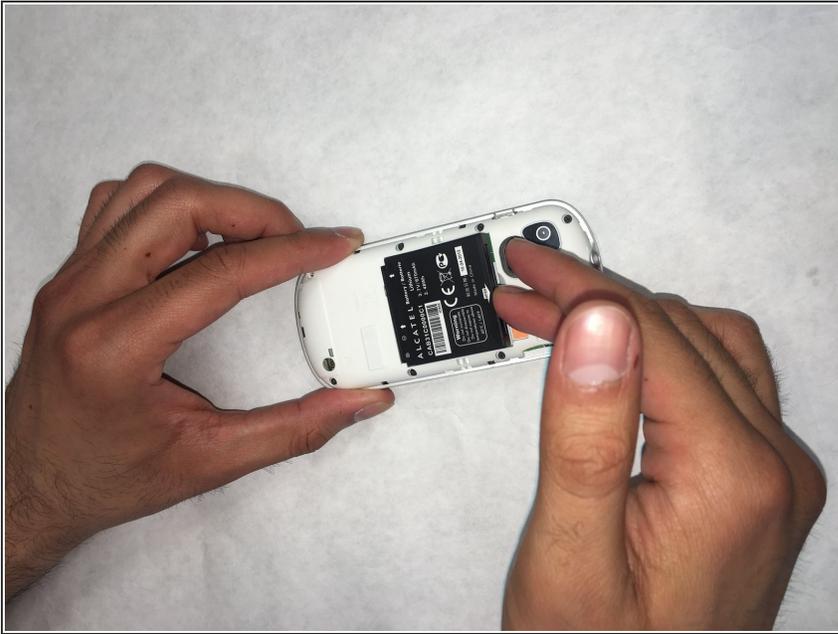

- Once the back cover has been removed you can see a small groove above the center of the battery. The arrow on the battery is pointing to it.
- Insert the tip of your finger into the groove and gently lift the battery from the case.

To reassemble your device, follow these instructions in reverse order.