


Dell Precision M6700 Memory Module Replacement

Written By: Johnathan Hammond



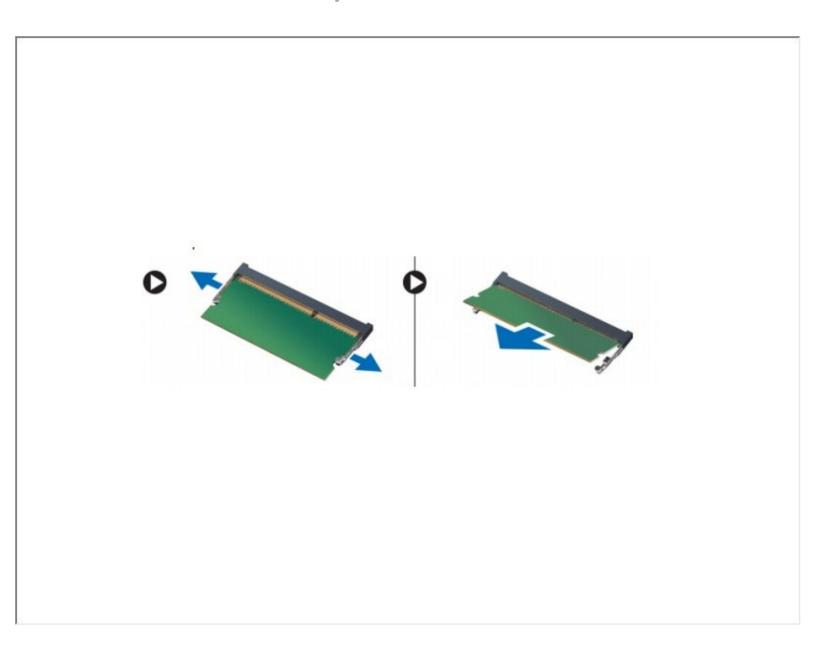

Phillips #0 Screwdriver (1)


Step 1 — Battery





- Slide the release latch to unlock the battery.
 - Flip and remove the battery from the computer.


Step 2 — Base Cover

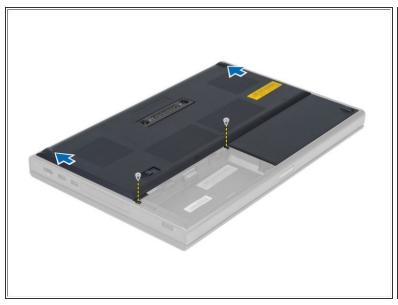



- Remove the screws that secure the base cover to the computer. Press the rubber tabs towards the rear of the computer to disengage the base cover.
 - Flip and remove the base cover from the computer

Step 3 — **Memory Module**

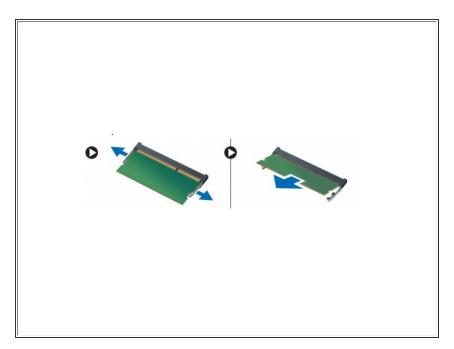

 Pry the retention clips away from the memory until it pops up. Lift the memory and remove it from the computer.

To reassemble your device, follow these instructions in reverse order.