


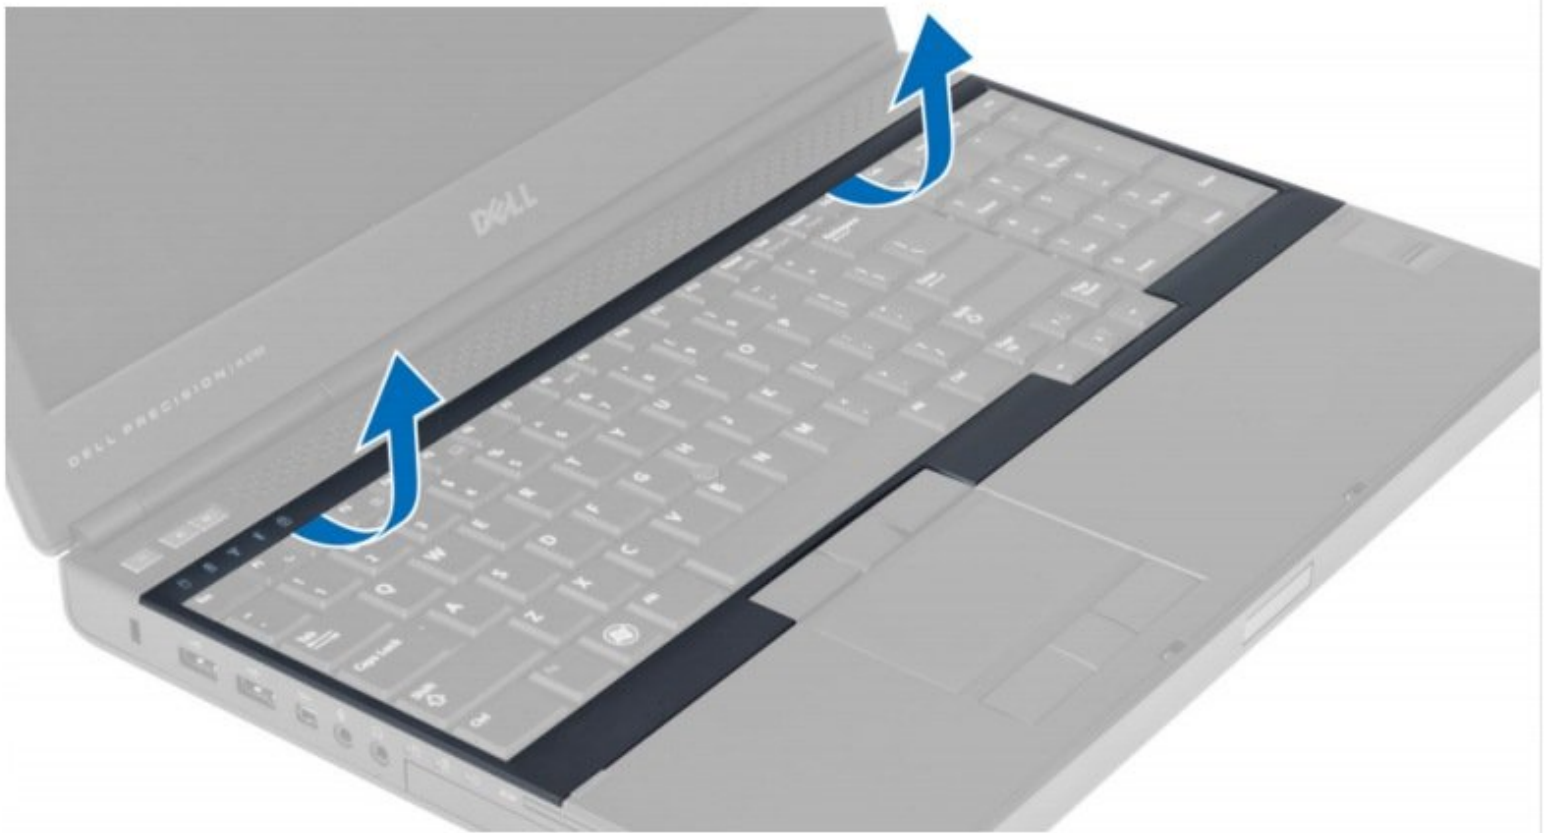

Dell Precision M4700 Keyboard Trim Replacement

Written By: Johnathan Hammond





TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Slide the release latch to unlock the battery.
- Flip and remove the battery from the computer.

Step 2 — Base Cover

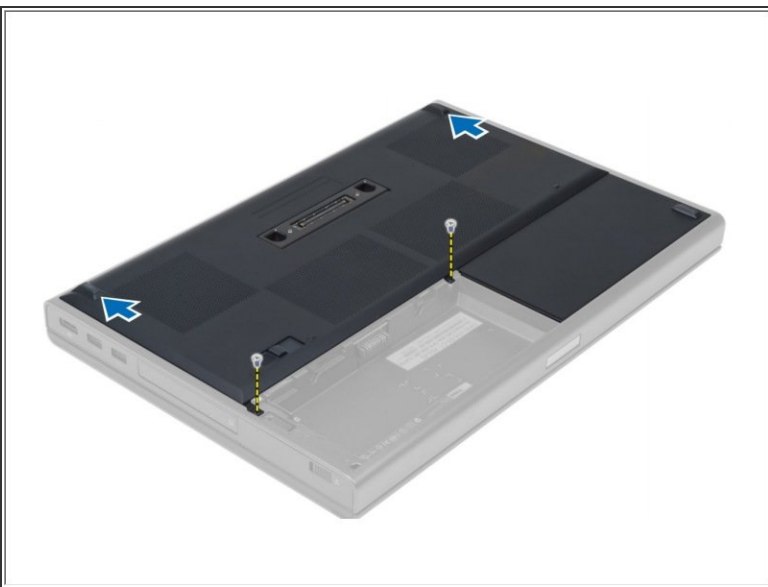

- Remove the screws that secure the base cover to the computer. Press the rubber tabs towards the rear of the computer to disengage the base cover.
- Flip and remove the base cover from the computer.

Step 3 — Keyboard Trim

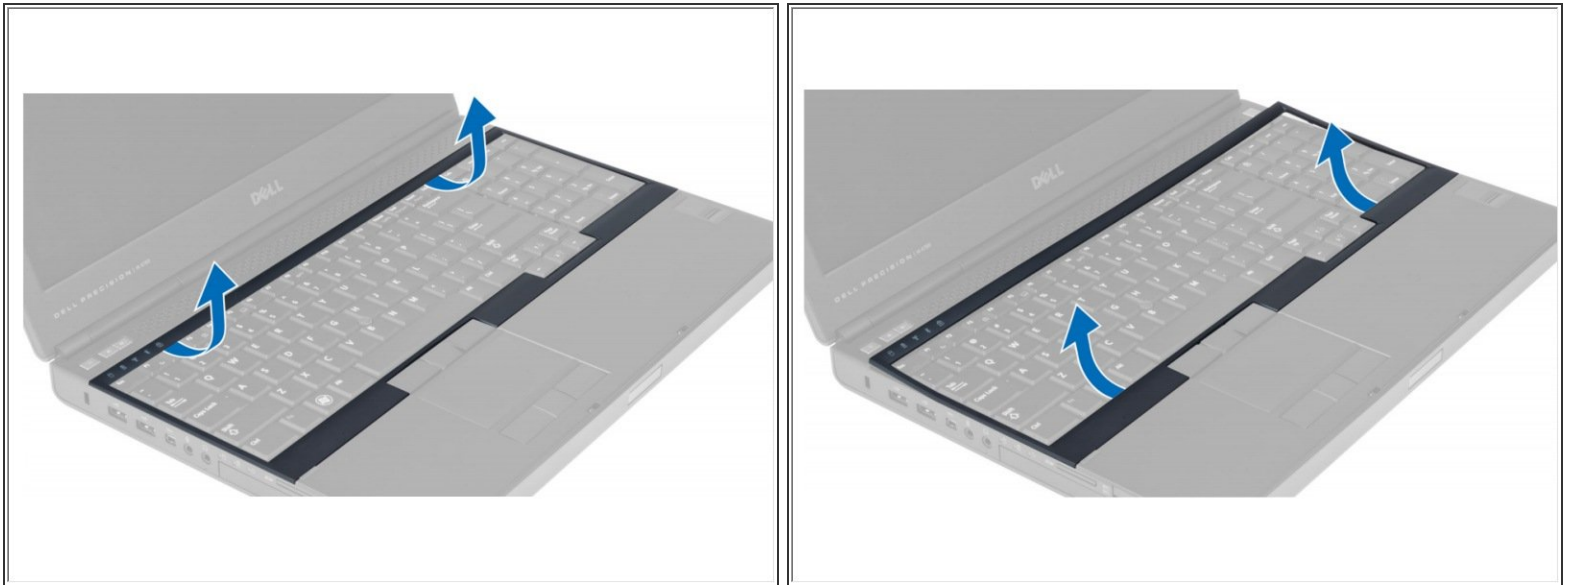

- Pry up the keyboard trim starting from the top-inner edge.
- Pry up the bottom edge of the keyboard trim from the top-inner edge.

To reassemble your device, follow these instructions in reverse order.