




# Dell Precision M4400 Base Cover Replacement

Written By: Johnathan Hammond




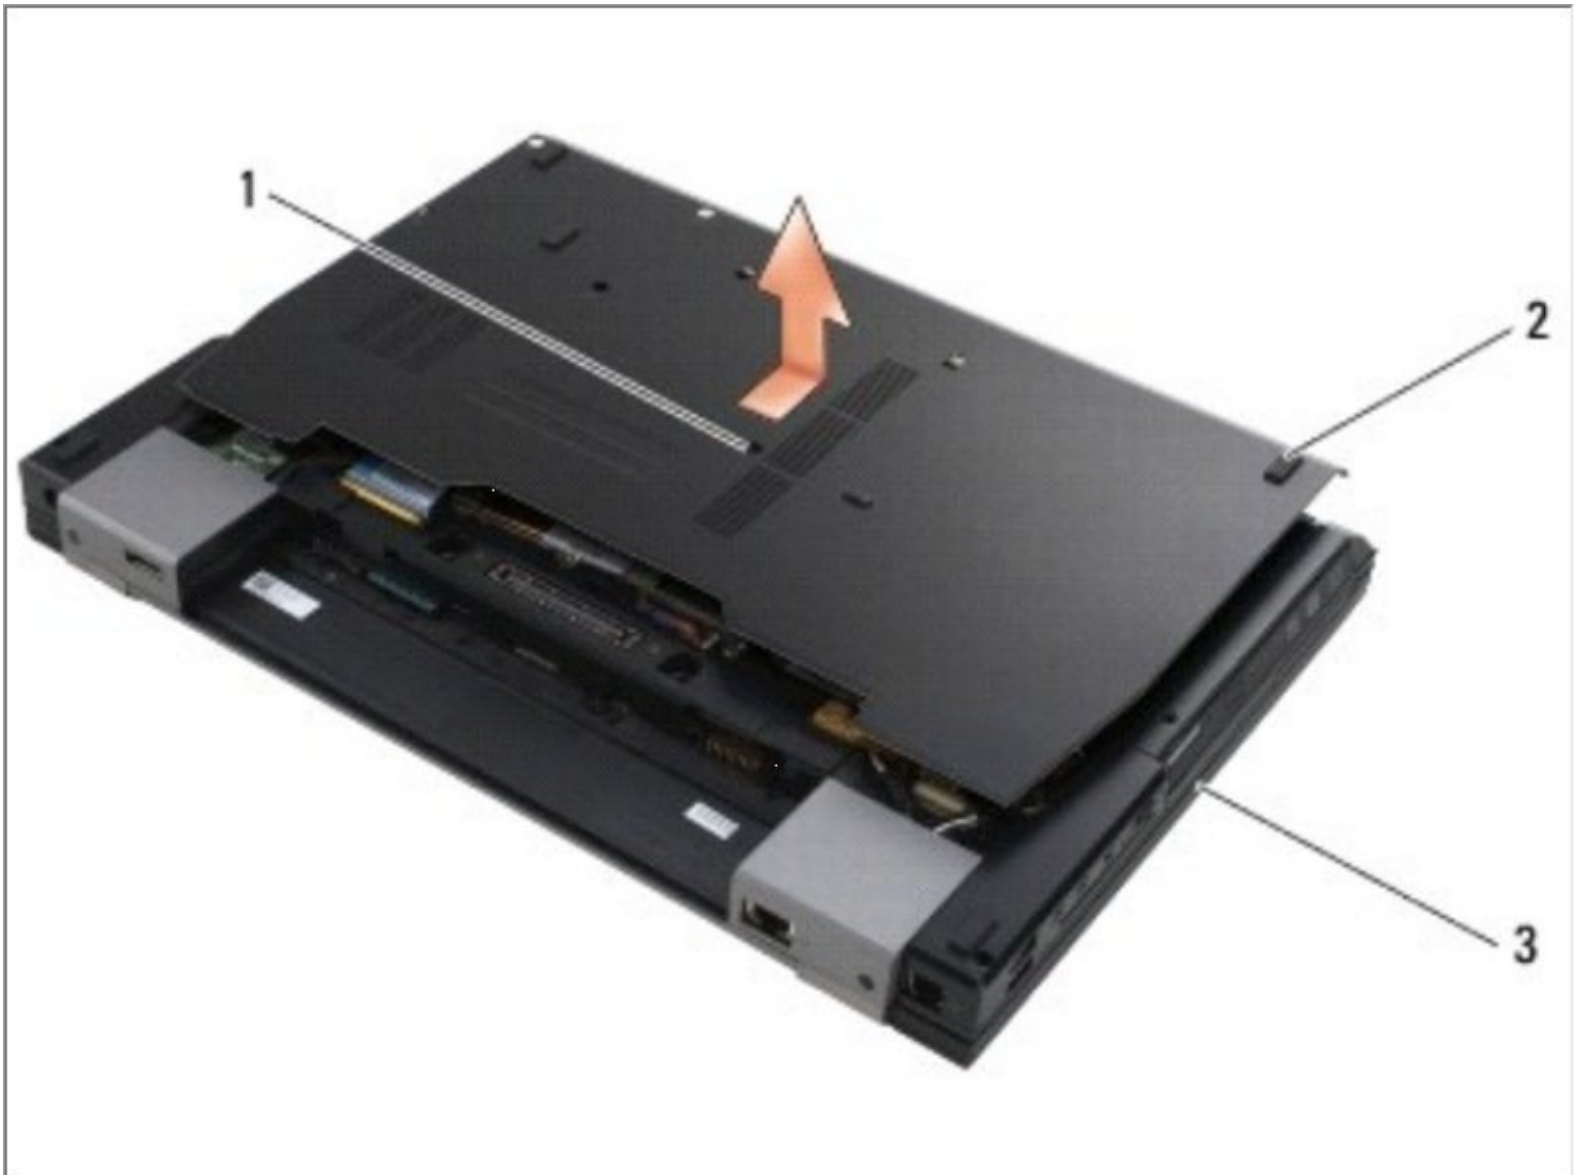

## TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery

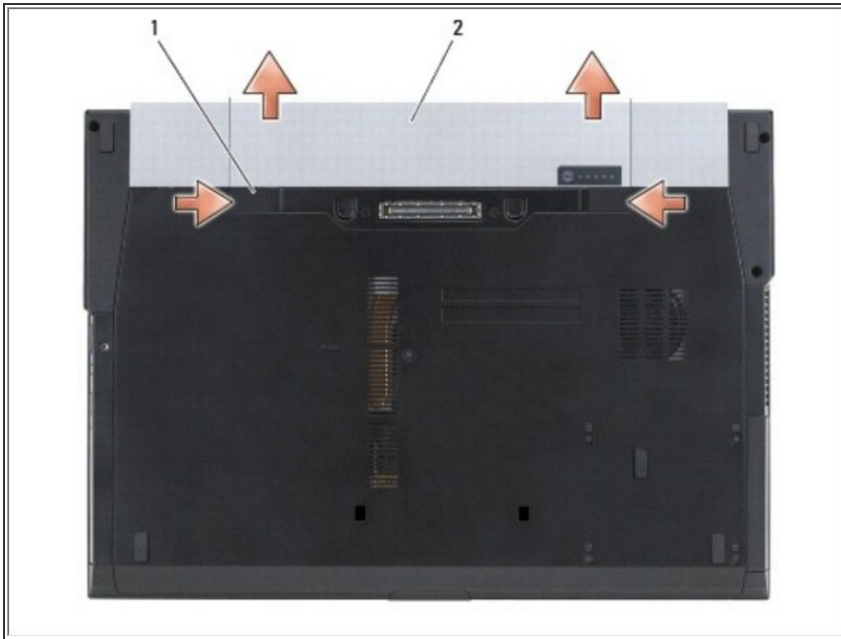

- Slide the battery release latches to the open position. (The latches lock into place).
- Grip the battery and slide it out of the battery bay.

## Step 2 — Base Cover

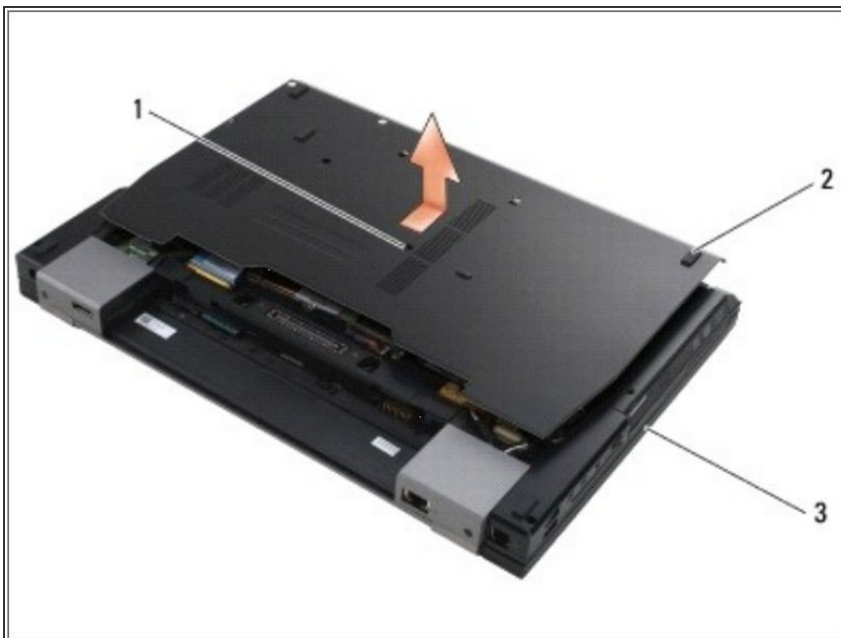

- Loosen the M2.5 x 5-mm captive screw.
- Using the rubber feet for leverage, slide the bottom of the base assembly toward the front of the computer 1/8th inch, then lift to remove it.

To reassemble your device, follow these instructions in reverse order.