



Pioneer MXT-X366BT Knob Replacement

This guide will show the steps involved in removing and replacing the volume knob on the radio.

Written By: martin esquivel



INTRODUCTION

The volume knob on the Pioneer MXT-X366BT can break or become worn. This guide shows the steps required to replace the knob.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Volume Knob



- Push the eject button to release the faceplate.

Step 2





- Carefully separate the faceplate from the radio.

Step 3





- Remove three 3mm Phillips-head screws with a Phillips #1 screwdriver.

Step 4

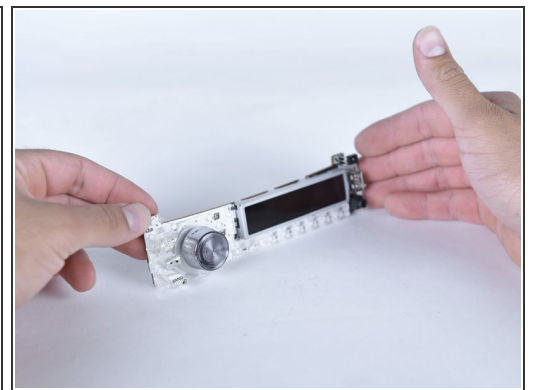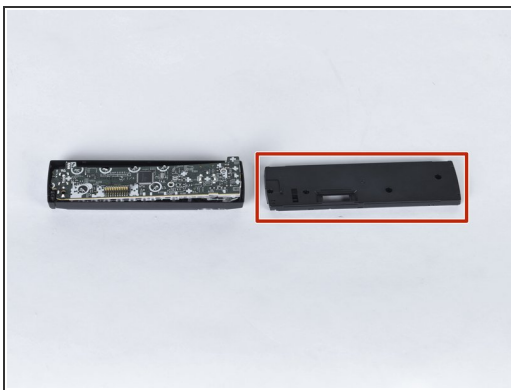

- Remove the back of the face plate.
 - Separate the motherboard from the casing.
- ⚠ Handle the motherboard with care.

Step 5

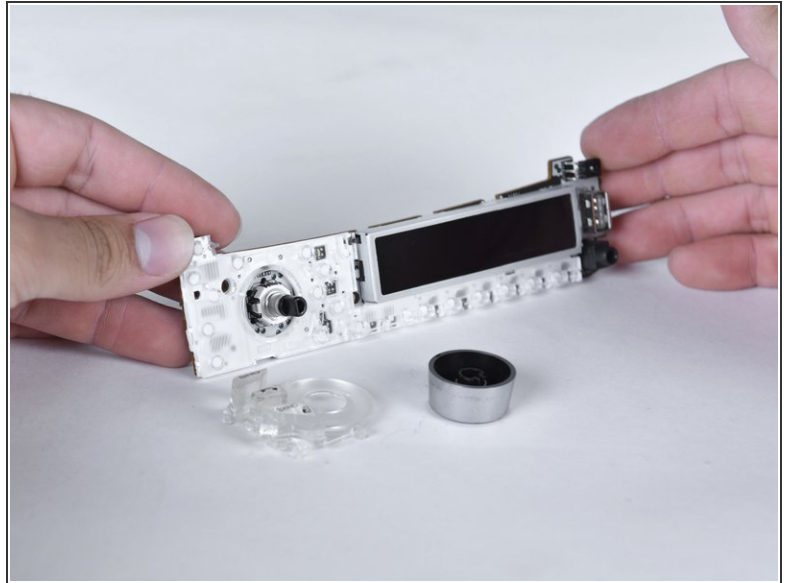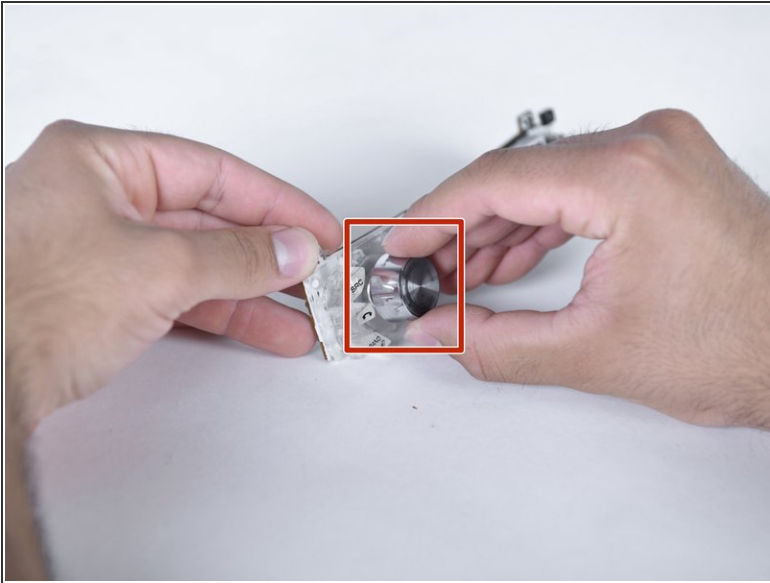

- Firmly pull the volume knob.
- ⚠ Carefully handle the motherboard to not break it.
- ⓘ Some force may be required to remove the knob.
- ⓘ Buttons are attached by a ring behind the volume knob.

To reassemble your device, follow these instructions in reverse order.