




Lenovo Z70-80 Keyboard Replacement

This guide will demonstrate how to replace the...

Written By: Eduardo Delgado

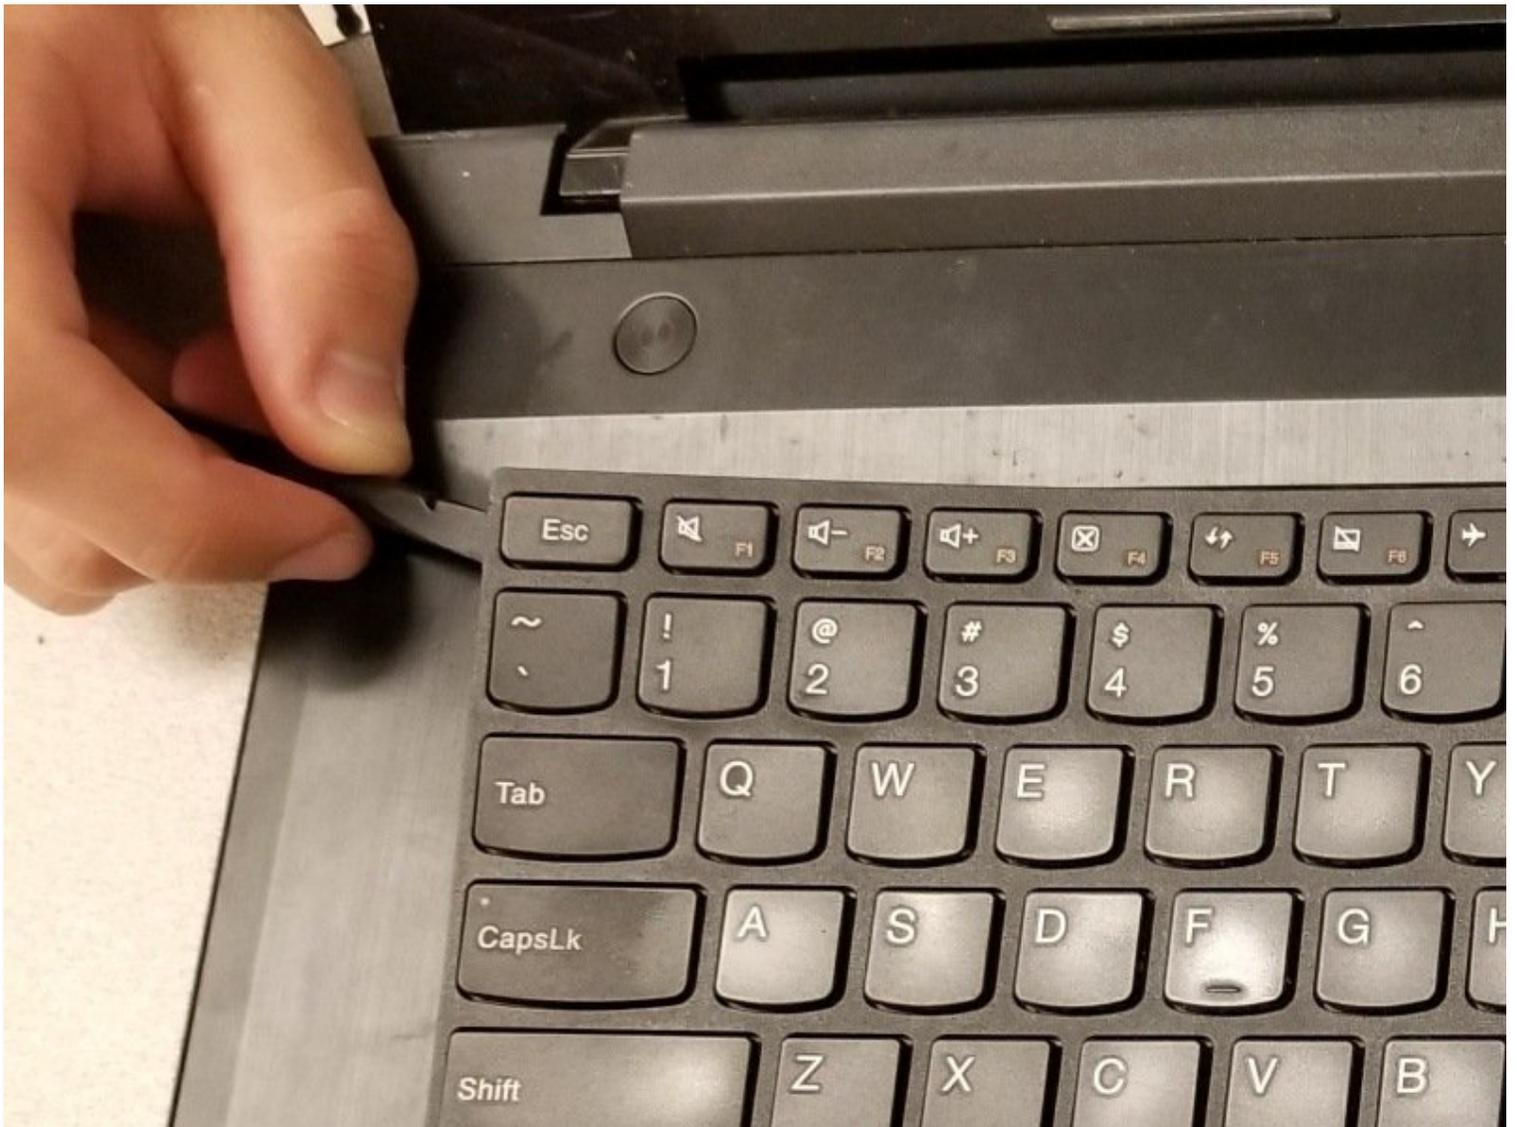



INTRODUCTION

This guide will demonstrate how to replace the keyboard on your Lenovo Z70-80 laptop.

TOOLS:


Spudger (spatule antistatique) (1)

Step 1 — Battery

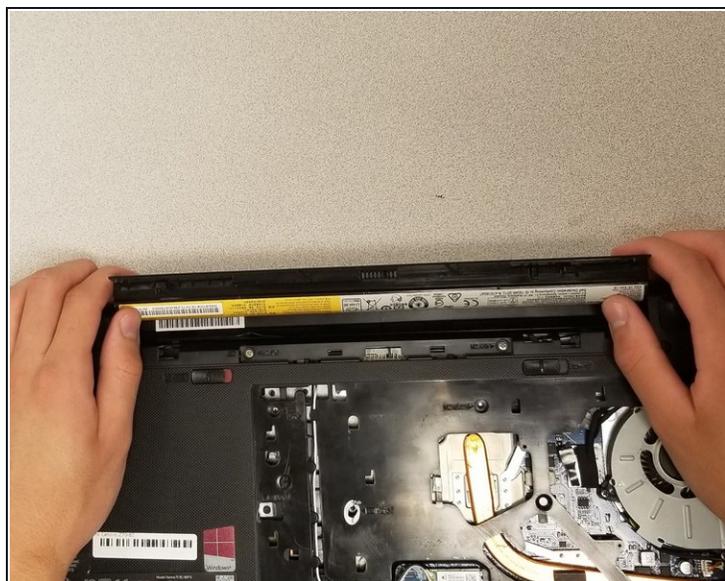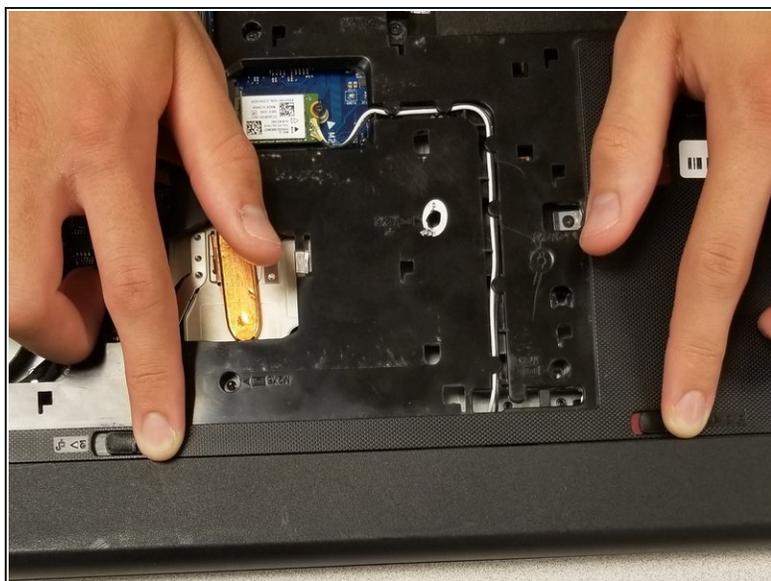

- Use your fingers two push both latches away from each other to release the battery.
- Pull the battery out.

Step 2 — Keyboard

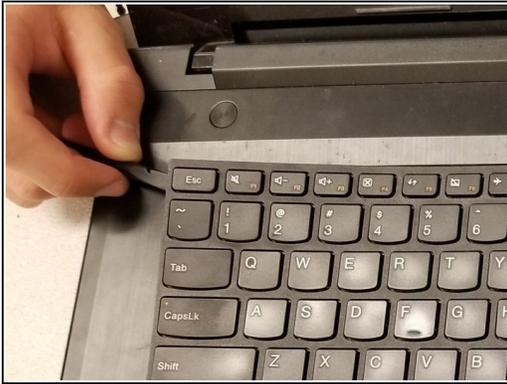

- Carefully pry up the keyboard with the flat end of a spudger and remove all of the 3mm Phillips #0 screws.
- Use a spudger to flip up the retaining flap on the keyboard ribbon cable [ZIF](#) socket.
- Pull the keyboard cable out of the socket.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.