




Asus Chromebook C201PA-DS02-LG Metal Plate Replacement

How to remove the metal plate in a Asus Chromebook C201PA-DS02-LG.

Written By: Brittany M Won

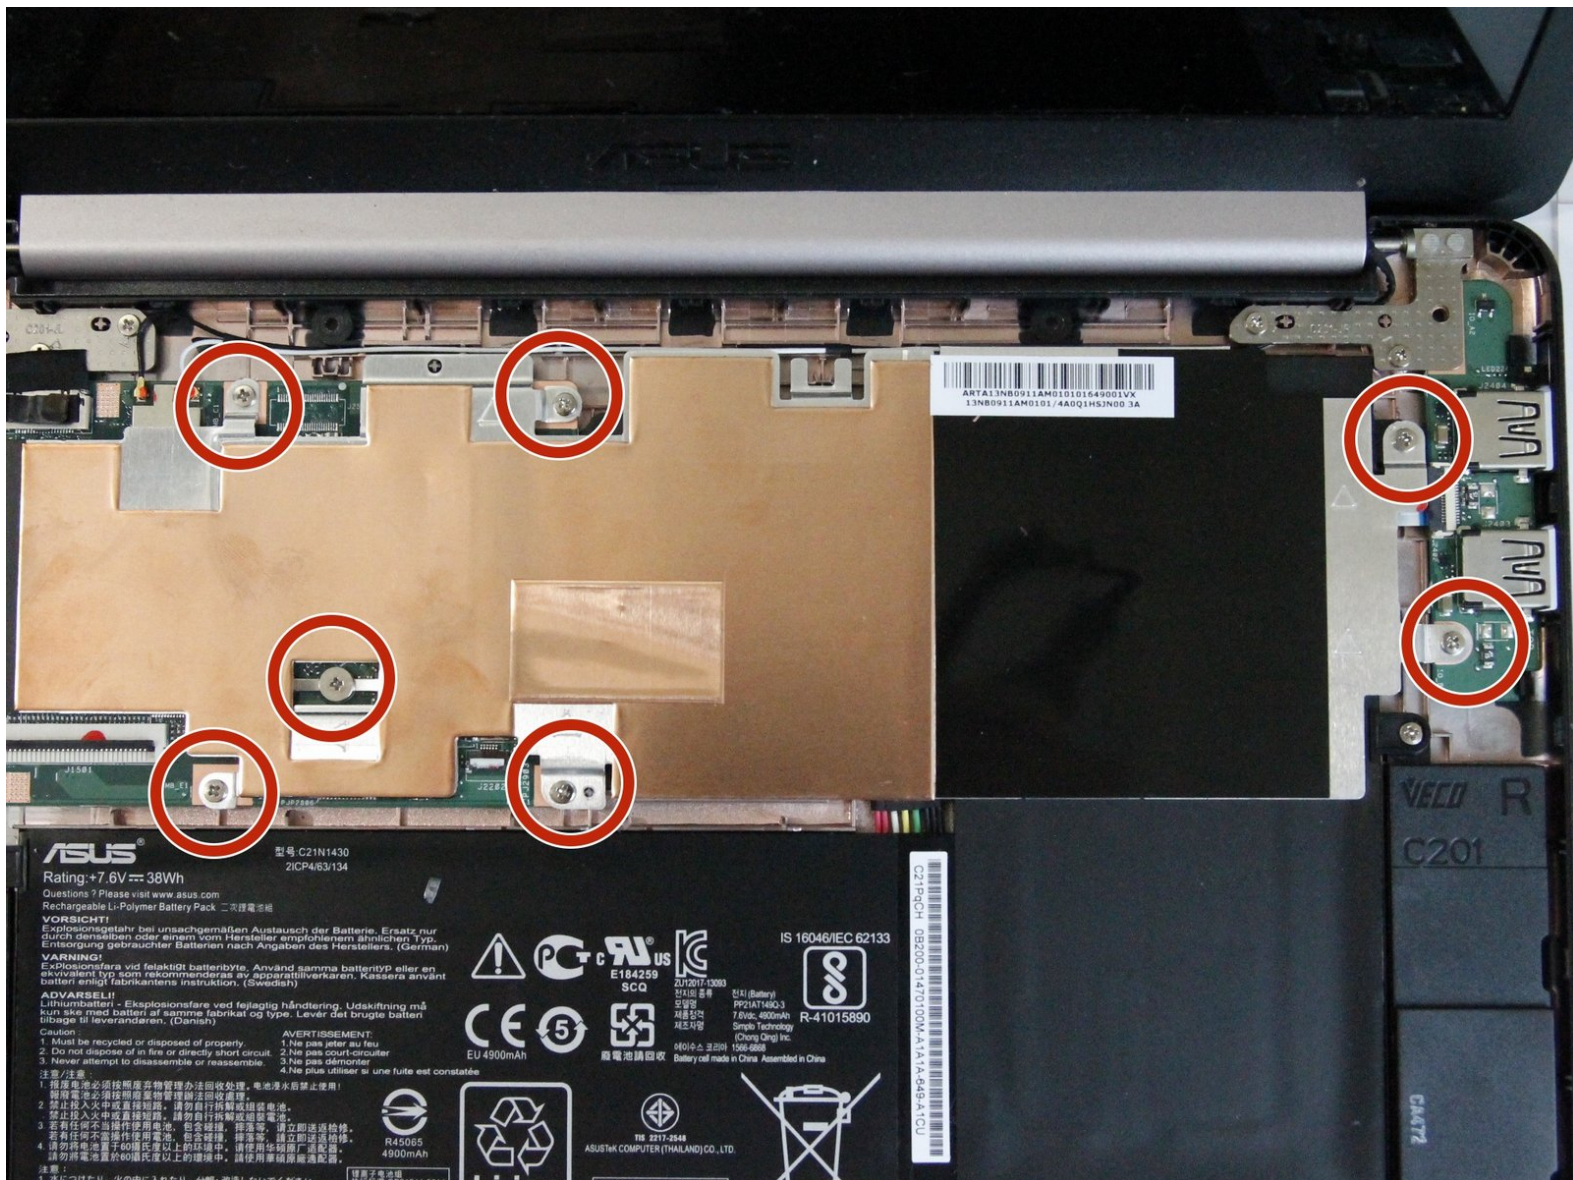

INTRODUCTION

Need to access the inside of your Chromebook, but not sure what to do? This guide will show you how.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard



- Use a metal spudger to pry off the two feet closest to the hinge of the laptop.
- ☑ The feet are attached to the laptop by adhesives, therefore they may not stick as well after multiple removals.

Step 2



- Use a Phillips #0 screwdriver to unscrew the six 5mm screws.
- Use a Phillips #0 screwdriver to unscrew the two 6mm screws.



Step 3



- Use a plastic opening tool to pry the keyboard off the edges of the computer.


i The edges will make a popping noise.

Step 4

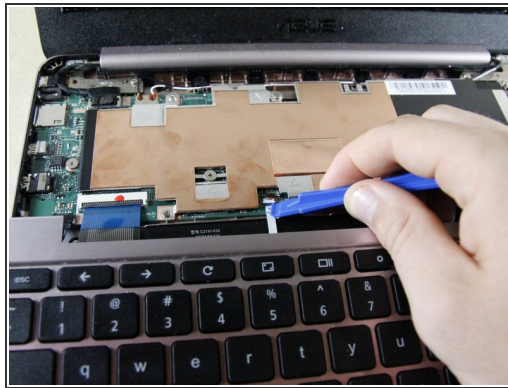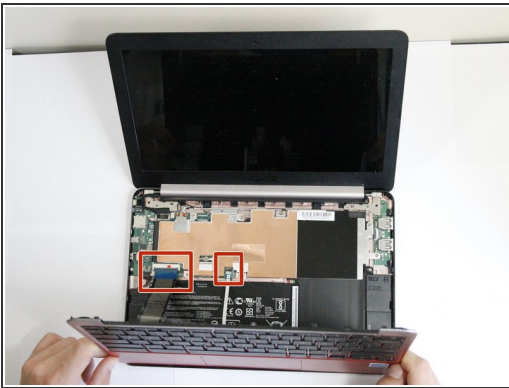


- Flip up the white bar that connects the thin white strip using a plastic opening tool.
- Grab the thin white strip and pull straight back to remove the strip from the connector.

Step 5

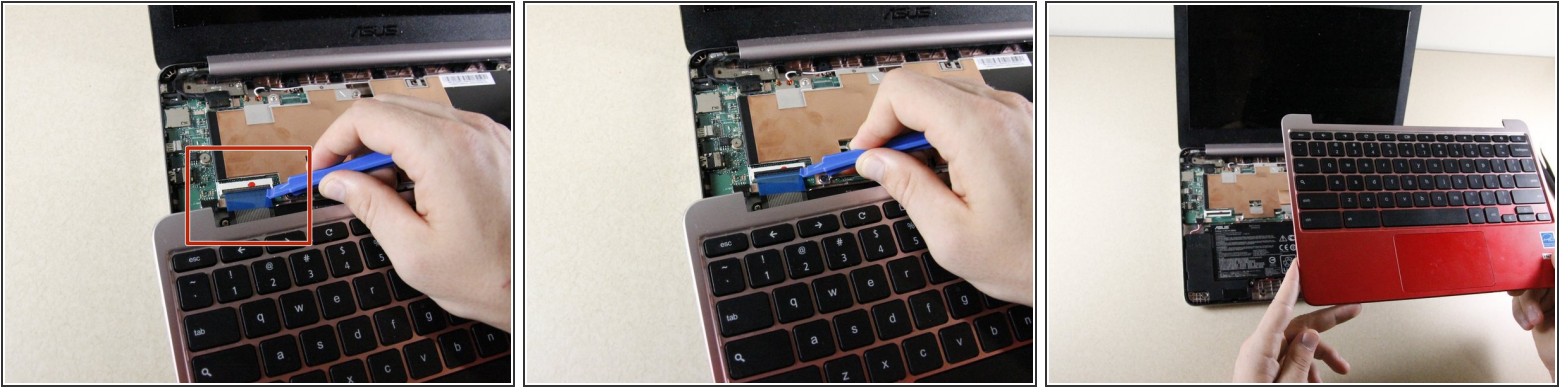

- Use a plastic opening tool to lift the black bar above the wide black strip in the connector.
- Grab the wide black strip and pull straight back to remove the strip from the connector.
- Remove the keyboard by lifting it straight up.

Step 6 — Metal Plate

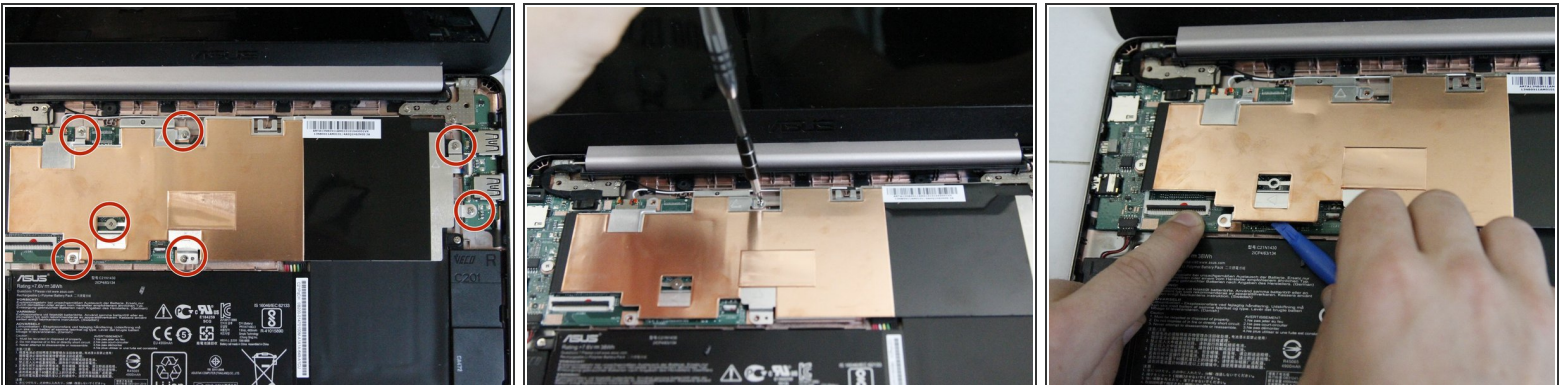

- Unscrew the seven 4mm screws using a Phillips #0 screwdriver.
- Wiggle the plate back and forth to loosen the adhesive under the plate.
- ☞ The adhesive will not be the same after removal and more adhesive may be necessary upon reassembly.
- Rotate the screwdriver in a counterclockwise direction to remove the screws.
- ⚠ Do not rest your arm or hand in the adhesive.

To reassemble your device, follow these instructions in reverse order.