




Dell Inspiron 14 3459 Battery Replacement


Written By: Terrence15

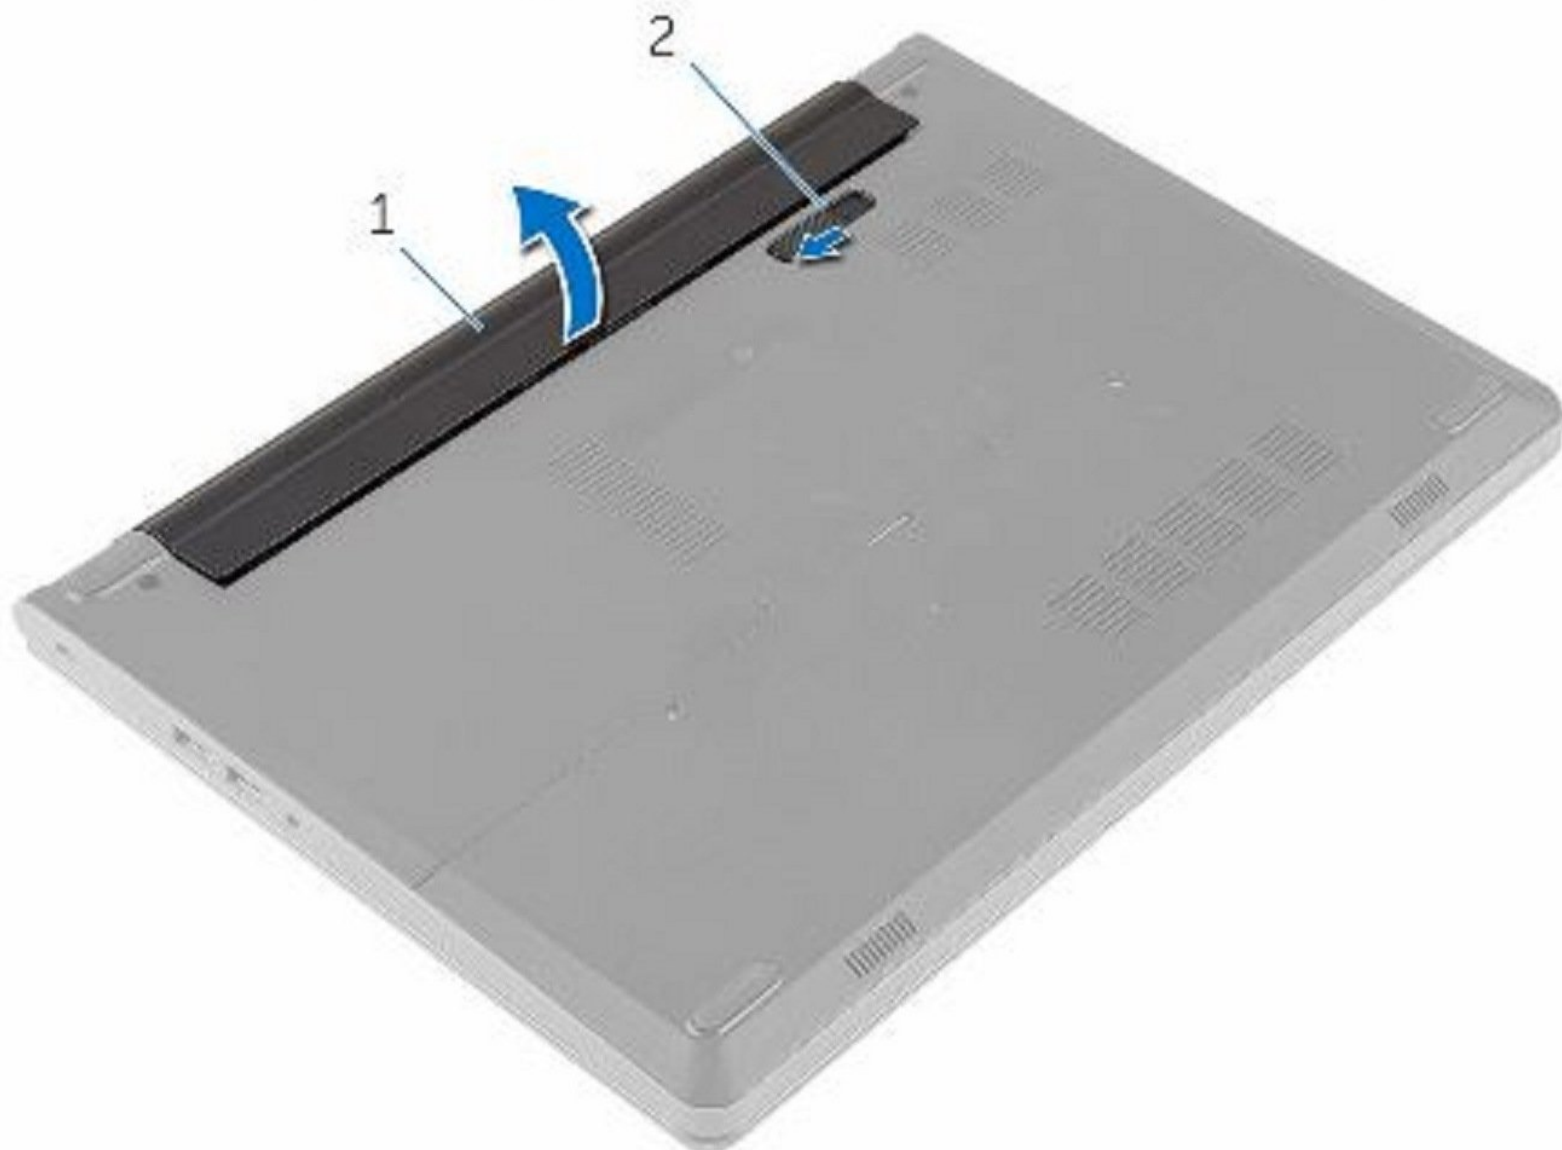

INTRODUCTION

In this guide, we will show you how to remove and replace the battery.


Step 1 — Close the Display

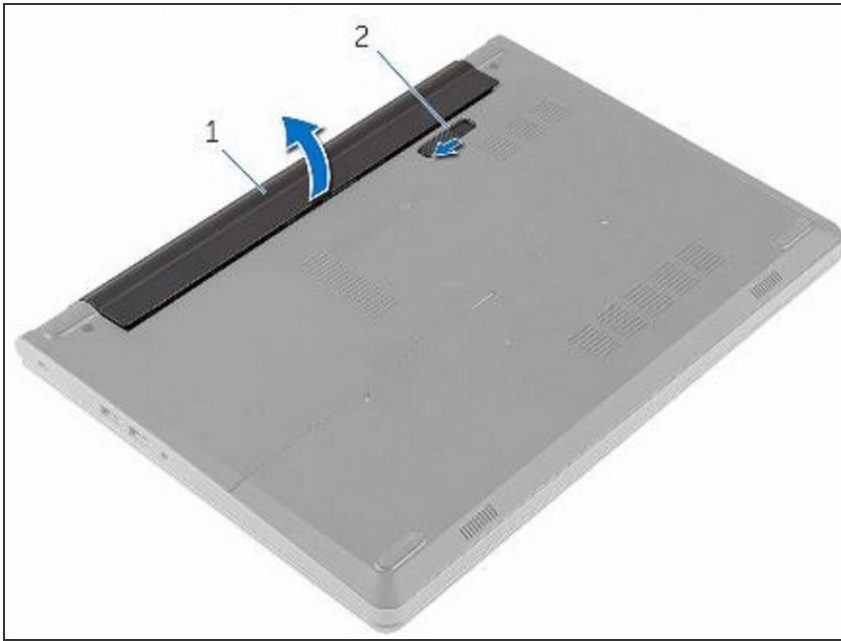

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display and turn the computer over.

Step 2 — Sliding the Battery Latch

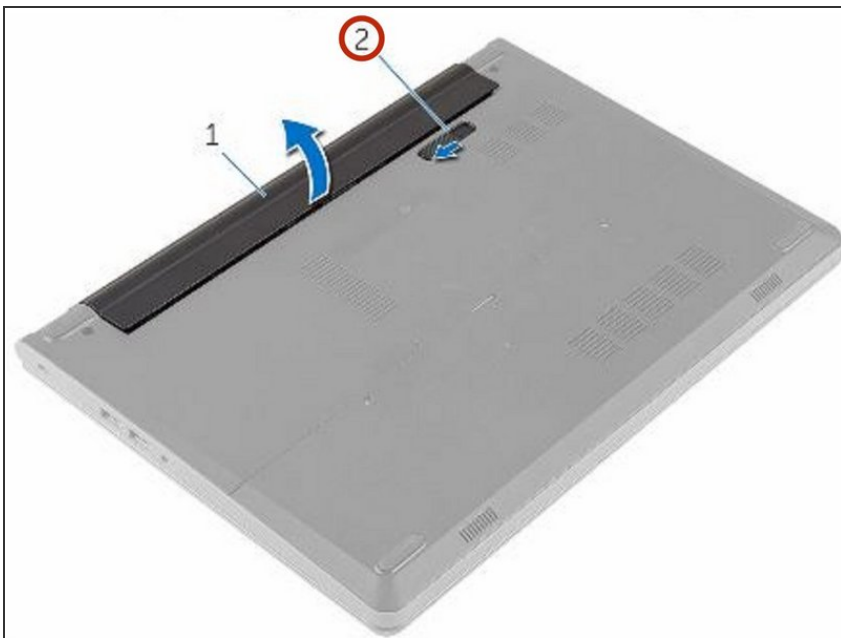


- Slide the battery-release latch to the unlocked position.

Step 3 — Removing the Battery

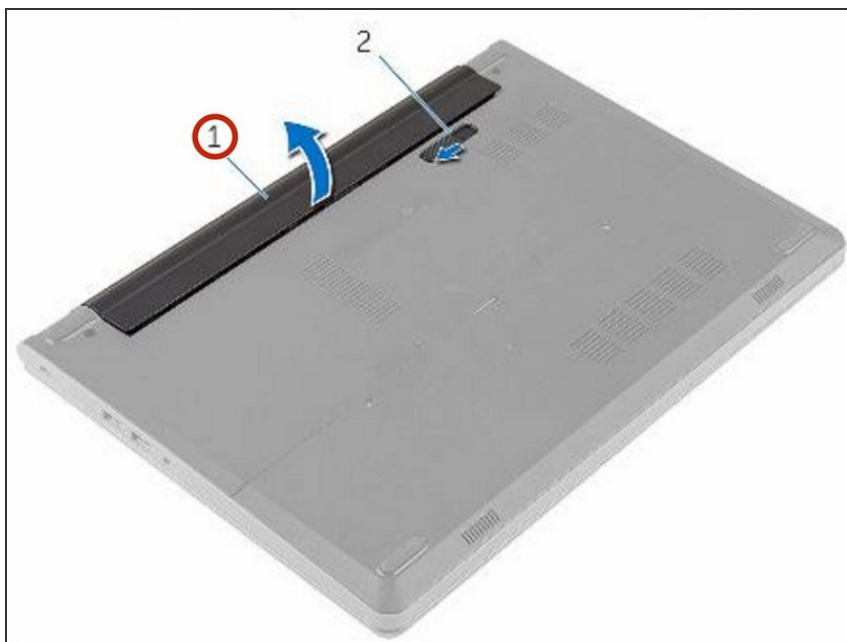

- Lift the battery at an angle and remove it from the battery bay.

Step 4 — Placing the Battery

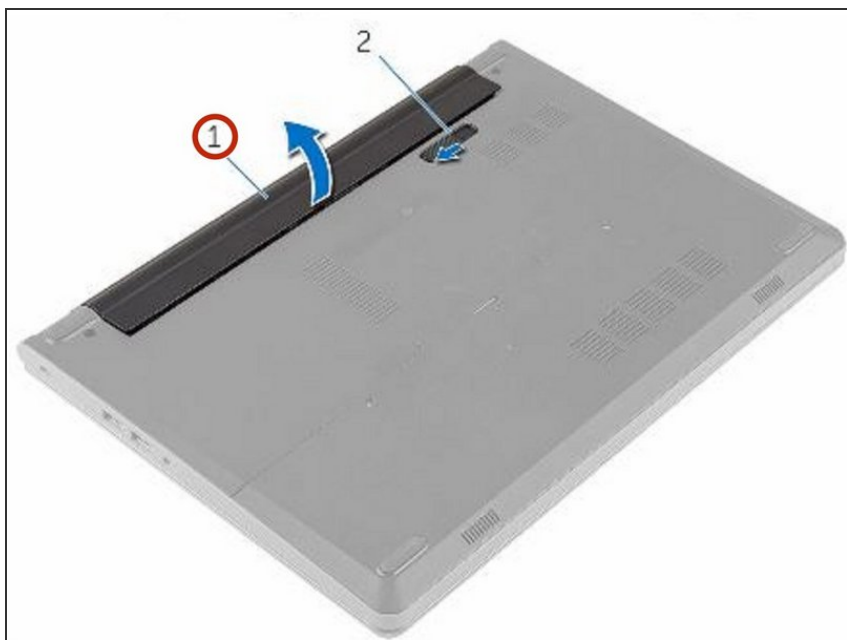

- Place **NEW** the battery in the battery bay and snap the battery into place.