



HP Pavilion Sleekbook 14-b013cl Battery Replacement

This guide will demonstrate how to locate and replace the battery in the HP Pavilion Sleekbook 14-b013cl.

Written By: Duncan Steele




This document was generated on 2020-11-28 06:47:05 AM (MST).

INTRODUCTION

This guide should be used if you have experienced issues with the battery, such as the battery not holding a charge or the computer only turning on while plugged in. Make sure that the device is fully powered off before attempting to remove the battery. No tools are required for this guide.

Step 1 — Battery

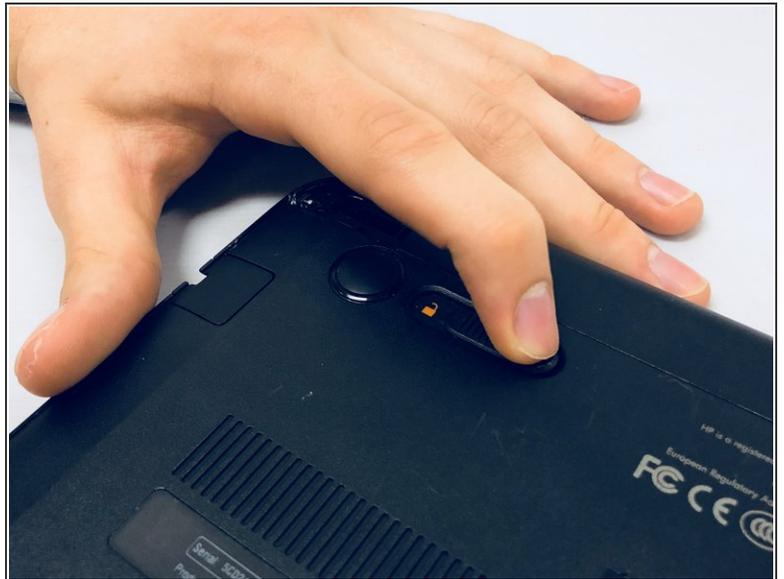

- Flip the computer over and move the battery lock switch to the "unlocked" position (marked by an orange lock icon).

Step 2



- Press the switch on the right-hand side of the back of the device towards the center until the gray battery icon is no longer visible. This will eject the battery.

Step 3



- Carefully pull the battery away from the device.

Place your new battery into the slot you just removed the old battery out of, and follow the steps in reverse order to accomplish this.