


LG X Style Battery Replacement

Batteries can wear out over time or stop working completely. This guide will show you how to remove the battery on the back of the device.

Written By: Andy Sommer

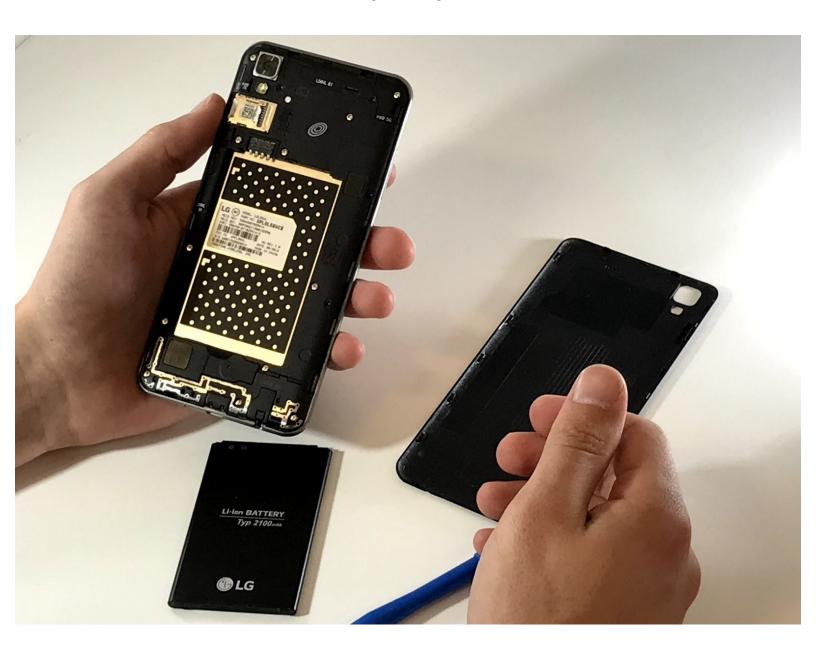

INTRODUCTION

This guide will provide the steps of removing the back casing of the device and removing the damaged battery.



TOOLS:

• iFixit Opening Tools (1)

Step 1 — Battery



- Power down the device and make sure that it is turned off.
- Insert the plastic opening tool into the bracket space on the back bottom left of the phone.
- Gently twist tool clockwise until the back case pops open [this will create a small gap].
- Slide the tool along the gap around the entire device.

Step 2





 Insert the plastic opening tool into the indent below the battery, and pry up to lift and remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:47:04 AM (MST).