




Dell Precision 7710 Hard Drive Replacement

Written By: Johnathan Hammond

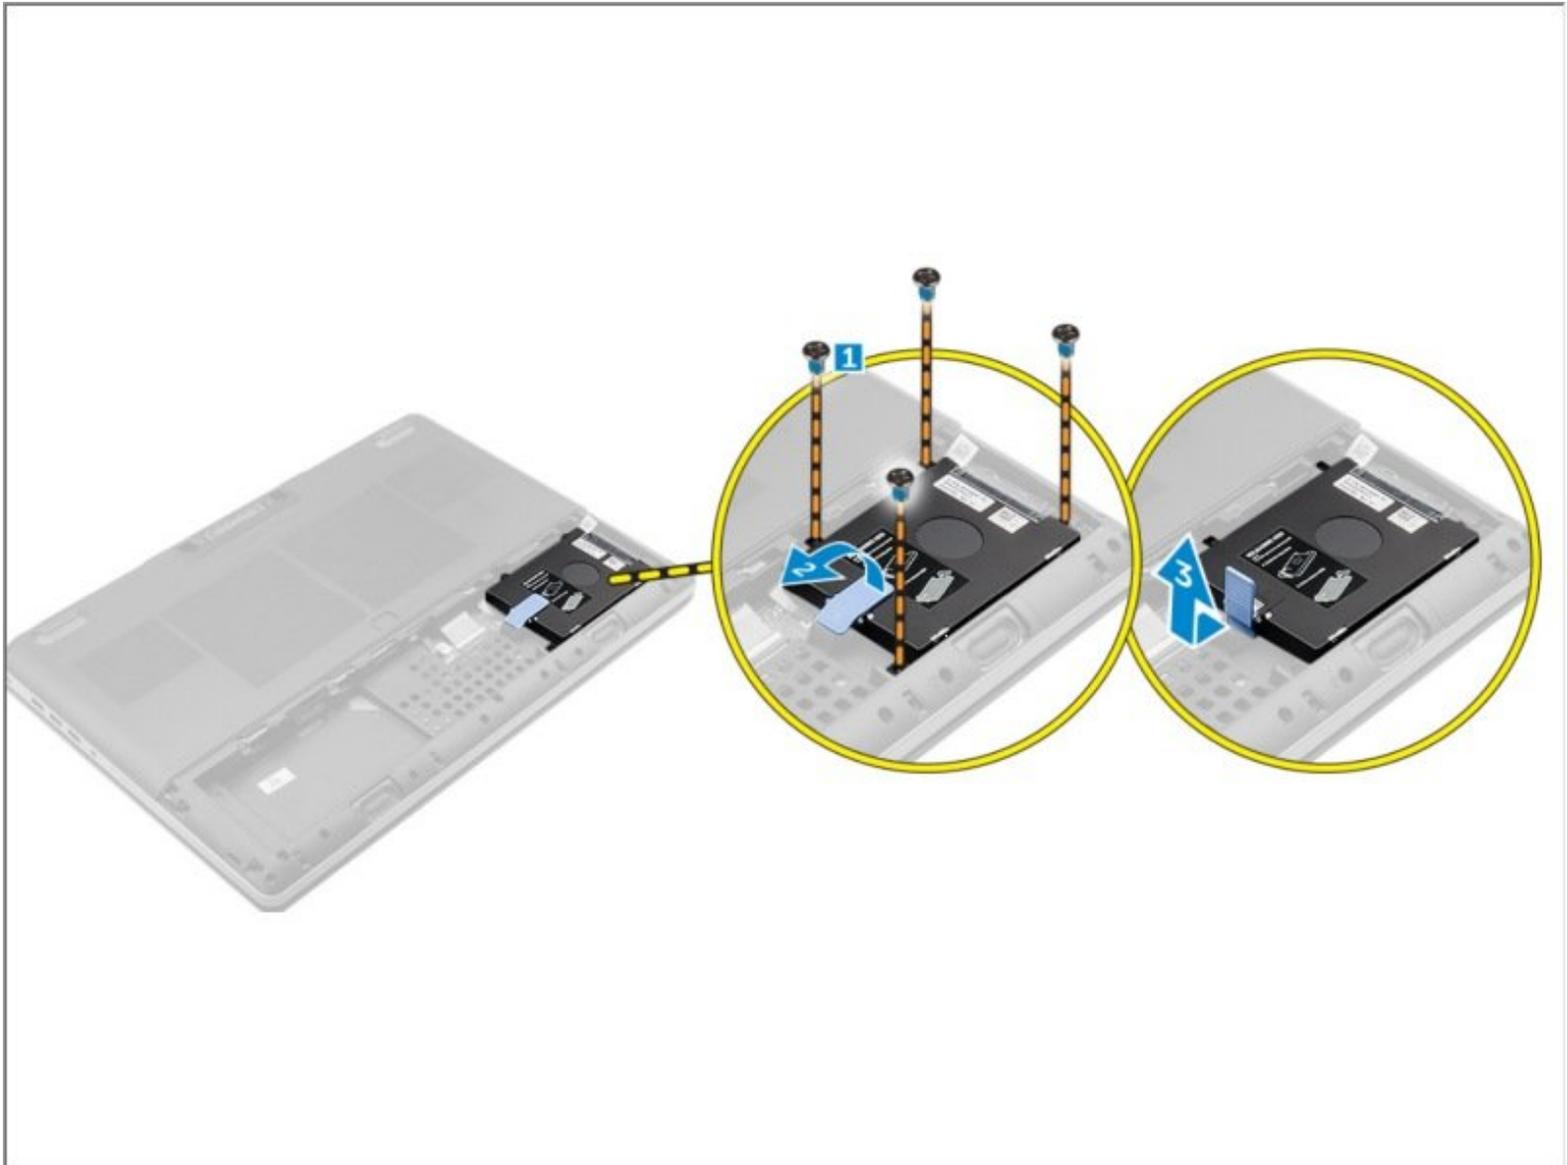


 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)

 **PARTS:**


- [Crucial MX500 250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [Crucial MX500 1 TB SSD](#) (1)
- [Crucial MX500 2 TB SSD](#) (1)

Step 1 — Battery

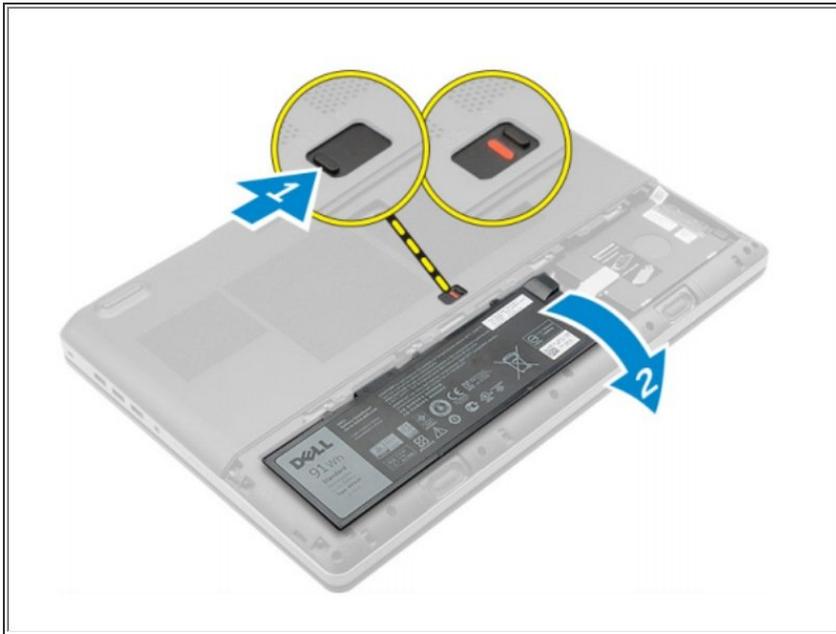


- Slide the release latch to unlock the battery [1].
- Lift and remove the battery from the computer [2].

Step 2 — Battery Cover

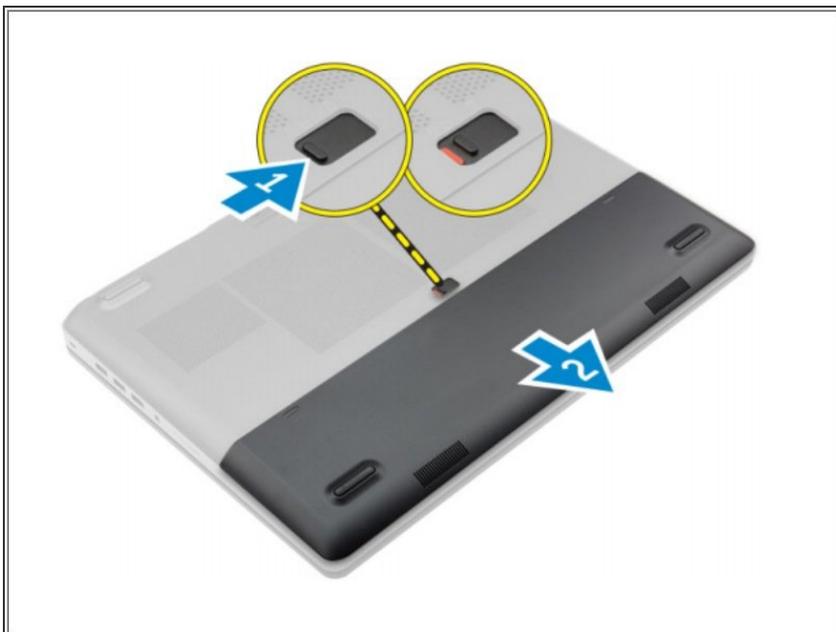

- Slide the release latch to unlock the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

Step 3 — Hard Drive

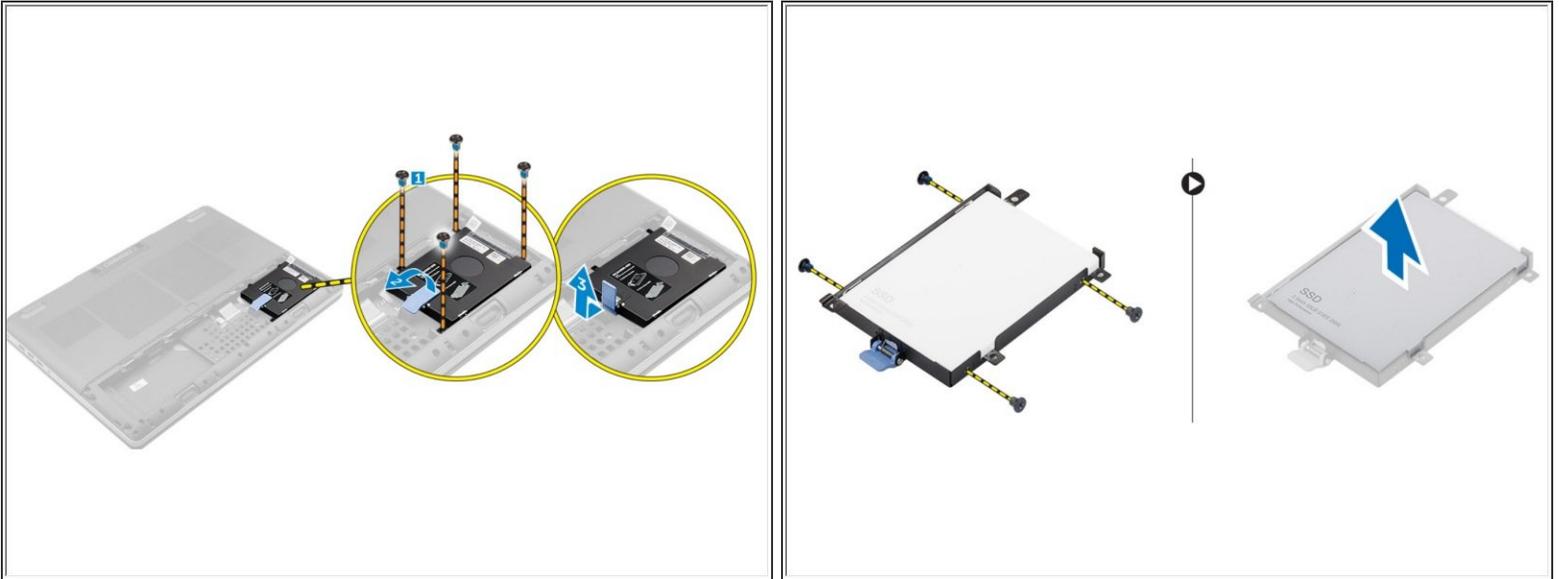

- Remove the screws that secure the hard drive to the computer [1].
- Lift the hard-drive latch to the unlock position [2].
- Slide and lift the hard drive from the computer [3].
 - Remove the screws that secure the hard drive. Lift the hard drive from the bracket.

To reassemble your device, follow these instructions in reverse order.