



Dell Precision 7520 Base Cover Replacement

Written By: Johnathan Hammond



 **TOOLS:**


- Phillips #0 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Battery Cover




- Slide the release latch towards the unlock icon to release the battery cover [1].
- Slide and lift the battery cover to remove it from the computer [2].

Step 2 — Battery

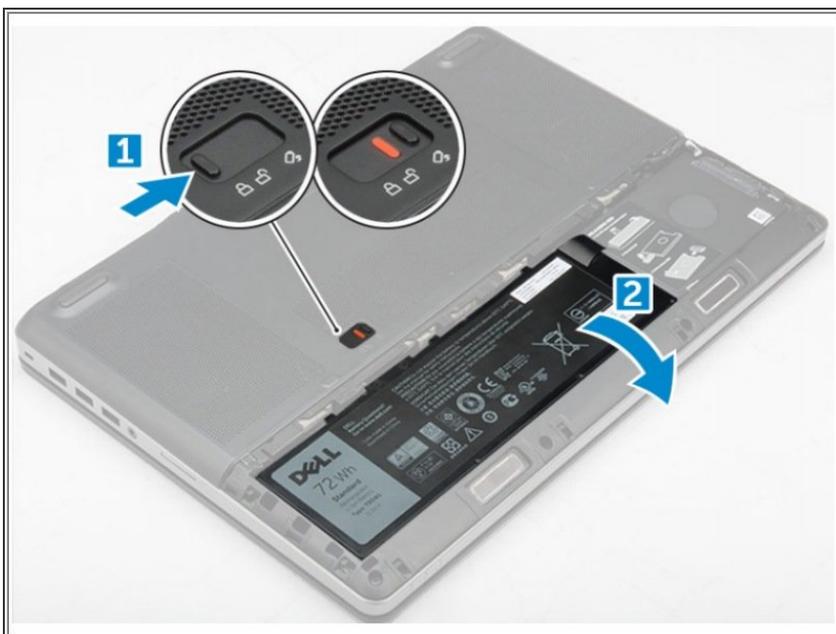

- Slide the release latch towards from the unlock icon to unlock the battery[1].
- Lift and remove the battery from the computer [2].

Step 3 — Base Cover

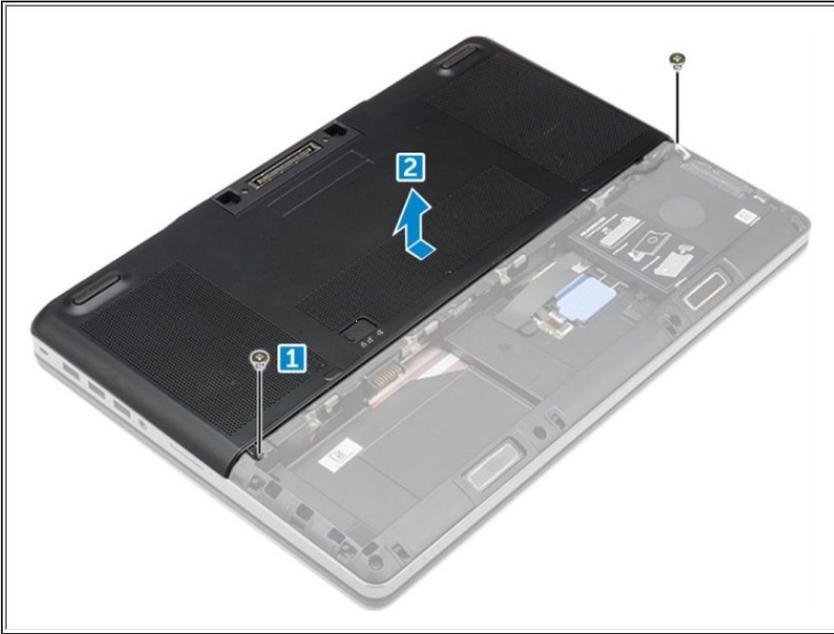

- Remove the M2.5X5.0 screws that secure the base cover to the computer [1].
- Slide and lift the base cover away from the computer [2].

To reassemble your device, follow these instructions in reverse order.