



LG X Style Speaker Replacement

This guide will show you how to remove the speaker housing on your LG X style.

Written By: cecilia morales



INTRODUCTION

Use this guide to remove your damaged speaker from your phone.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen




- With a Phillips #000 screwdriver, remove the twelve 3mm screws.

Step 2



- Create a gap with plastic opening tool by applying pressure between glass screen and plastic edge of device.
- Slide prying tool around entire device beginning toward the top.
- Lift off and remove the screen from the device.

Step 3 — Battery

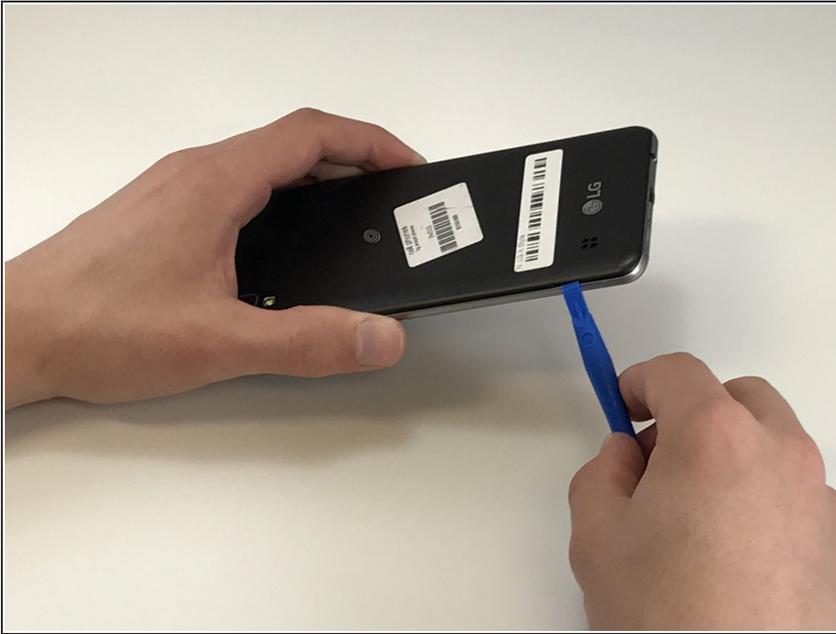

- Power down the device and make sure that it is turned off.
- Insert the plastic opening tool into the bracket space on the back bottom left of the phone.
- Gently twist tool clockwise until the back case pops open [this will create a small gap].
- Slide the tool along the gap around the entire device.

Step 4



- Insert the plastic opening tool into the indent below the battery, and pry up to lift and remove the battery.

Step 5 — Speaker



- Insert the plastic opening tool into slit around speaker box on mid shield frame.
- Gently pop up the speaker housing.
- If the adhesive film doesn't remove itself with the speaker housing, use the plastic opening tool to remove film.

To reassemble your device, follow these instructions in reverse order.