


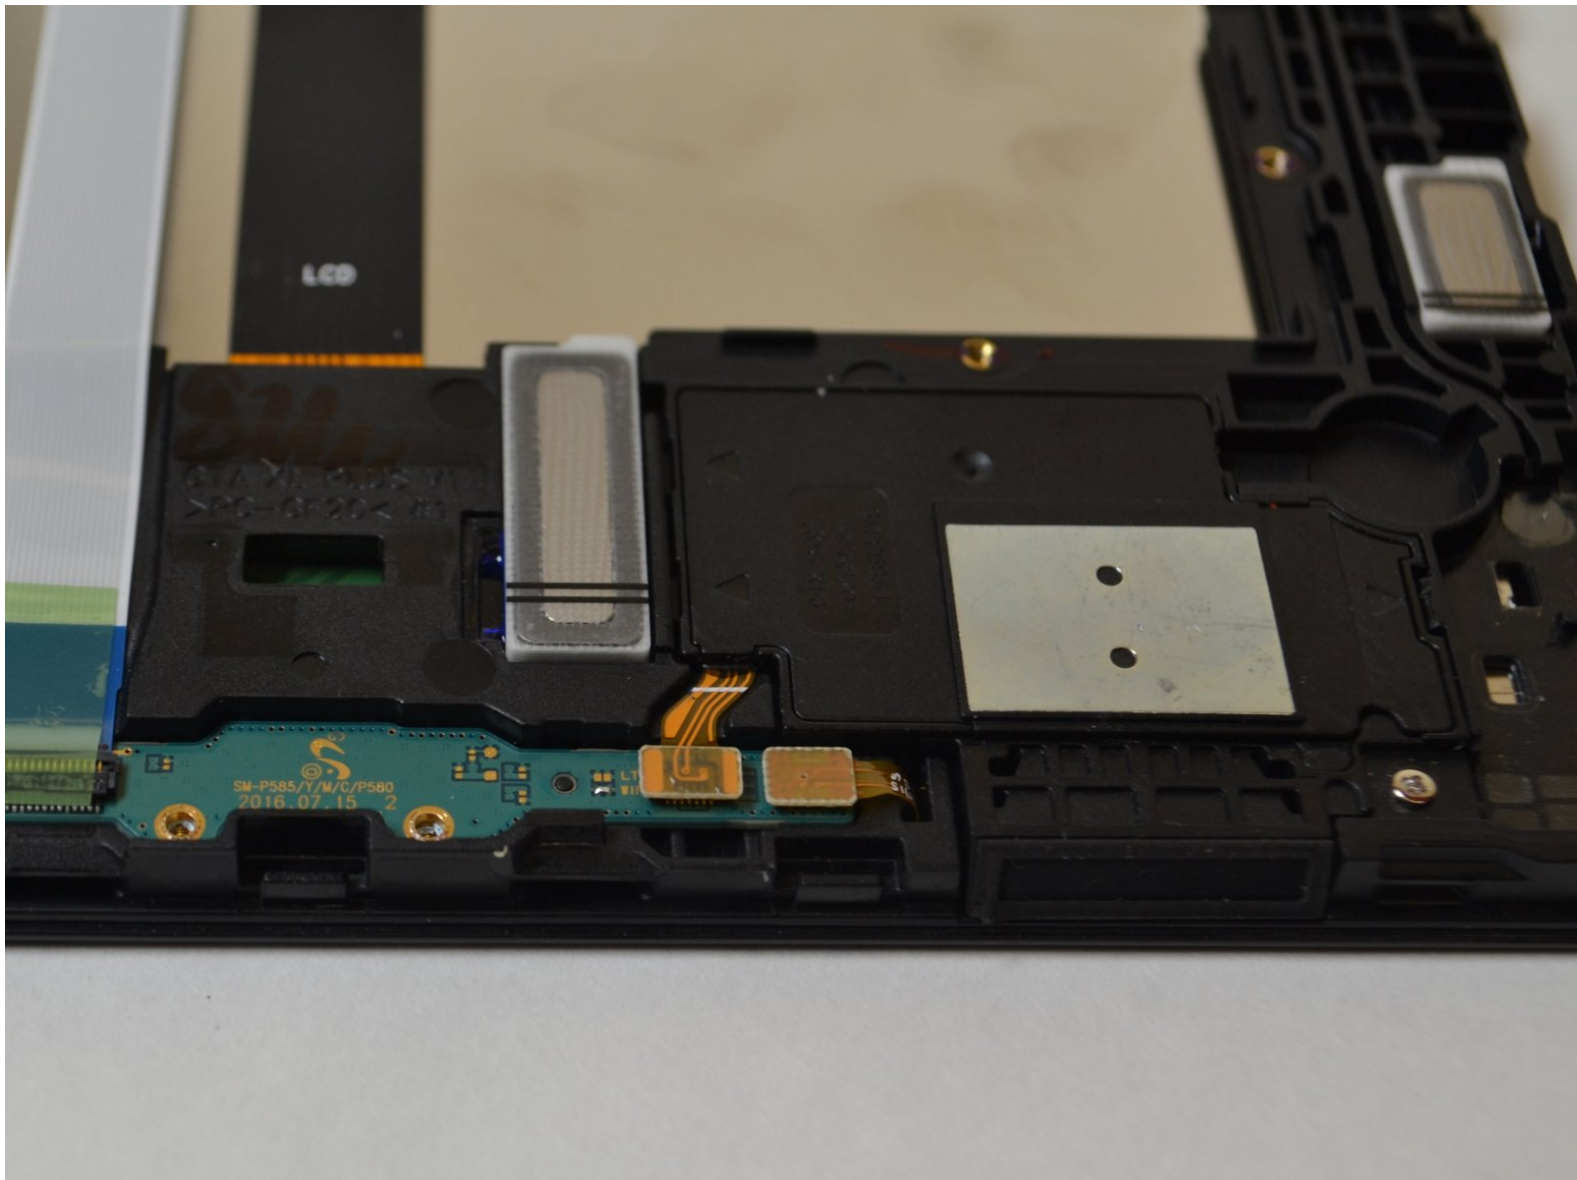

# Samsung Galaxy Tab A 10.1 S-Pen Speaker Replacement

This guide will guide provide you with step by step instructions on how to replace speakers of the Samsung Galaxy Tab A 10.1 tablet.

Written By: Guneet Bawa



---

## INTRODUCTION

This guide will guide provide you with step by step instructions on how to replace speakers of the Samsung Galaxy Tab A 10.1 tablet.

---



### TOOLS:




- [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery




- Remove all external power and turn off the tablet.
- Insert a plastic opening tool between the screen and rear casing.
- Pry the screen and rear casing apart.

## Step 2

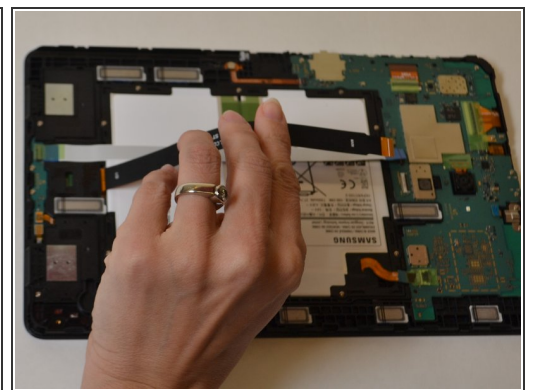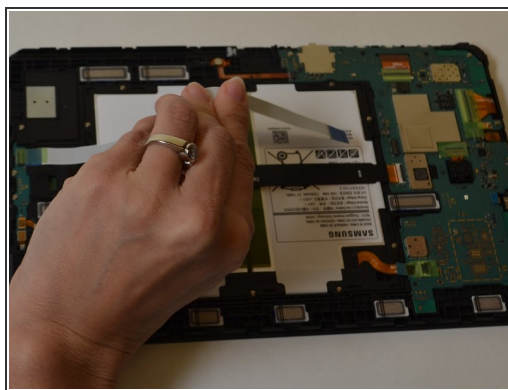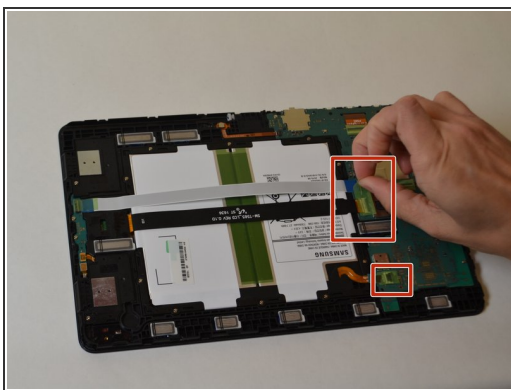


- Remove the three green pieces of tape covering the white, black, and gold ribbon cables.
- Use a spudger to flip up the retaining flap on the three ribbon cable [ZIF](#) sockets.
- Pull the ribbon cables out of the sockets.

## Step 3

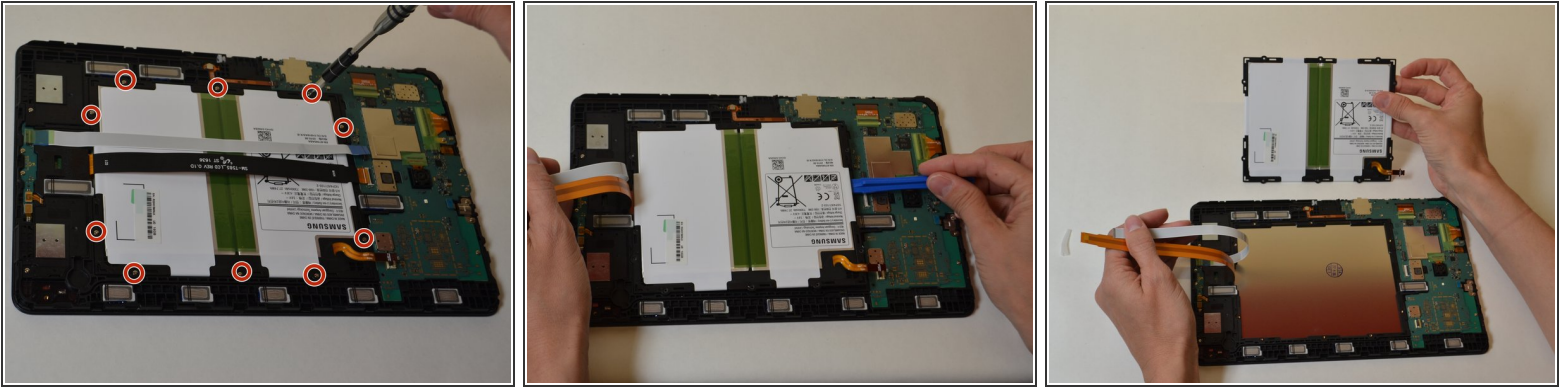

- Remove the ten 4mm Phillips #000 screws from the battery.
- Use a plastic opening tool to pry up the battery.
- Remove the battery.


## Step 4 — Speaker

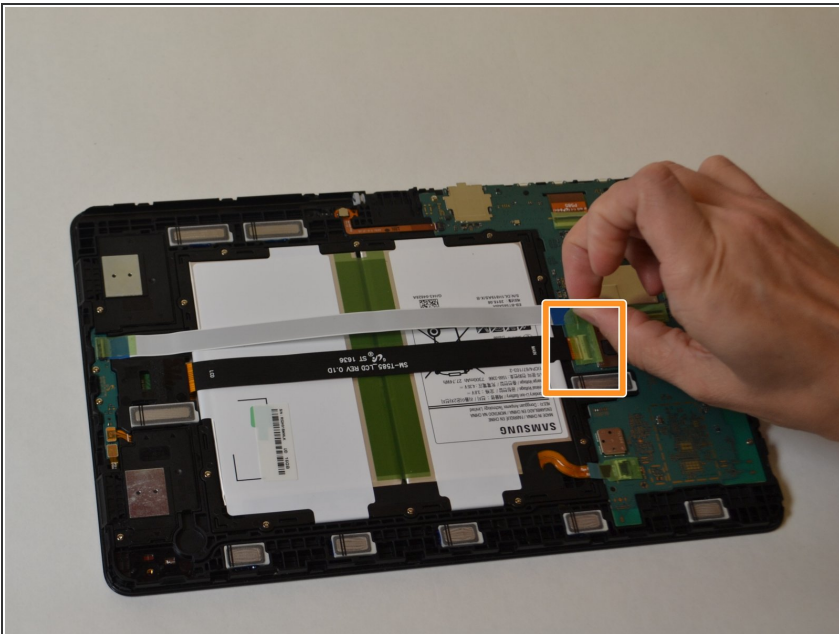

- Use a spudger to flip up the retaining flap on the ribbon cable [ZIF](#) socket.




## Step 5

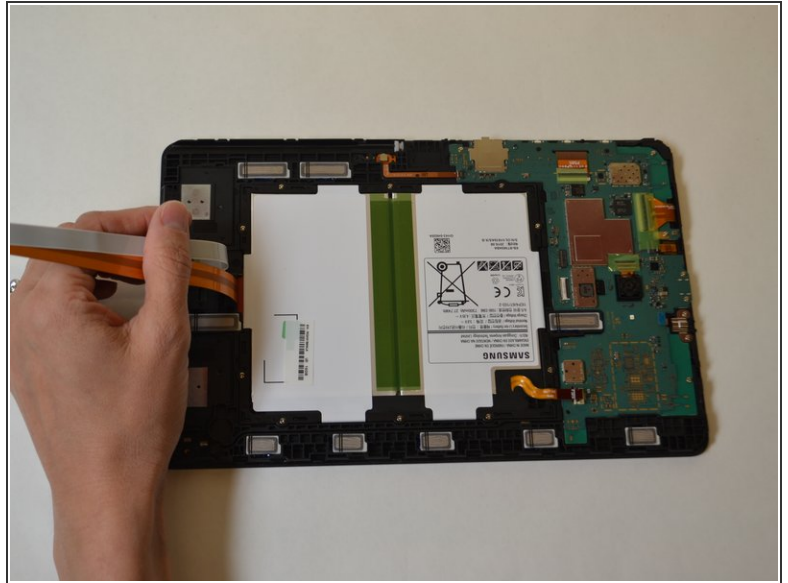



- Remove the ribbon cable from the socket.

## Step 6

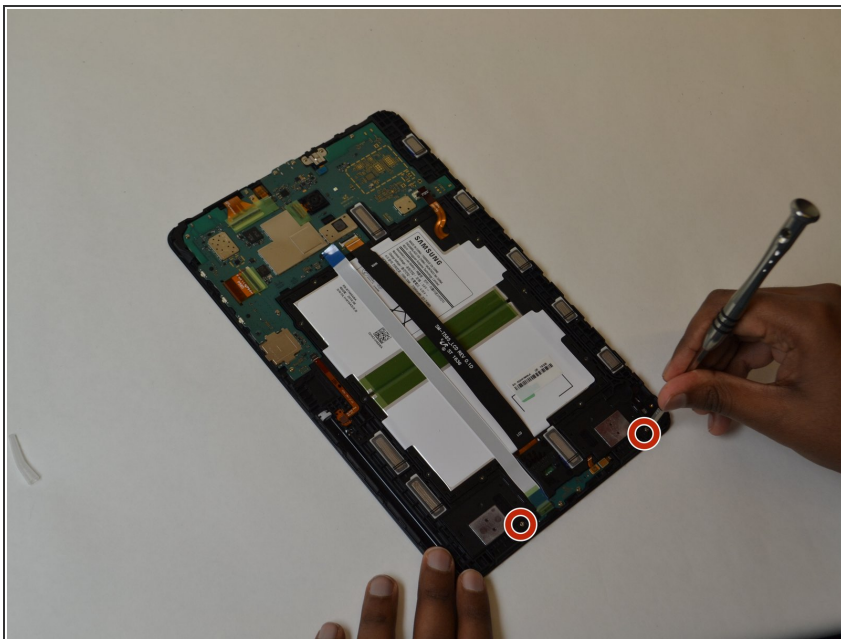

- Remove the two 4mm Phillips #000 screws from the speakers.

## Step 7

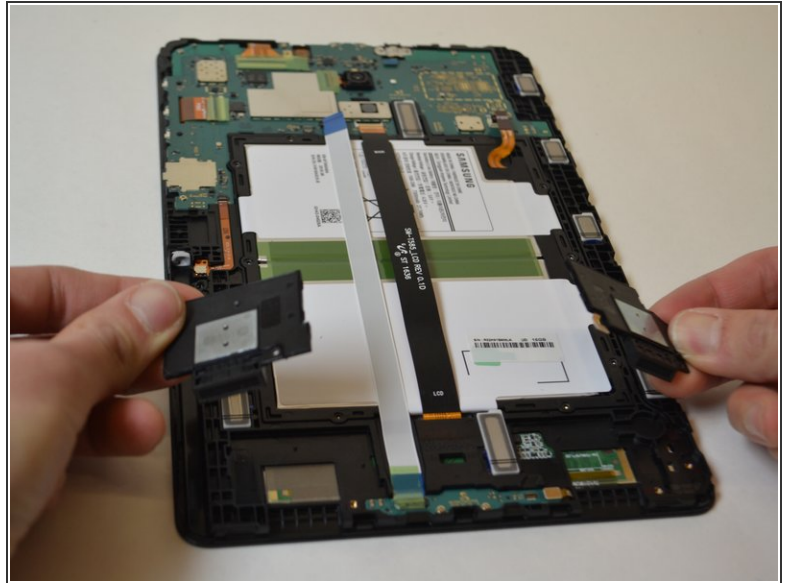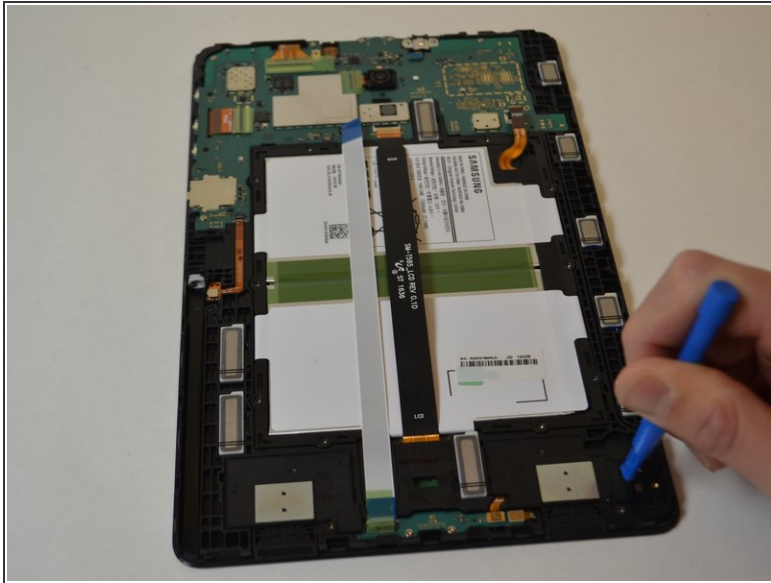

- Use a plastic opening tool to pry the speakers out of the tablet

To reassemble your device, follow these instructions in reverse order.