




Thermaltake Theron Plus Top Cover Replacement

This guide will go through the steps of how to remove the top cover of a Thermaltake Theron plus mouse .

Written By: Steven Kontra

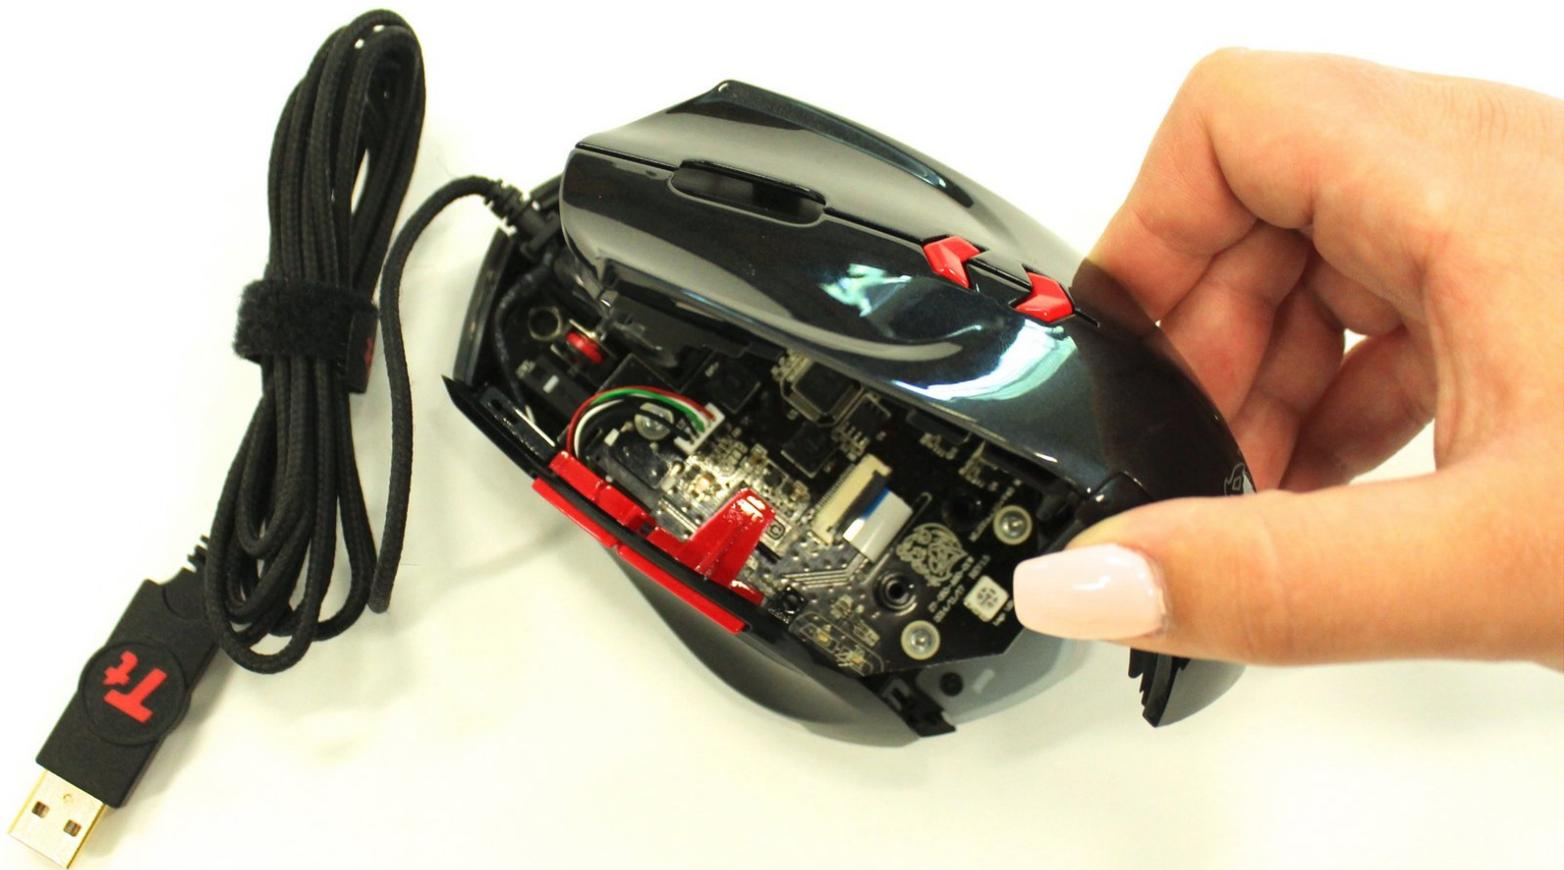

INTRODUCTION

If it seems as though the top cover is broken, it may be necessary to replace it. This guide will outline all the necessary steps to carry this task out successfully. With all the required parts and tools in hand, this guide should take but minutes to complete.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)

Step 1 — Top cover



- Remove the plastic cover and pack of weights.
- Remove the two 1.0 mm foam covers with tweezers.
- Peel away the plastic screw cover with tweezers.

Step 2



- Remove the four 1.0 mm screws with a Ph #1 screwdriver.
- Gently remove the top of the mouse.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:47:35 AM (MST).

