



Samsung Radiant360 R3 Wireless Setup Button and USB Module Replacement

In this guide, we will be replacing the USB...

Written By: Fadi Alzammar



INTRODUCTION

In this guide, we will be replacing the USB module of the speaker, which also houses the button used in pairing the speaker for Wi-Fi capabilities. You will need to remove the bottom cover, unplug the connector from the motherboard to it, and remove it from the speaker assembly.

TOOLS:

Spudger (1)

Tweezers (1)

Phillips #1 Screwdriver (1)

Step 1 — Wireless Setup Button and USB Module




- Flip the device so that the bottom of the device is facing you. Remove these feet with a pair of [tweezers](#).
- Remove the four 10mm long screws with the Phillips #1 screwdriver.

Step 2



- Remove the bottom shell from the speaker.

Step 3

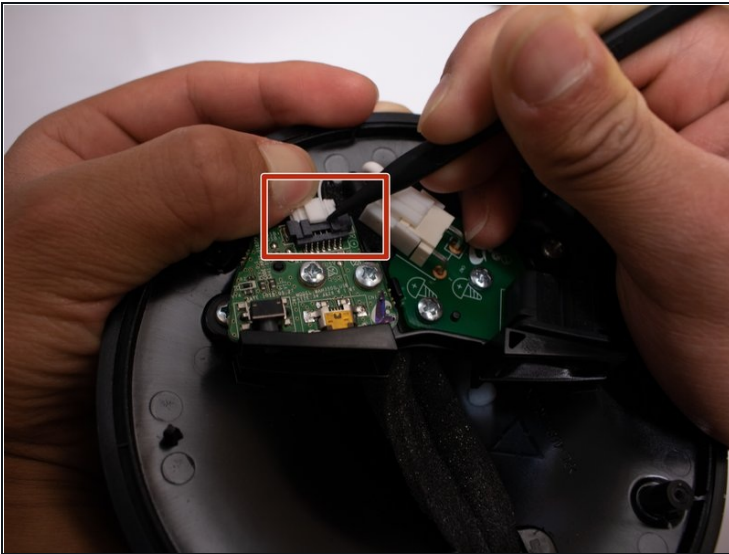

- Remove the connector from the board by pressing down on the center tab while nudging the connector away with a spudger.


⚠ Be careful not to pull directly on the wires or apply too much pressure, or you risk breaking the connector.

Step 4



- Remove the two 10mm long screws from the board utilizing the Phillips #1 screwdriver.

Step 5

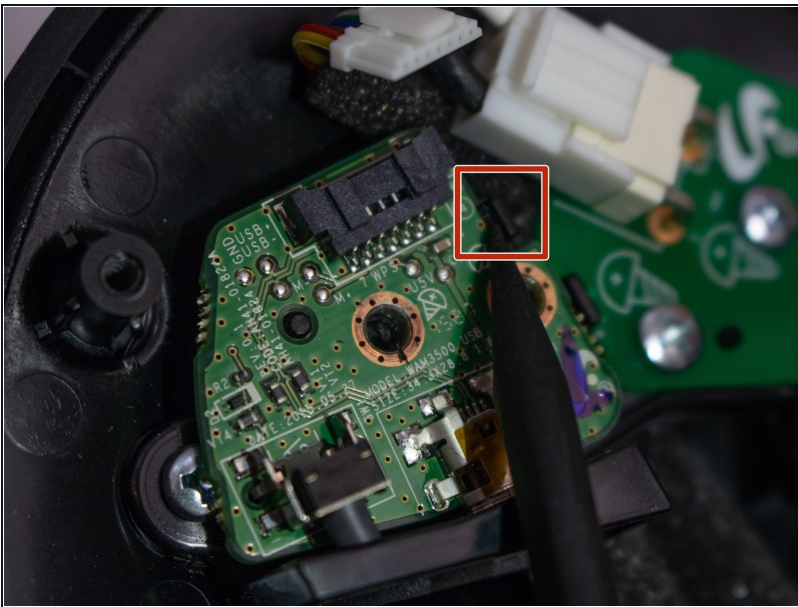

- Use a spudger to press the plastic tab away from the board until the board pops up.
- Remove the board with the USB module from the device.

To reassemble your device, follow these instructions in reverse order.