



Asus Q551L Battery Replacement

This guide will describe how to replace the battery on the Asus Q551L.

Written By: Drew Lawson



INTRODUCTION

This guide will describe how to remove the battery on the Asus Q551L. This is a fairly simple procedure that requires only a screwdriver. The battery may need to be replaced if it cannot hold a charge, experiences heating issues, or simply ceases to function. **Make sure your device is turned off and unplugged before removing the battery.**

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [JIS #0 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Unscrew the 10 screws around the edge of the back panel. Eight of the screws are 0.0793mm T5 , two of them are 0.0793 JIS #0.

Step 2

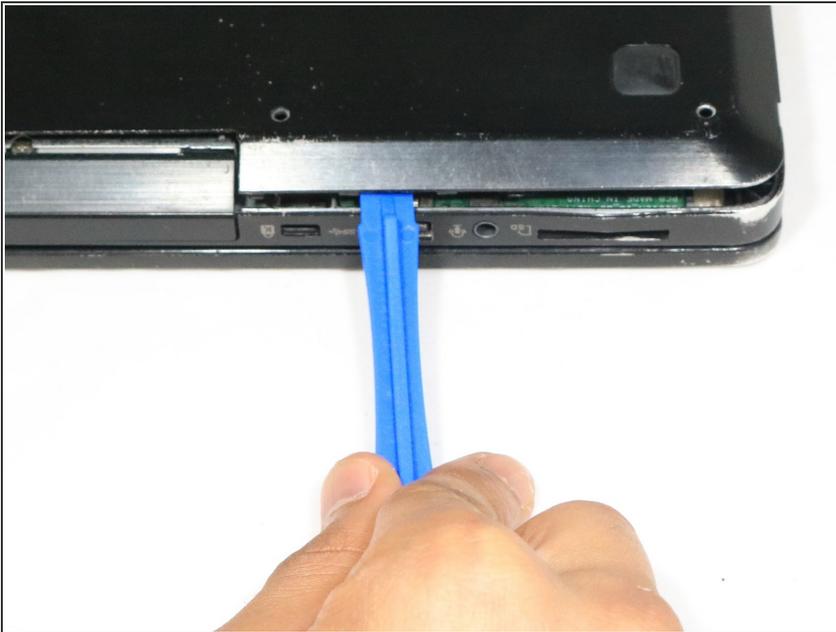


- Use the plastic opening tool to pry the back panel off the base of the laptop.

Step 3 — Battery



- Unscrew the four screws to remove the battery.

Step 4

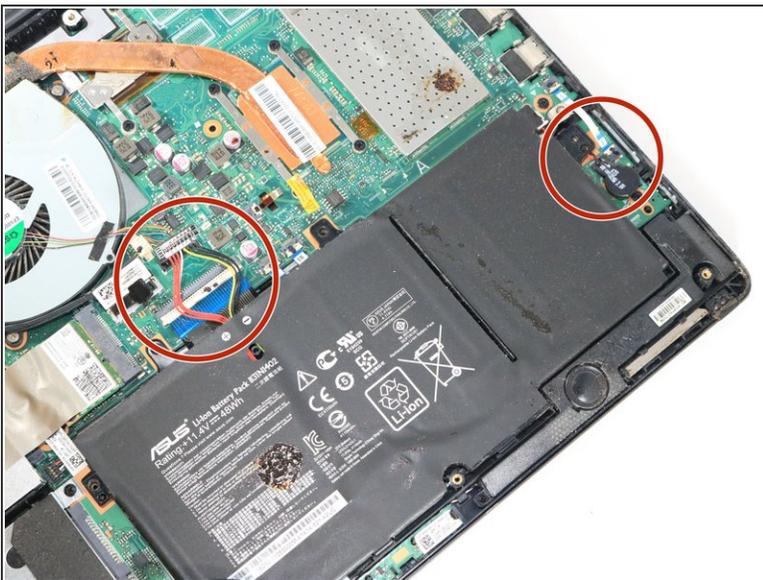

- Un-clip both wire clips on the upper and right side of the battery.
- Lift the battery out of the device.

To reassemble your device, follow these instructions in reverse order.