




Dell Inspiron 1427 Battery Removal


Written By: Terrence15

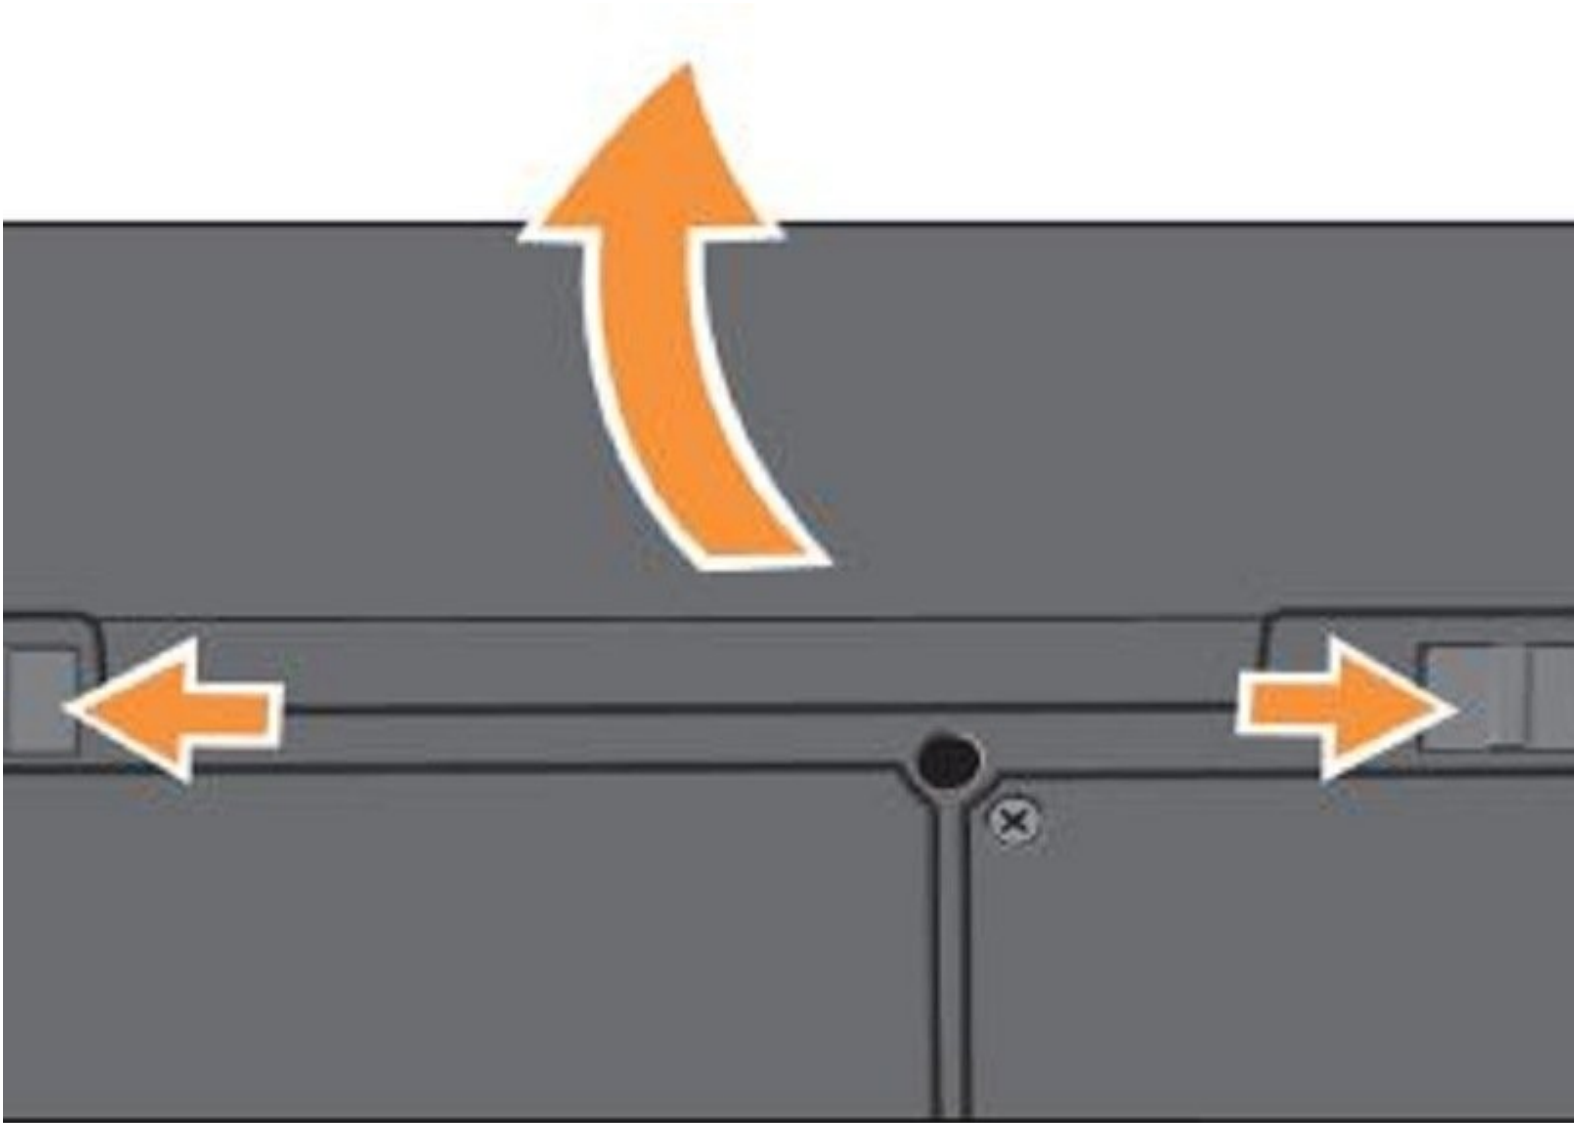

INTRODUCTION

In this guide, we will be showing you how to replace the Battery.

Step 1 — Sliding the Battery Switch

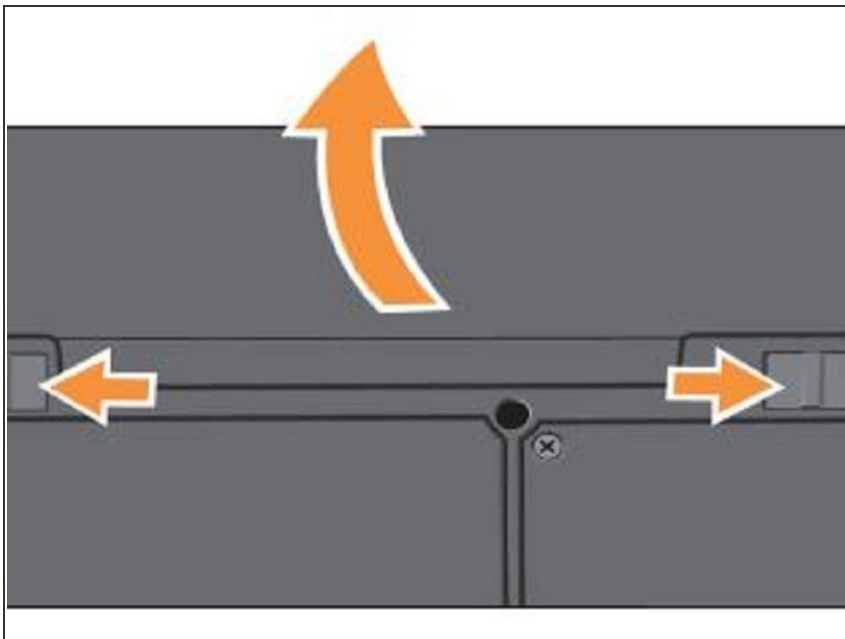

- Slide the battery lock switch to the right into the unlocked position.

Step 2 — Sliding the Battery Latch



- Slide the battery release latch to the left, and gently slide the battery out of the battery bay.