


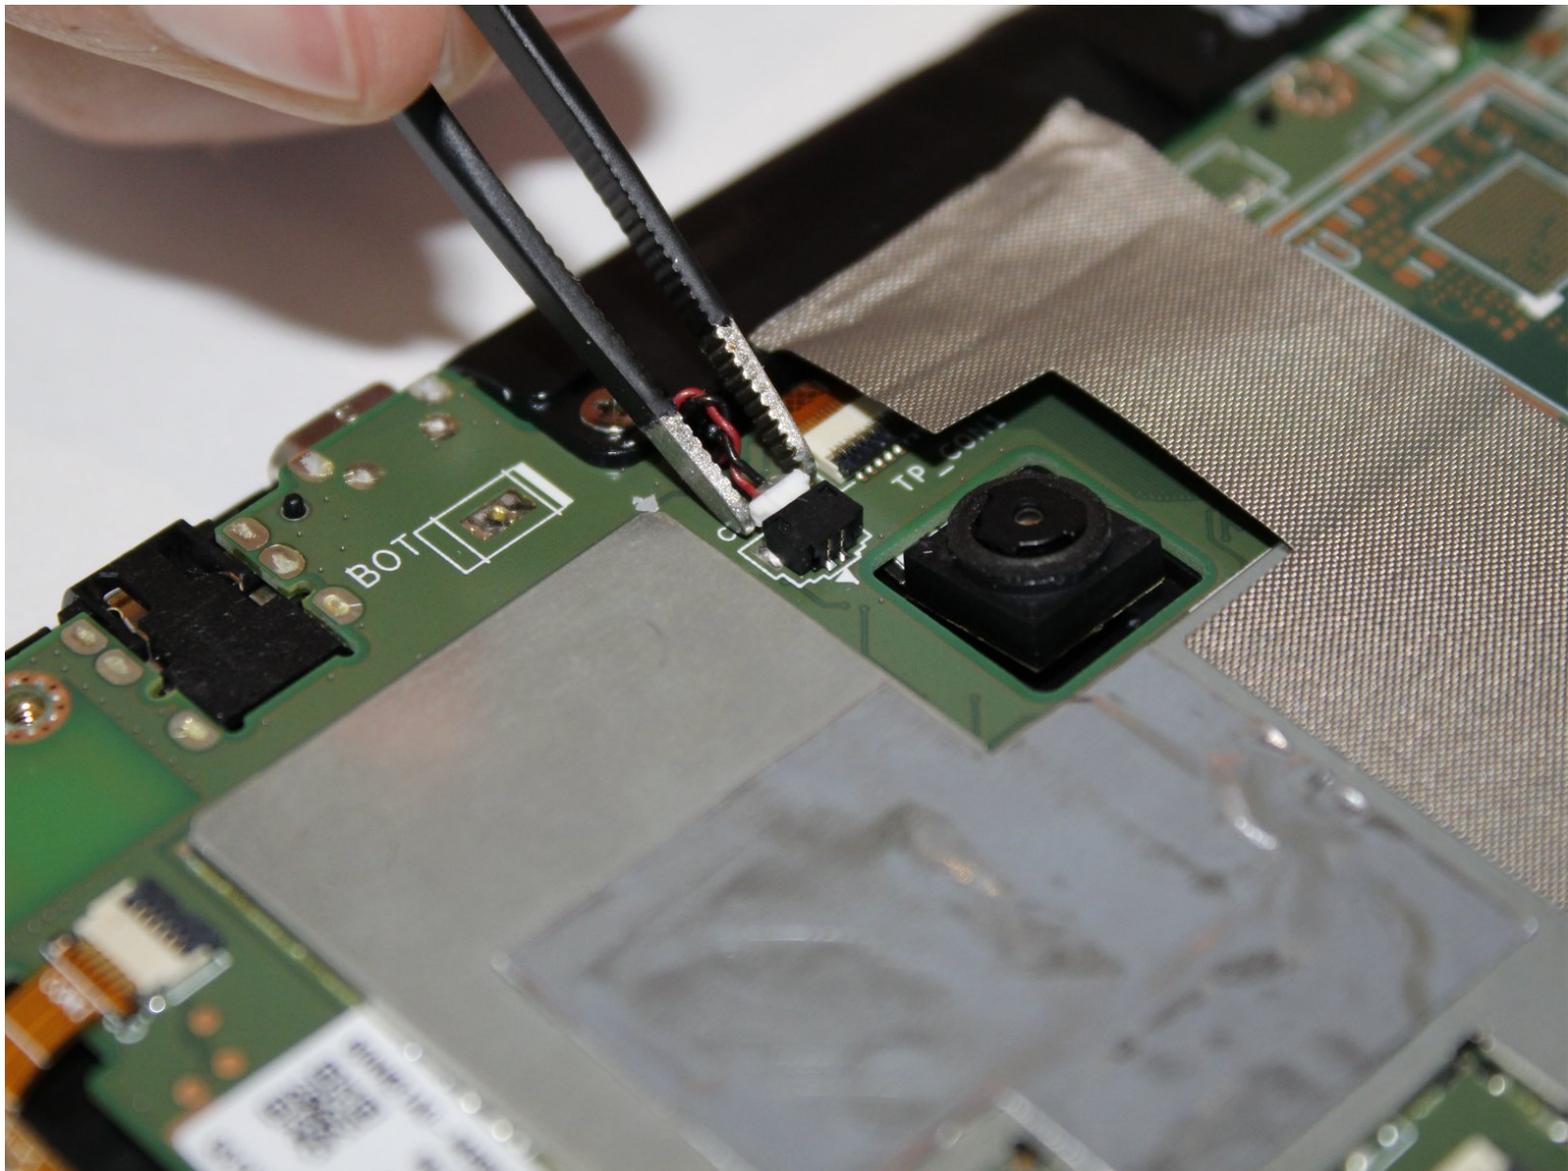

Asus Tablet MeMo Pad 7 ME7000C Speaker Replacement

Use this guide to replace a broken speaker in your Asus Tablet MeMo Pad 7 ME7000C.

Written By: Katie



INTRODUCTION

This guide will help you to replace a broken speaker in your Asus Tablet MeMo Pad 7 ME7000C.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Back Panel



- Flip over the tablet so the back cover is facing you. Hold the second button on the left below the volume buttons down until it powers off.

Step 2

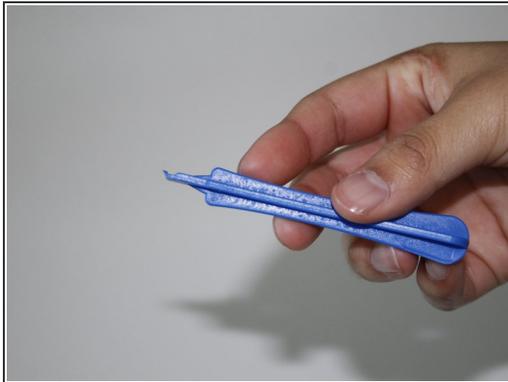




- Beginning in the upper corner of the tablet, use the blue plastic opening tool and run it along the seam. Do this slowly so you don't cause damage to the device.
- ⓘ If you are having trouble using the blue plastic opening tools, try using the black spudger instead.

Step 3




- Pull the rear panel and the display screen away from each other.

Step 4 — Battery

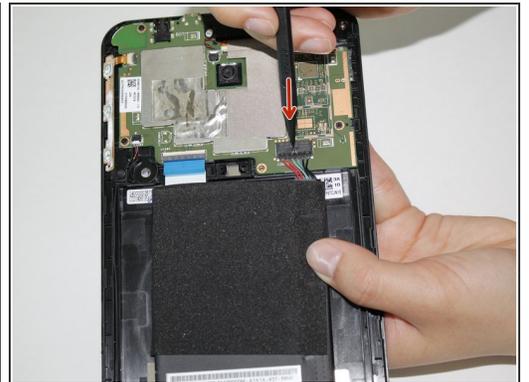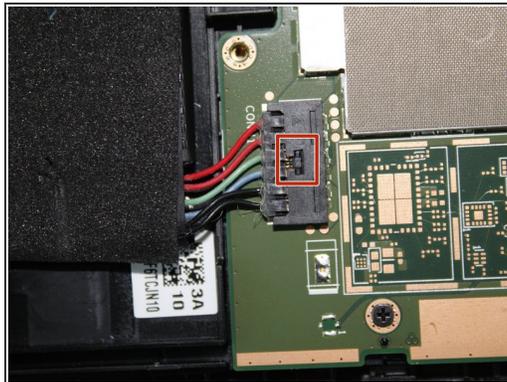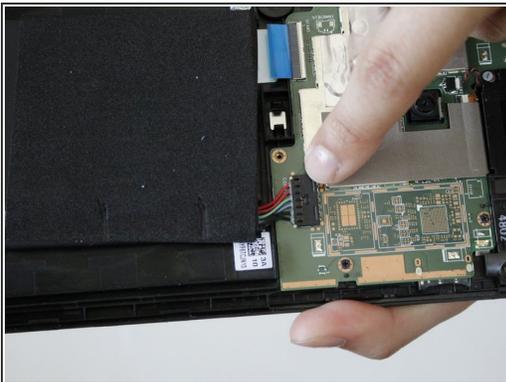



- Using the spudger, gently press on the black button on the plug port to release the battery from the plug.

Step 5

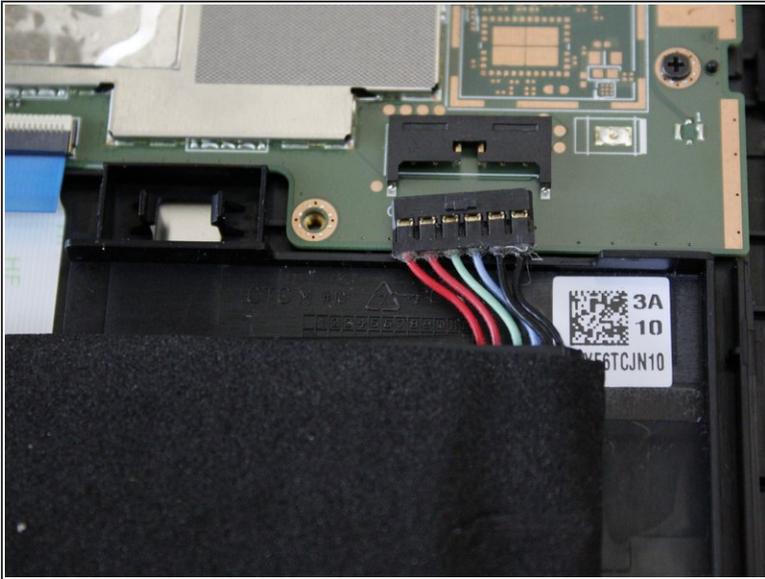


- Remove the battery from the device.

Step 6 — Speaker

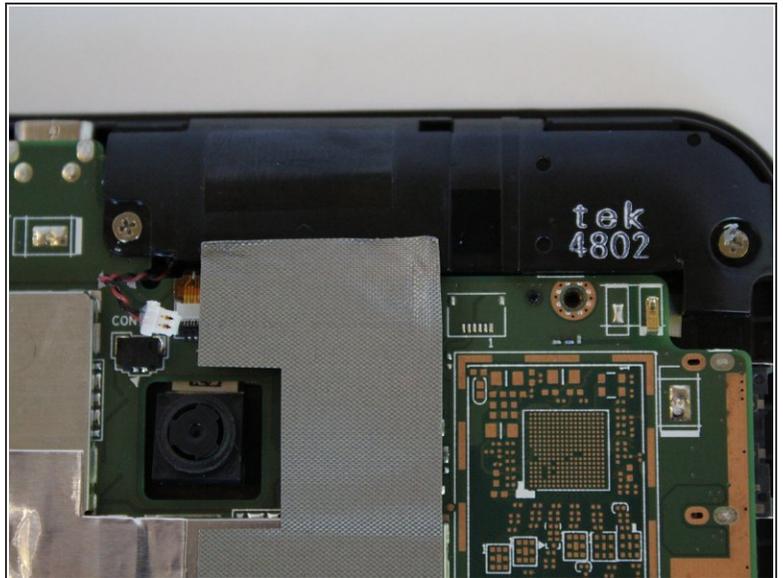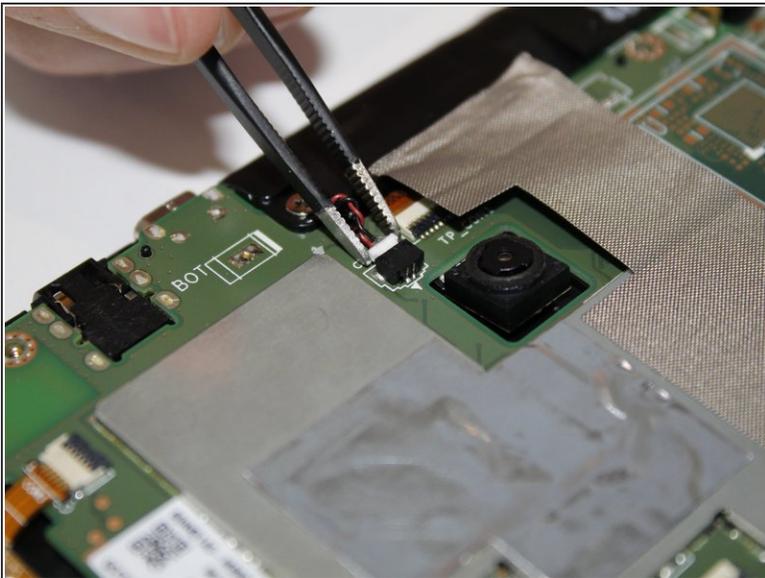


- Using the tweezers, disconnect the black clip.

Step 7

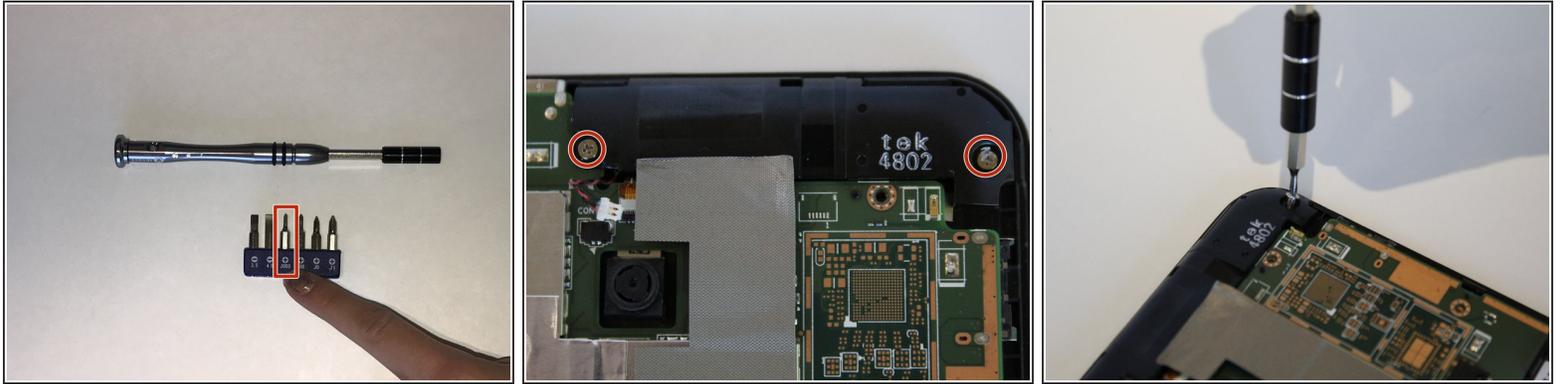

- Use the Phillips #000 Screwdriver to unscrew the 3mm Phillips head screws on the right and left corners of the speaker.
- ⓘ Use the magnetic pad to keep track of your screws while working.

Step 8

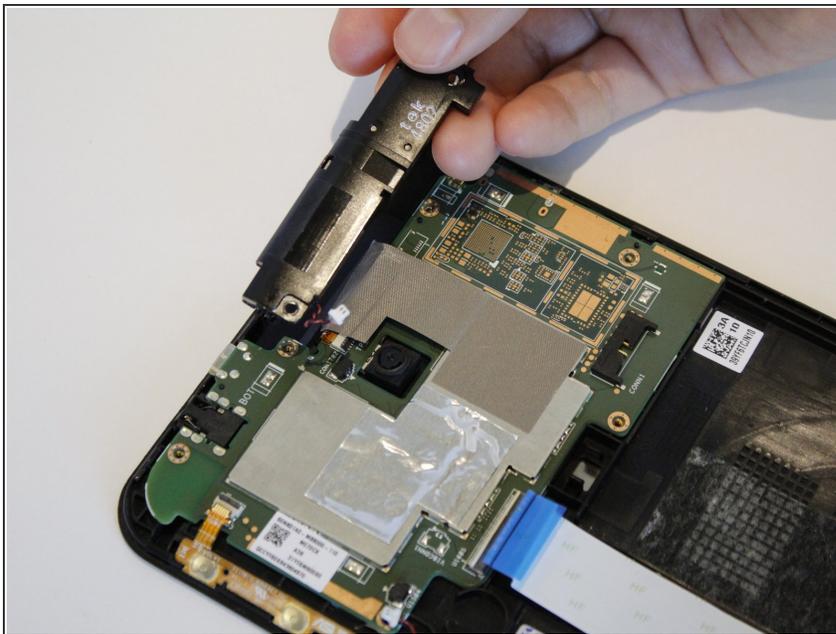

- Remove the speaker from the device.

To reassemble your device, follow these instructions in reverse order.