




Thermaltake Theron Plus Scroll Wheel Replacement

This guide will go through the steps of how to replace a broken scroll wheel on a Thermaltake Theron plus mouse.

Written By: Steven Kontra

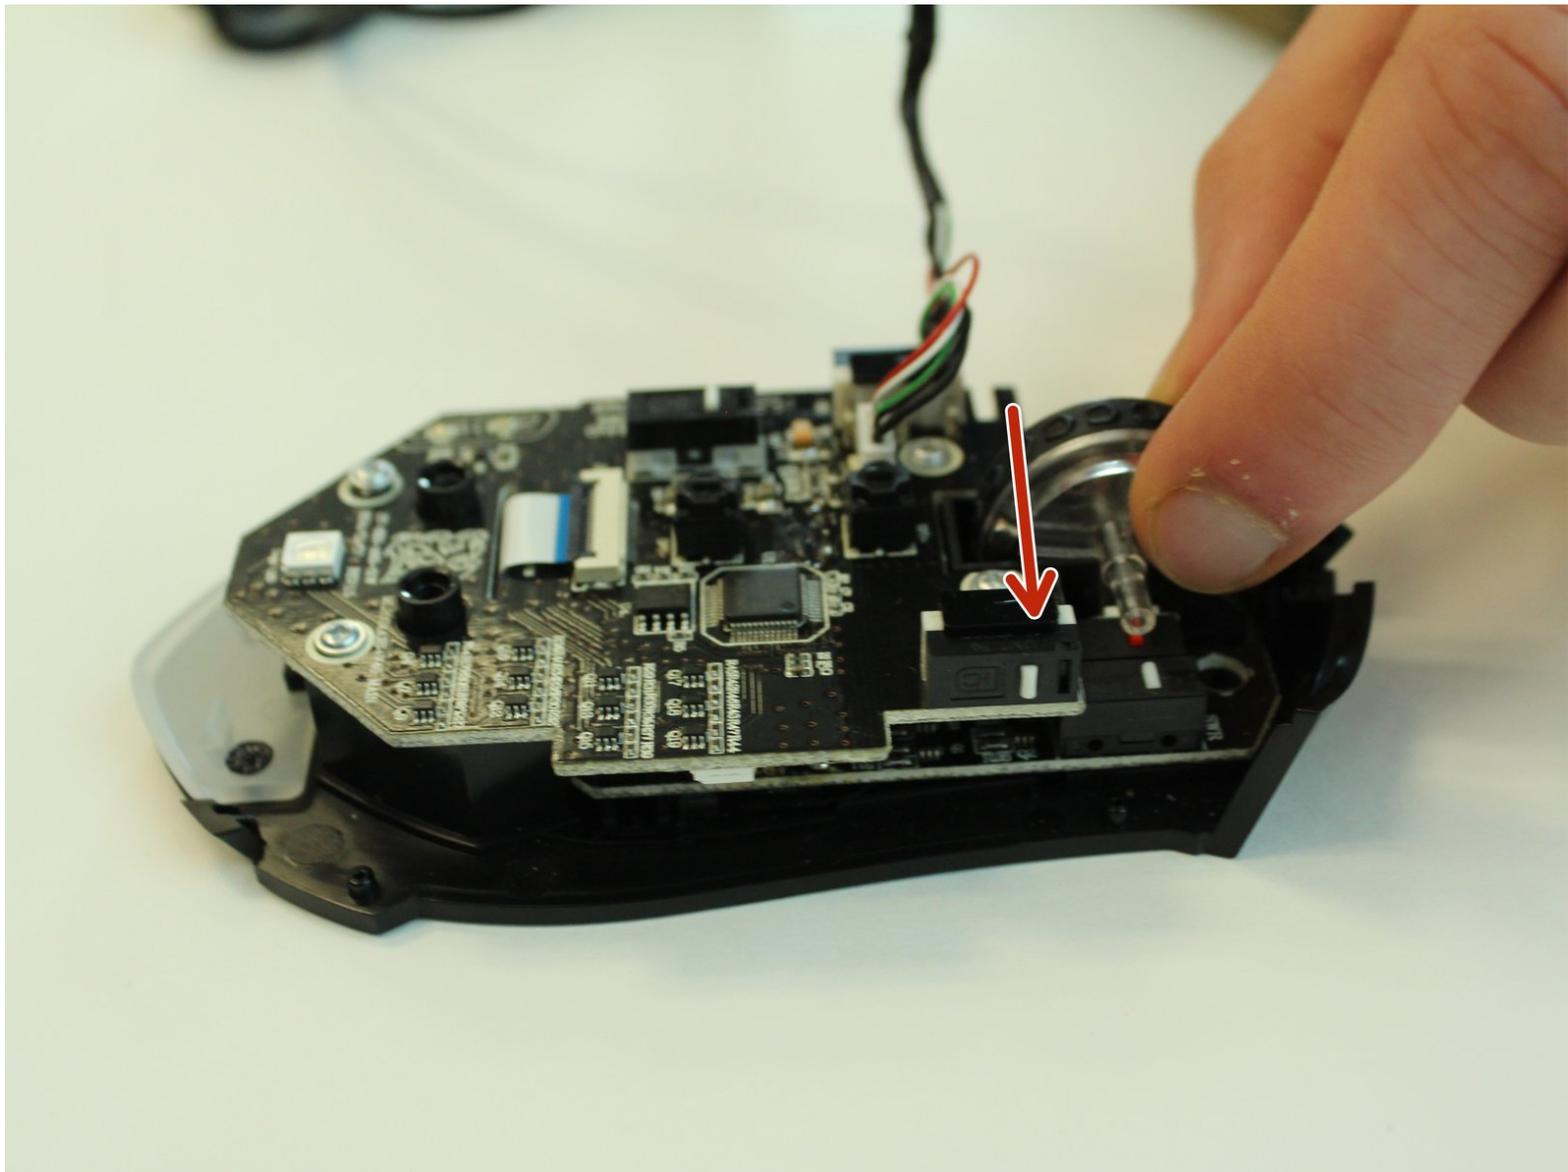

INTRODUCTION

If it seems that an element of your scroll wheel is busted, it may need replacing. This guide will outline all the necessary steps to swap out a defective scroll wheel. With all the required parts and tools in hand, this guide should take but minutes to complete. Once finished, the scroll wheel for your Thermaltake Theron Plus Smart Mouse should be in working order.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Thermaltake Theron plus scroll wheel](#) (1)

Step 1 — Top cover





- Remove the plastic cover and pack of weights.
- Remove the two 1.0 mm foam covers with tweezers.
- Peel away the plastic screw cover with tweezers.

Step 2



- Remove the four 1.0 mm screws with a Ph #1 screwdriver.
- Gently remove the top of the mouse.

Step 3 — Scroll Wheel

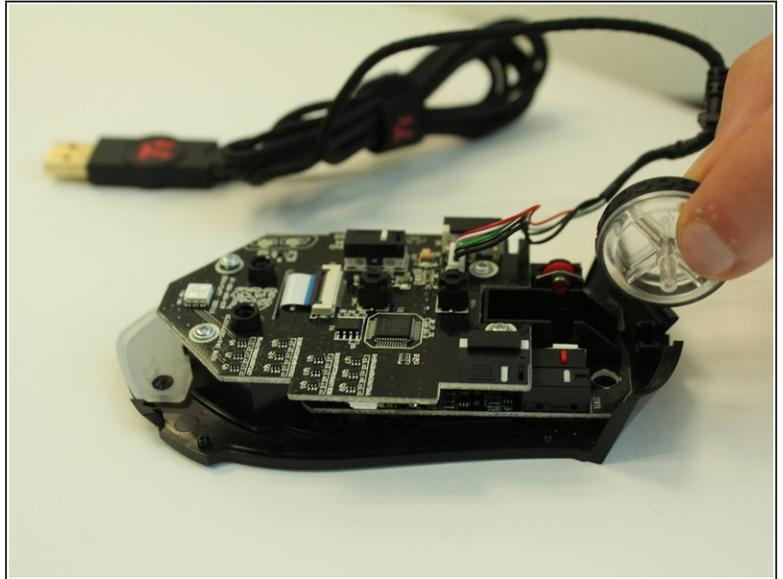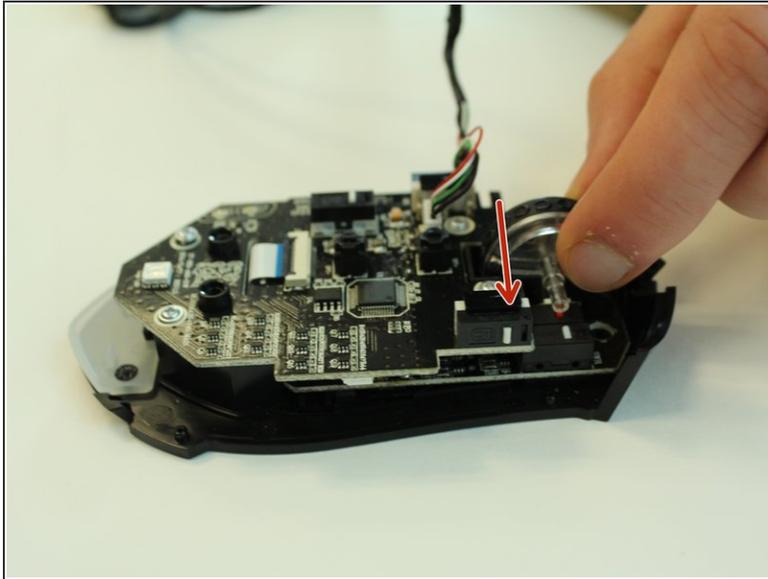

- Grasp the scroll wheel and wiggle it out in the direction opposite the socket.
- ⓘ Be careful not to break the small plastic arms on either side of the scroll.

To reassemble your device, follow these instructions in reverse order.