




# Samsung Galaxy Sol Headphone Jack Replacement

In this guide, we will teach you how to replace your headphone jack.

Written By: Tanner Monen

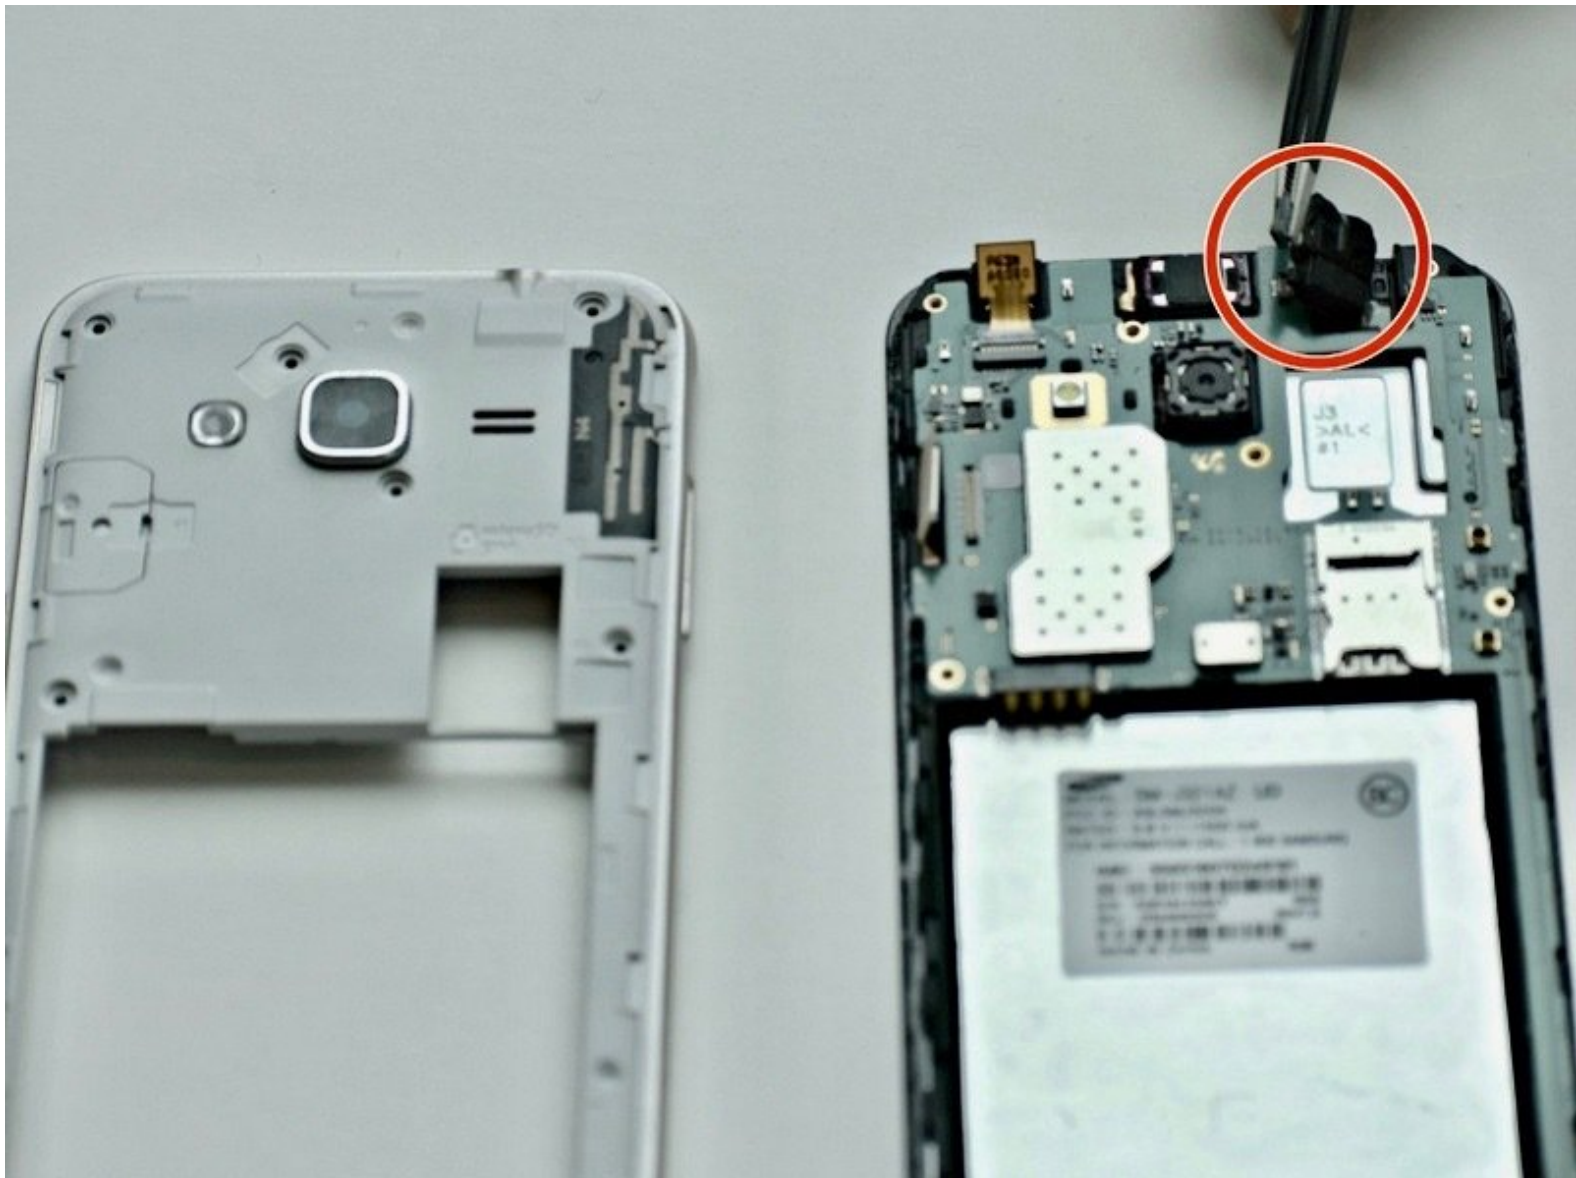

## INTRODUCTION


For the Cricket Samsung Galaxy Sol, this replacement guide will teach you how replace the headphone jack audio plug in. Some reasons why this might need replaced are things like water damage, loose headphone jack and a bad connection from the cord.



### TOOLS:


- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

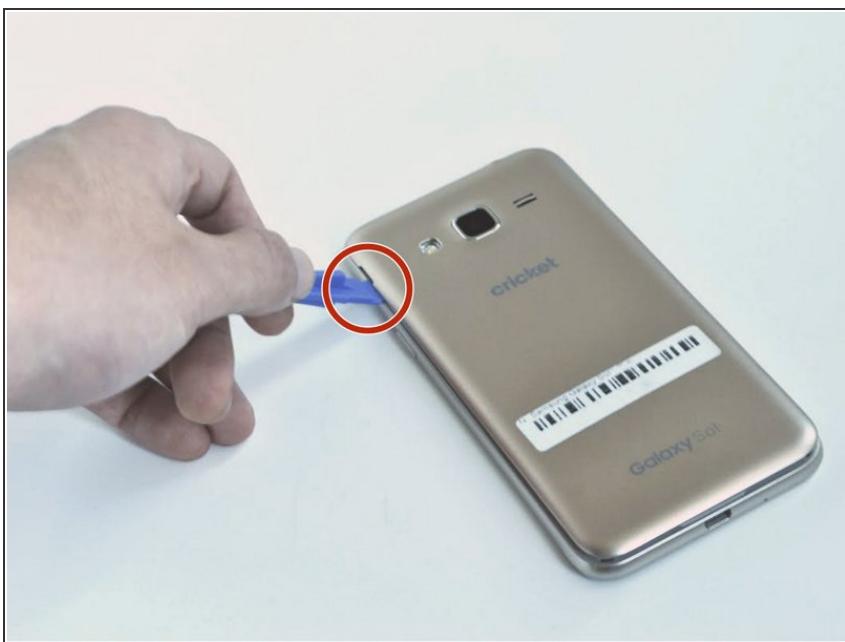


- Remove the back case of the phone by using an opening tool or fingernail to lift the divot on the top left side.

## Step 2

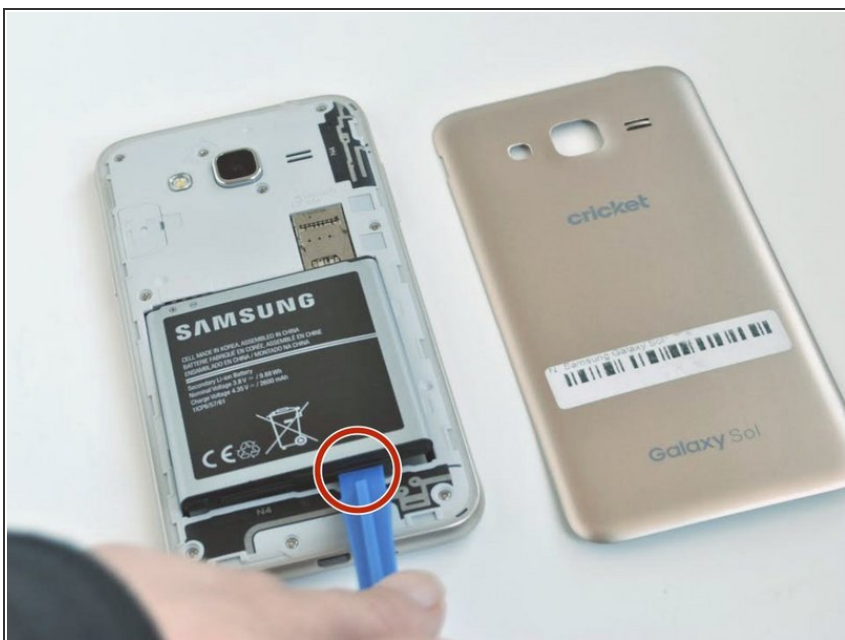


- Remove the battery by lifting from the bottom up with an opening tool or a small flat tool such as a credit card.

## Step 3 — Headphone Jack

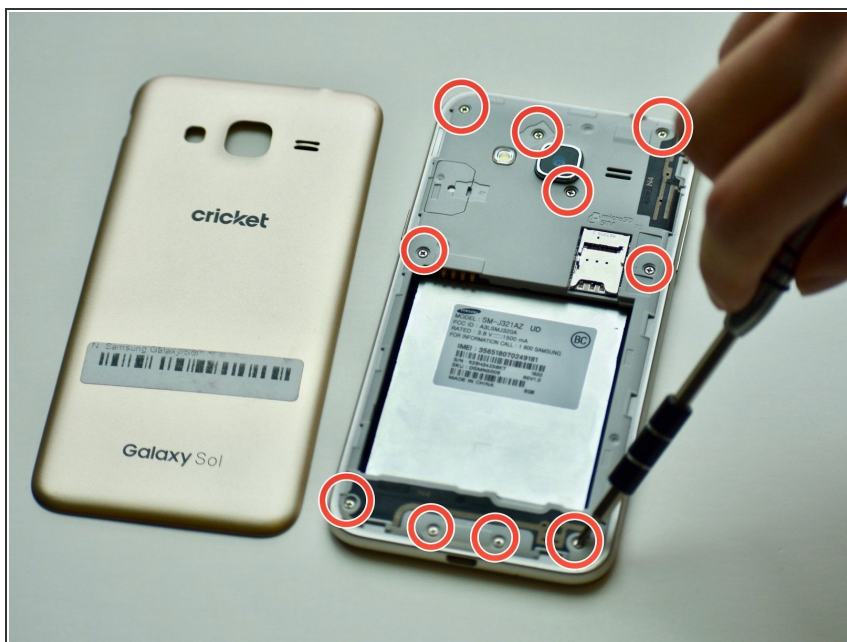


- Remove the grey back of the phone by unscrewing all ten 0.4mm screws with a Phillips #00 screw bit.

## Step 4

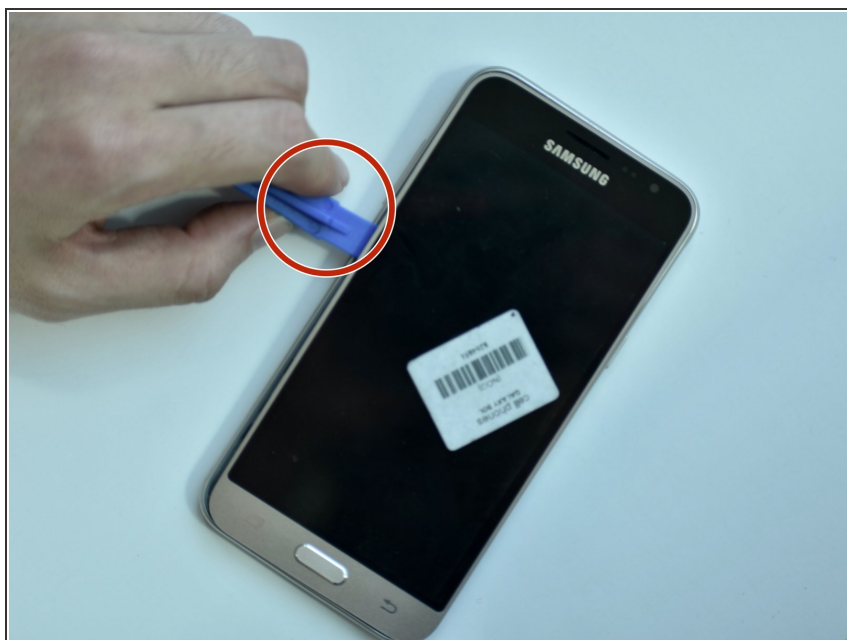

- Turn the phone around and remove the screen using the plastic tool.

## Step 5

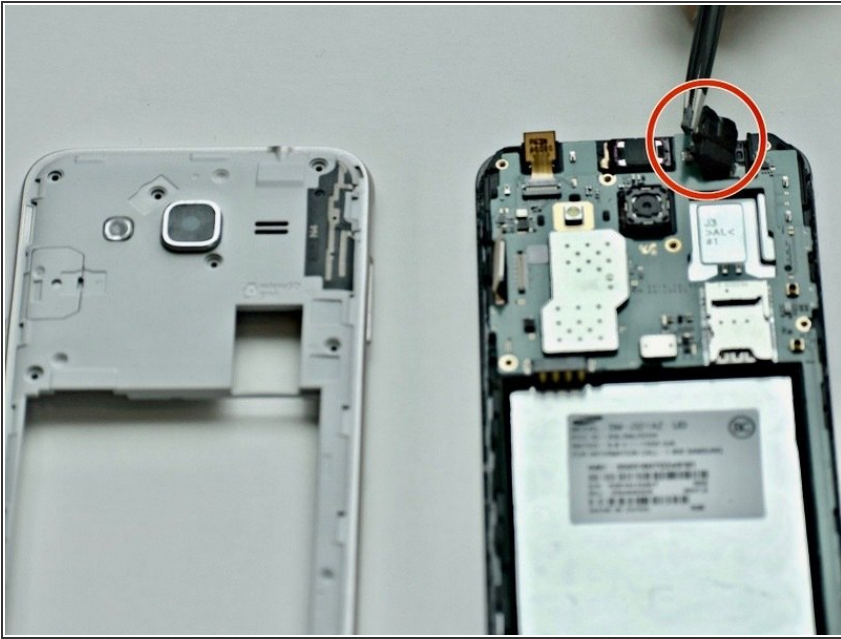

- Remove the headphone jack at the top of of the phone by carefully removing it with tweezers.

To reassemble your device, follow these instructions in reverse order.