




Samsung Galaxy Sol Speaker Replacement

In this guide, you will learn how to replace the speaker of a Samsung Galaxy Sol.

Written By: Jessica Naslund

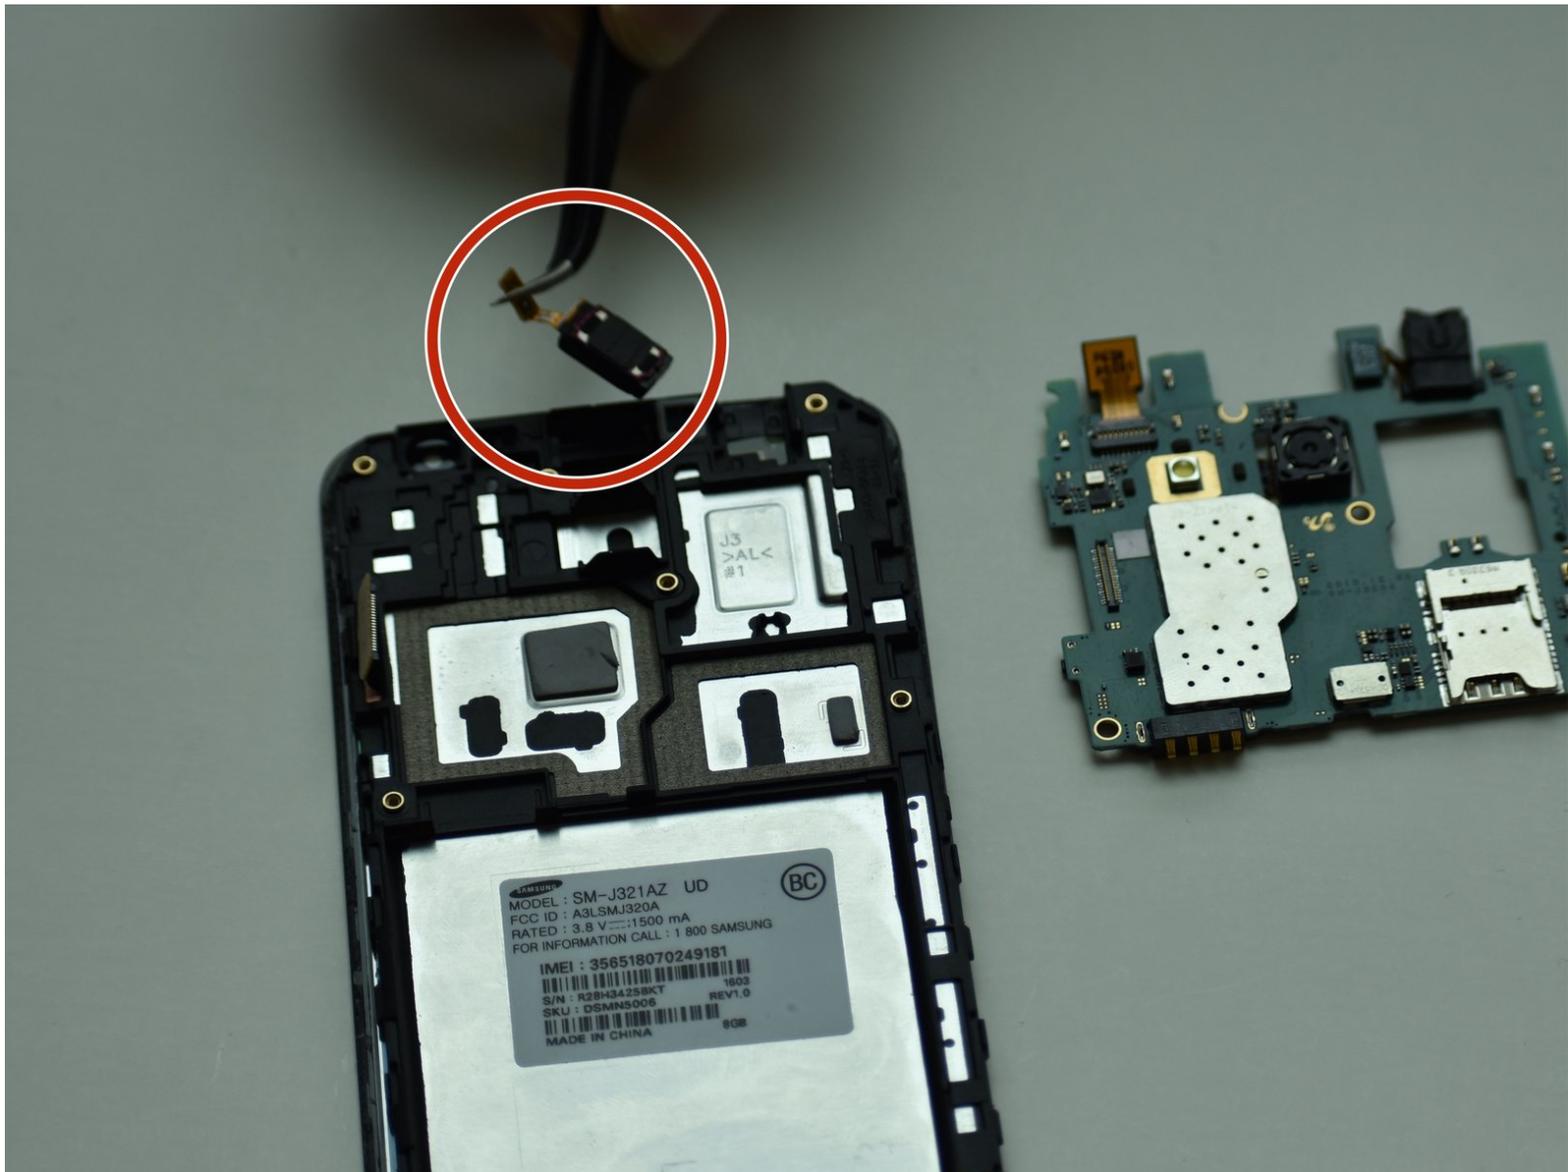


INTRODUCTION

For the Cricket Samsung Galaxy Sol, this guide will teach you how to replace the speaker. Some problems that may have caused issues with your speaker could be water damage, an old device, or a dirty speaker. This guide will show you how to easily replace your device's speaker.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

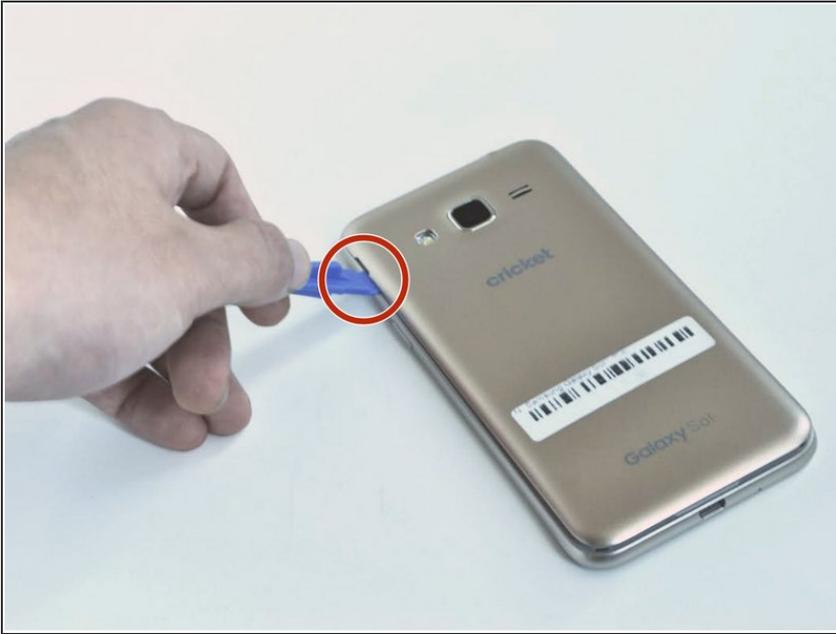

- Remove the back case of the phone by using an opening tool or fingernail to lift the divot on the top left side.

Step 2

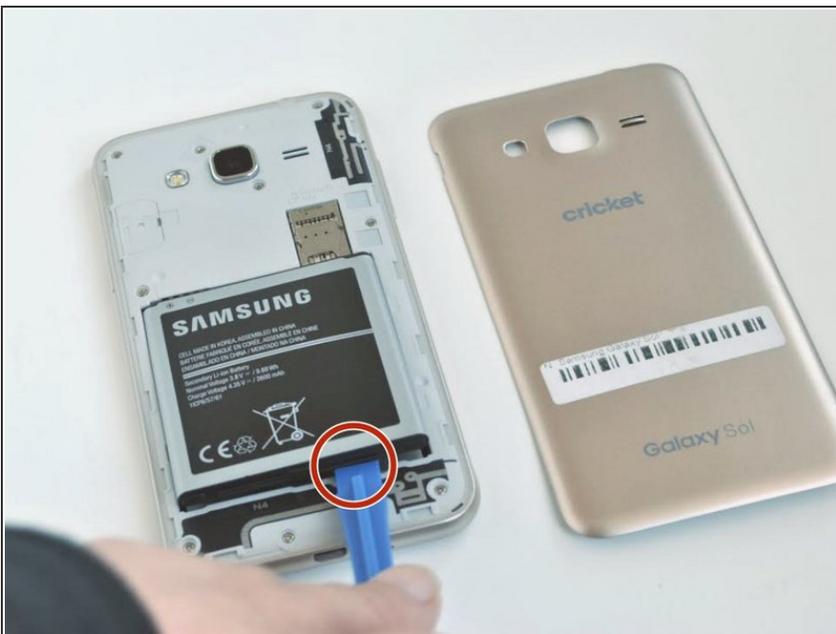

- Remove the battery by lifting from the bottom up with an opening tool or a small flat tool such as a credit card.

Step 3 — Speaker




- Remove all ten 0.4mm screws by unscrewing them with the Phillips #00 screwdriver. After this, you will be able to lift up and remove the grey plastic piece.

Step 4



- This is the speaker that you will be removing in the next step.

Step 5

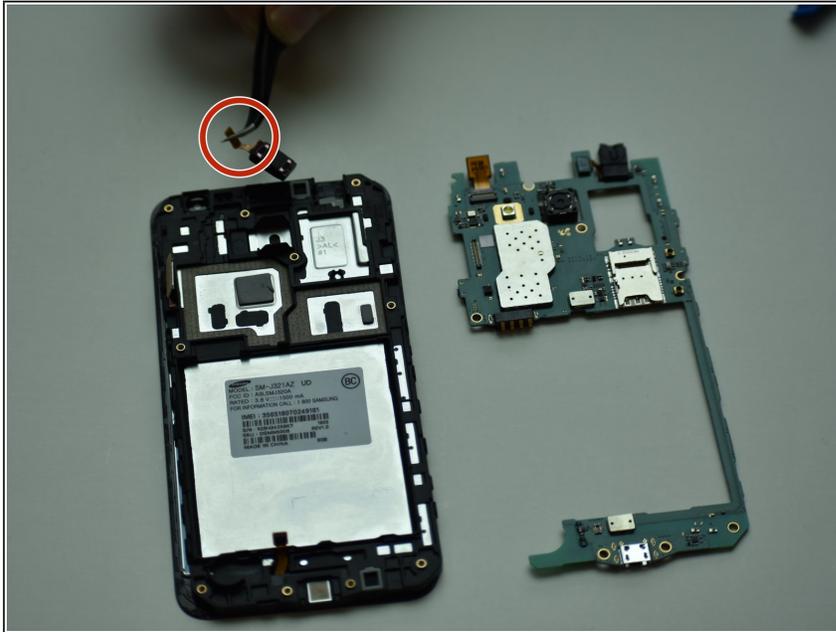

- Using the curved tweezers, grab ahold of the gold piece of the speakers and slowly lift out of the speaker slot.

To reassemble your device, follow these instructions in reverse order.