


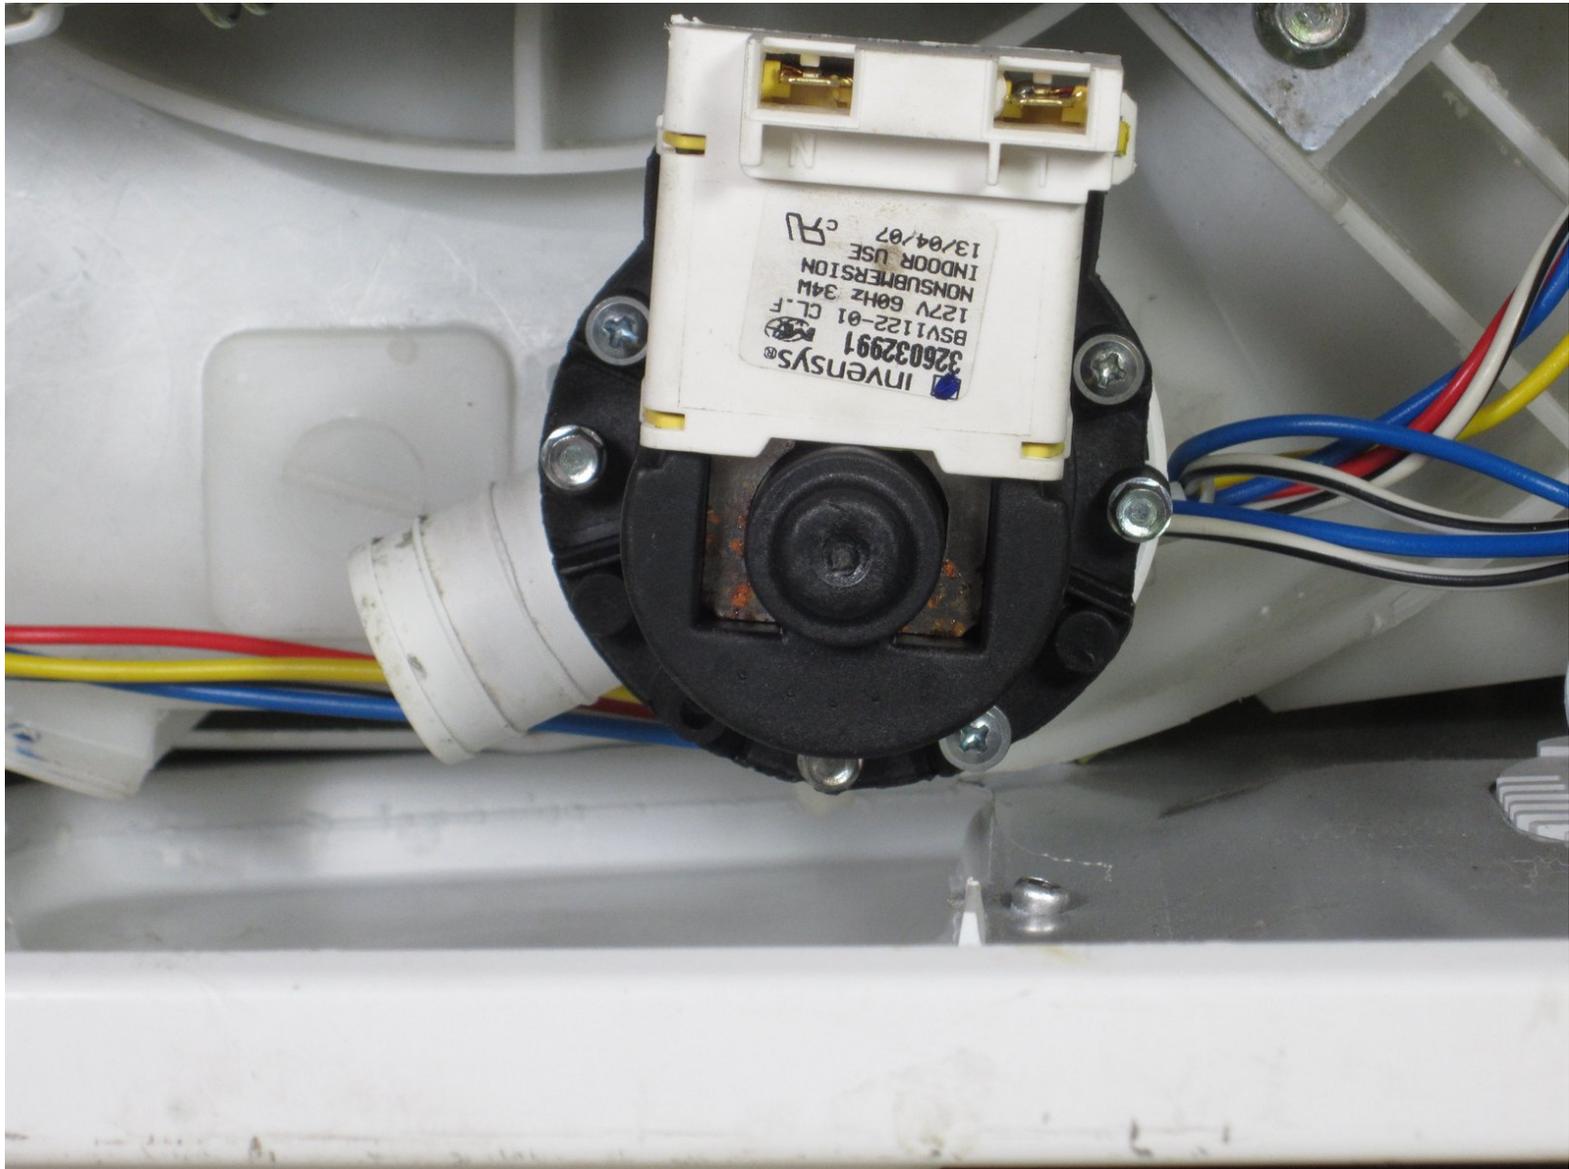

Kenmore 110 Series Washing Machine Water Pump Replacement

Replace a faulty water pump on your Kenmore 110 Series Washing Machine.

Written By: Robert Trout




INTRODUCTION

Use this guide to replace a faulty water pump on your Kenmore 110 Series Washing Machine.

TOOLS:

- [1/4" Socket](#) (1)
 - [Socket Wrench](#) (1)
-


Step 1 — Water Pump

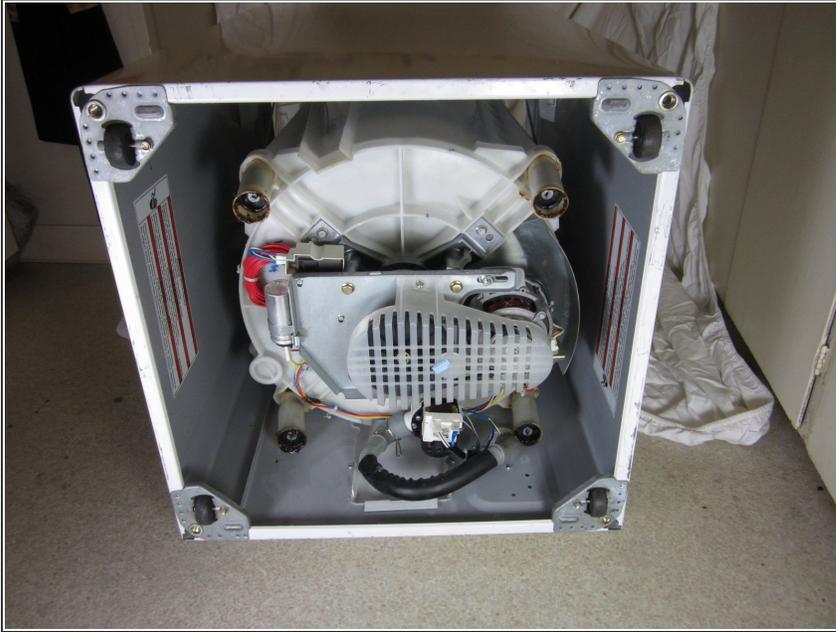

⚠ Unplug the washing machine!

- Carefully lay washing machine on its back.

Step 2

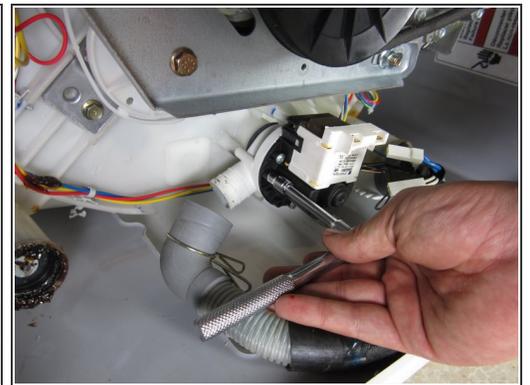

- Carefully remove both wire harnesses connected to the pump.
- Squeeze and pull back hose clamp.
- Twist drain hose off of pump.
- Using a 1/4" socket wrench, remove the three mounting screws.
- Pull the pump out of place.

i Pulling the pump away takes a little force.

To reassemble your device, follow these instructions in reverse order.