




Samsung Galaxy Sol Front Camera Replacement

If you are having trouble with your front camera, this guide will teach you how to replace it.

Written By: Tanner Monen

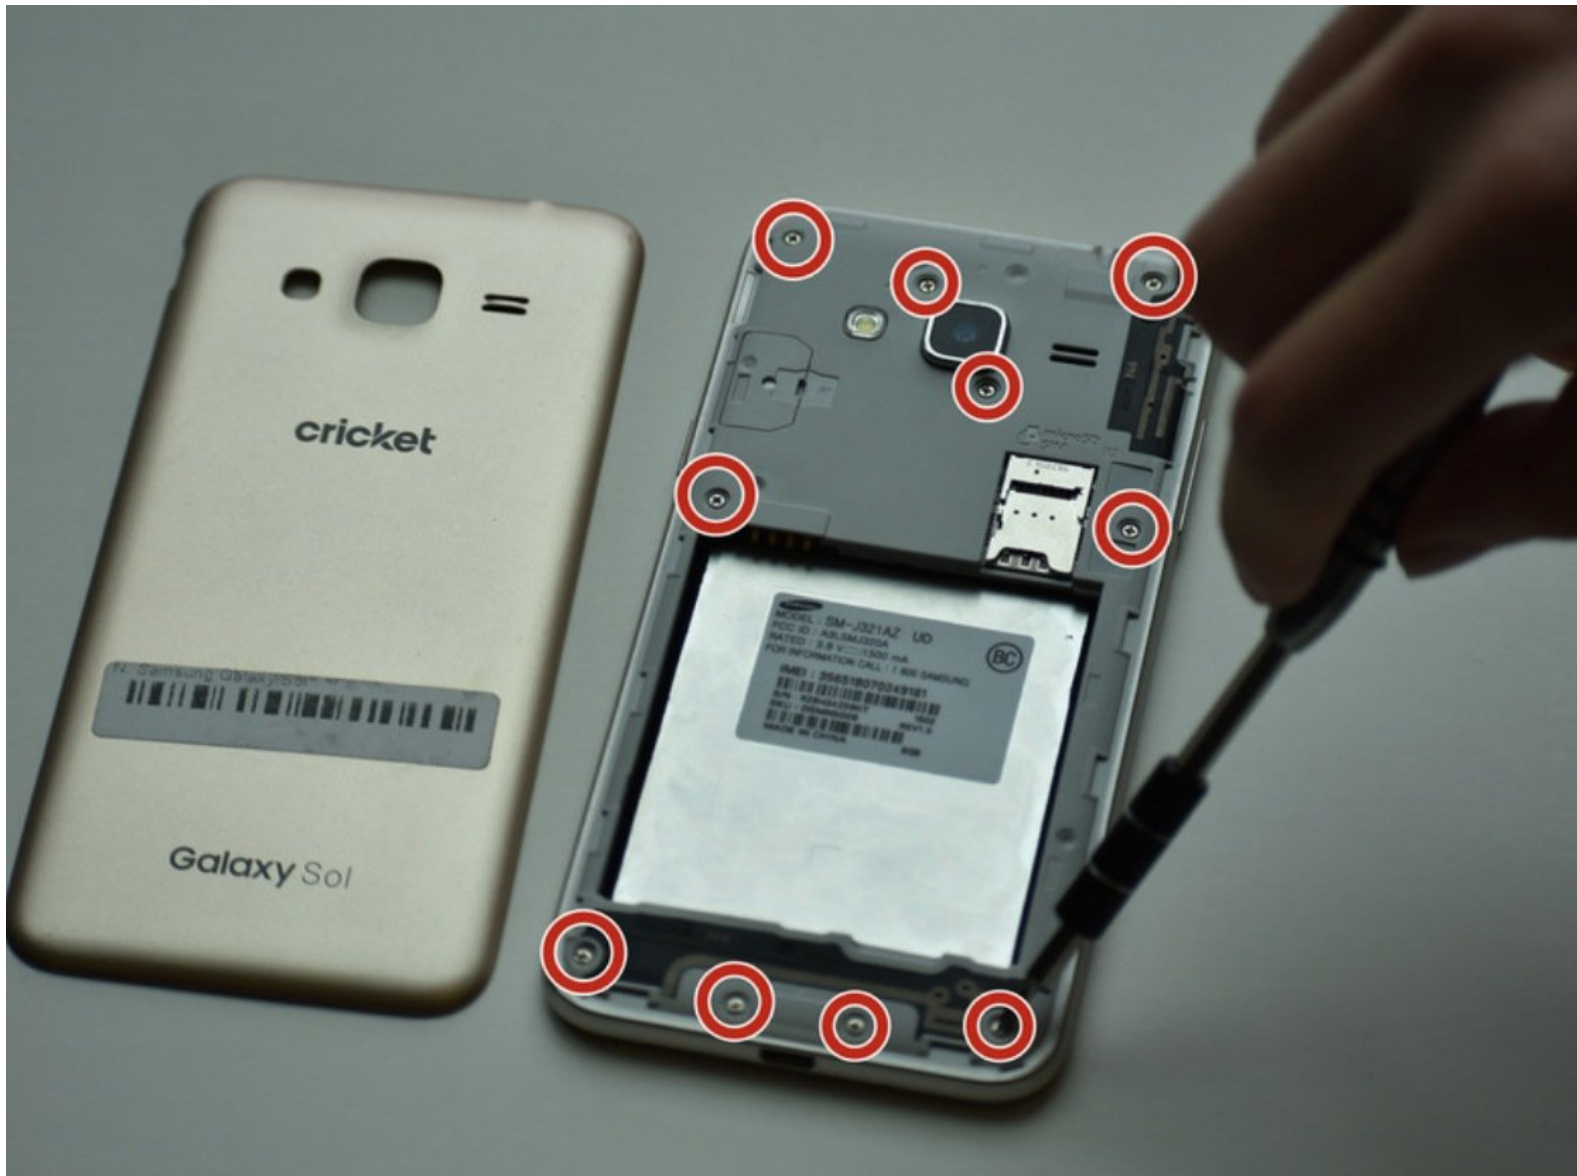


INTRODUCTION

For the Cricket Samsung Galaxy Sol, this guide will teach you how to replace the Front Camera. Some problems that might cause this to become blurry could be water damage or dust blocking the camera.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

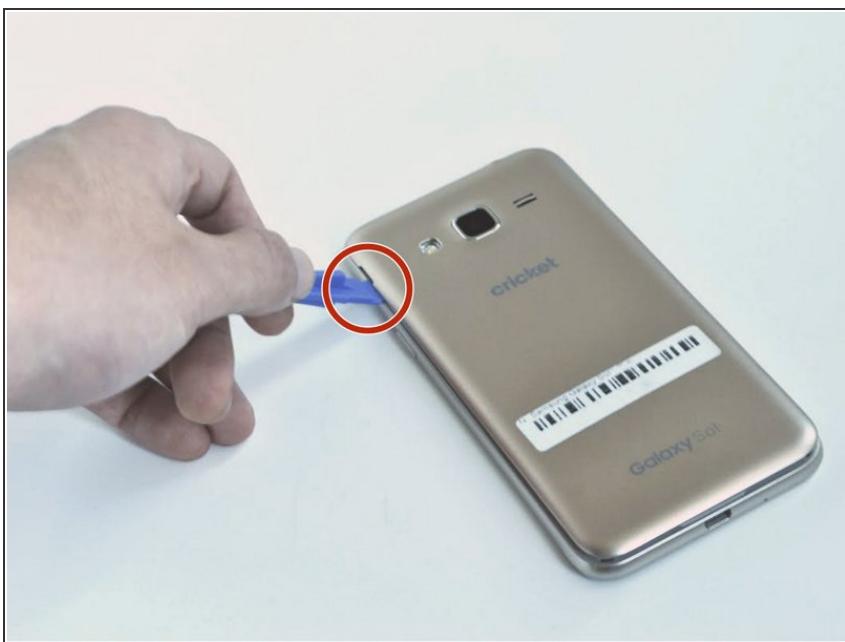


- Remove the back case of the phone by using an opening tool or fingernail to lift the divot on the top left side.

Step 2

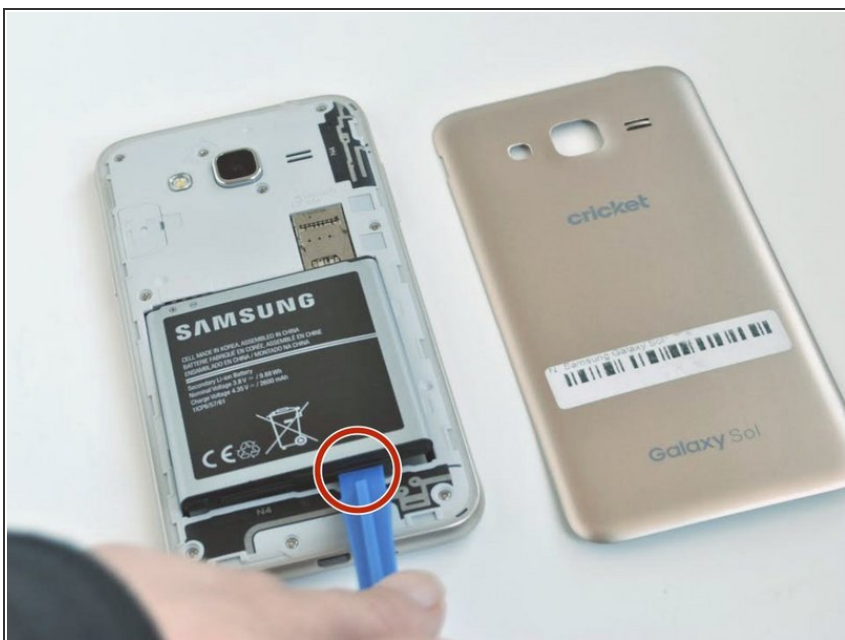


- Remove the battery by lifting from the bottom up with an opening tool or a small flat tool such as a credit card.

Step 3 — Front Camera

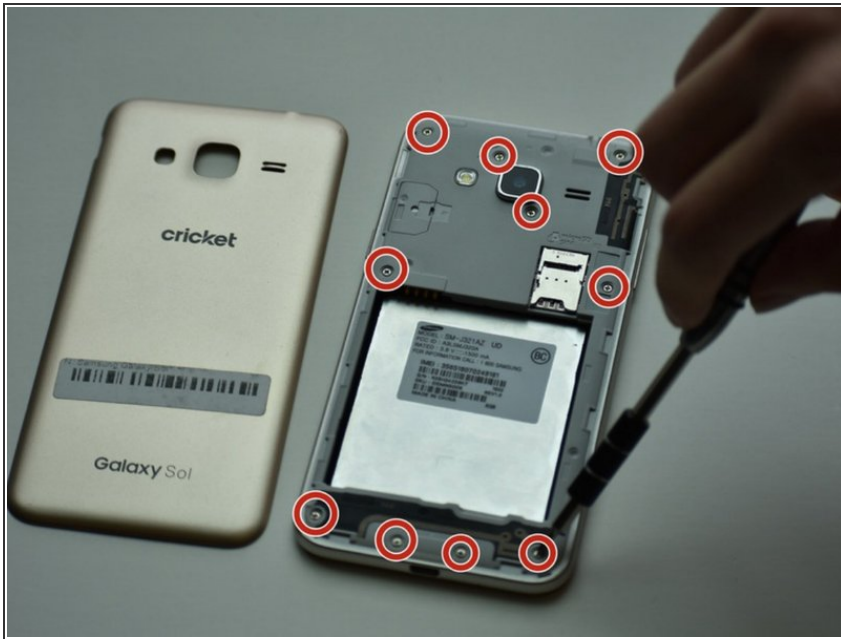

- Remove all ten 0.4 mm screws with a Phillips #00 screw bit. After this, you will be able to lift up and remove the grey plastic piece.

Step 4

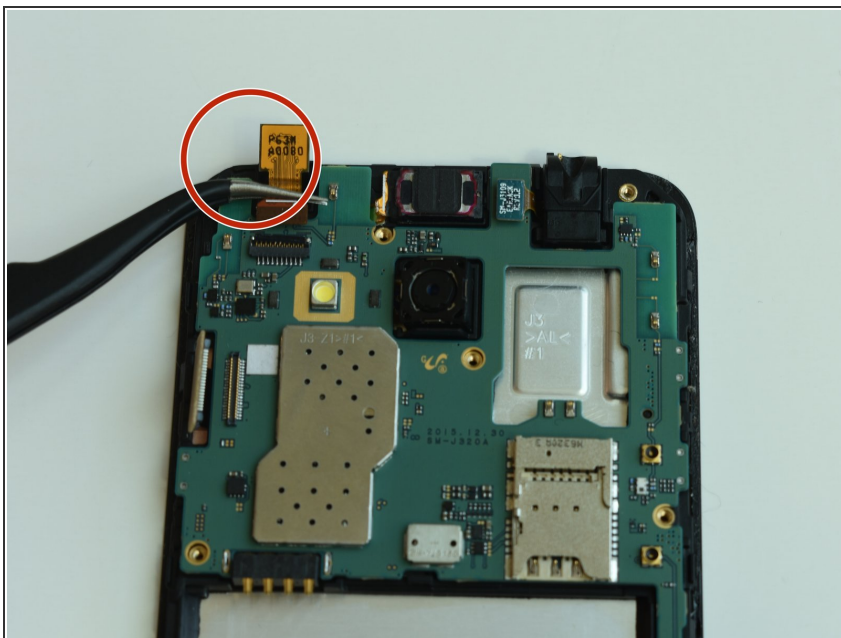

- Remove the front camera at the top left of the phone be carefully removing it with tweezers.

To reassemble your device, follow these instructions in reverse order.