




Dell Inspiron 15 Gaming 7566 Battery Replacement

Written By: Terrence15

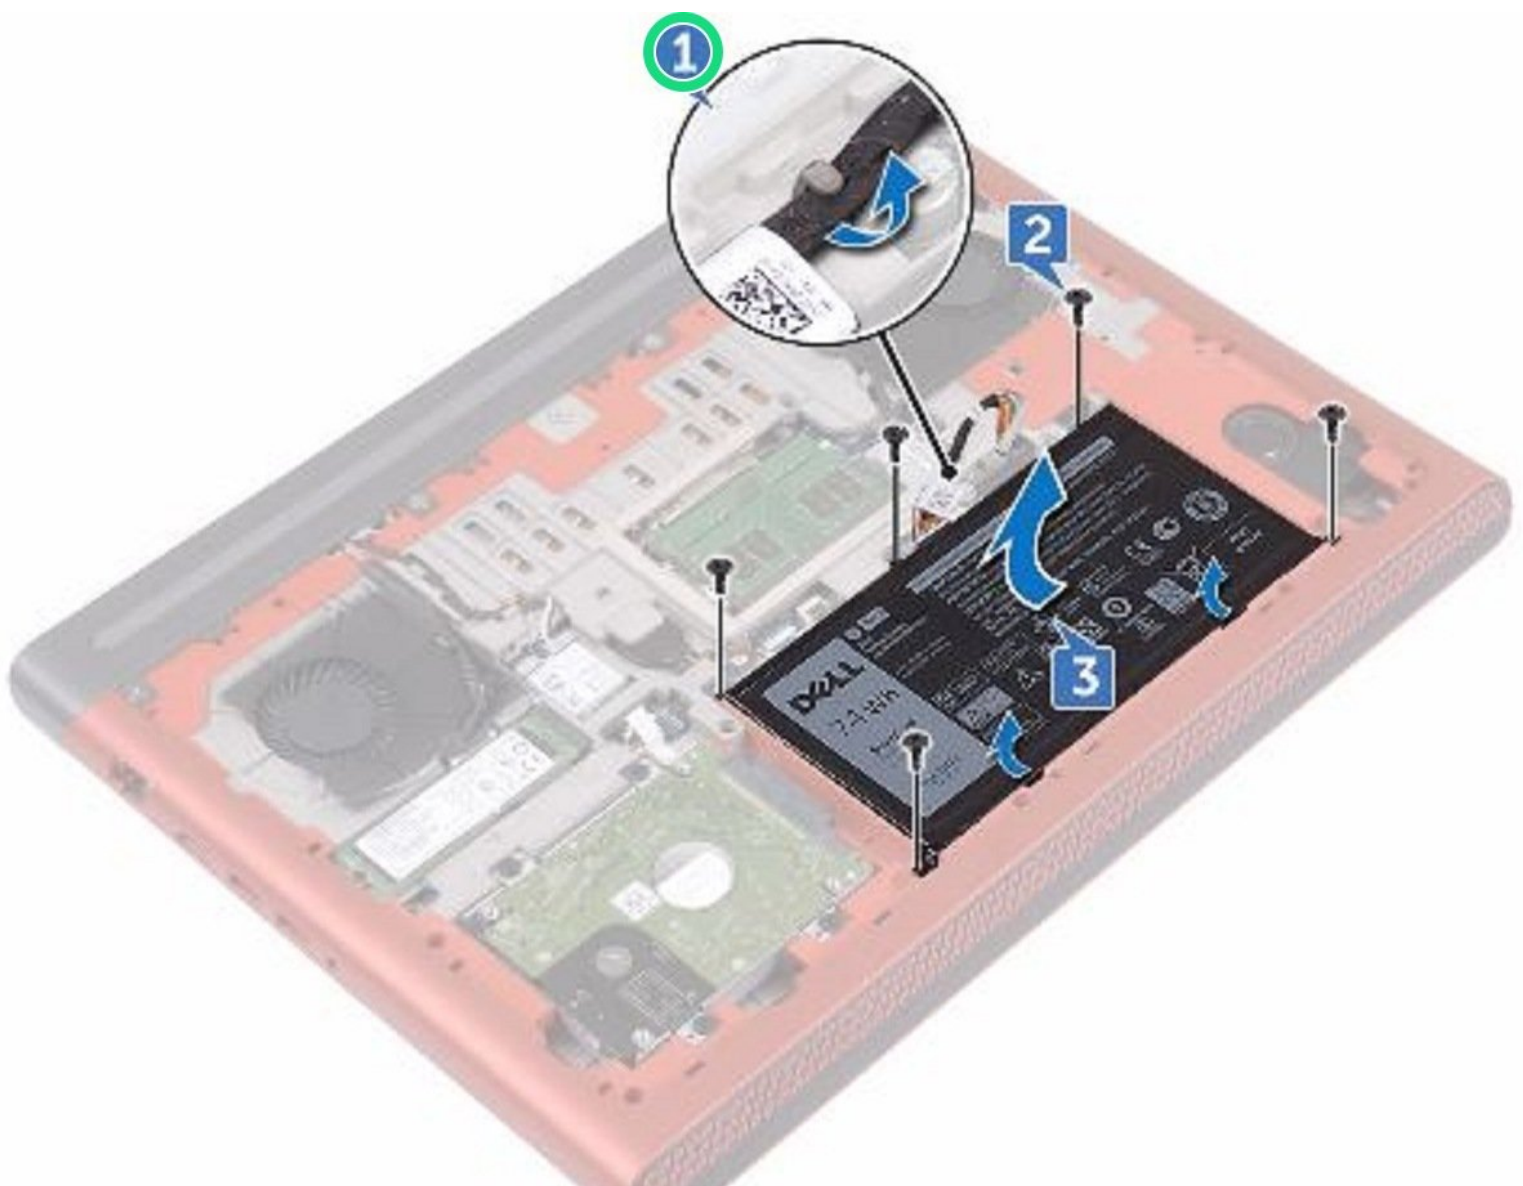

INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Remove the Battery Cable

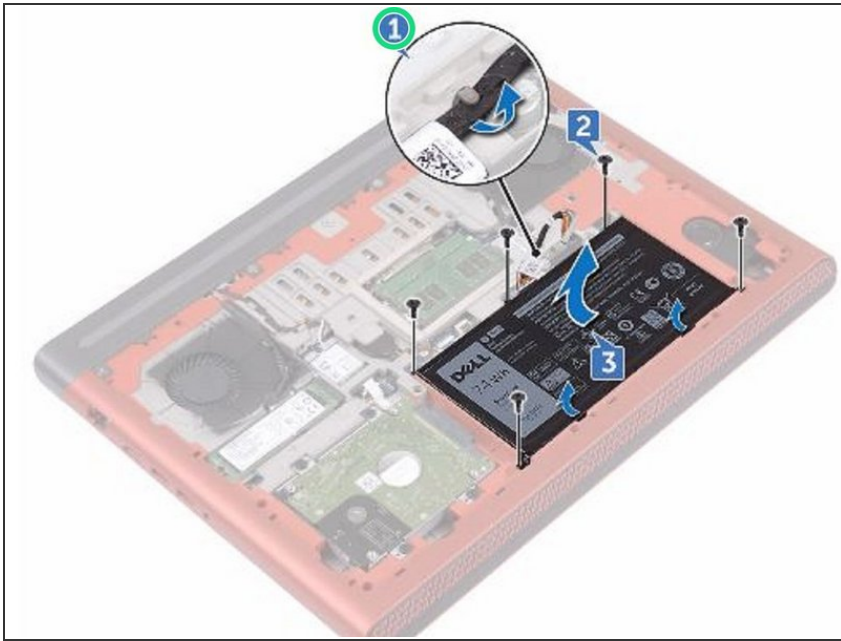

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the battery cable from the routing guide on the computer base.

Step 2 — Remove the Screws

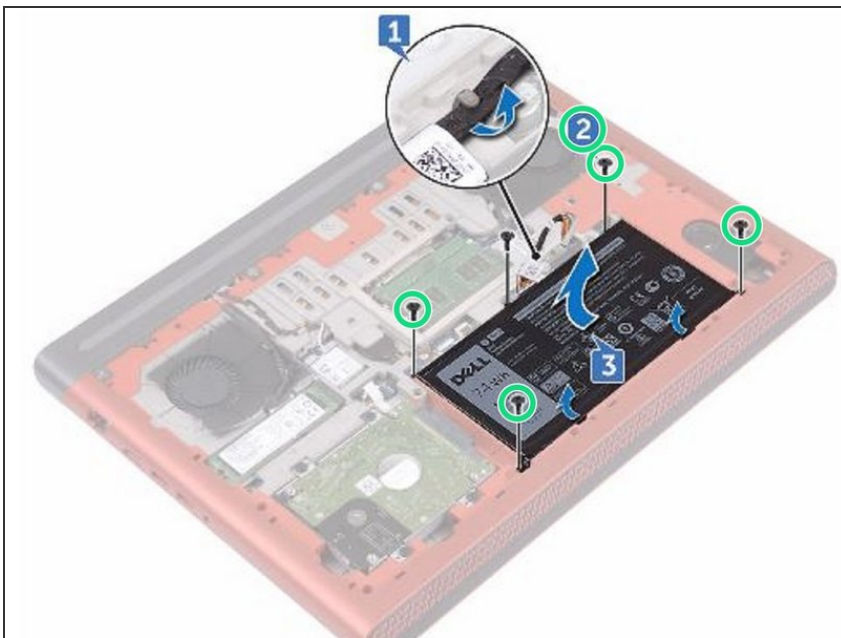

- Remove the five screws (M2x4 T8) that secure the battery to the computer base.

Step 3 — Lifting the Battery

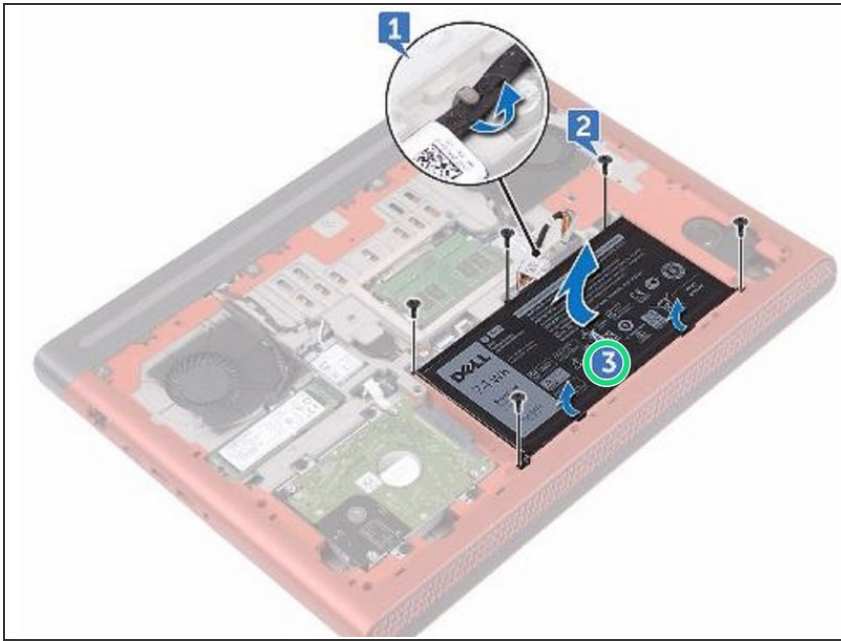


- Lift the battery at an angle off the computer base.

Step 4 — Grounding the Board




- Turn the computer over, open the display, and press and hold the power button for five seconds to ground the system board.

Step 5 — Sliding the Battery

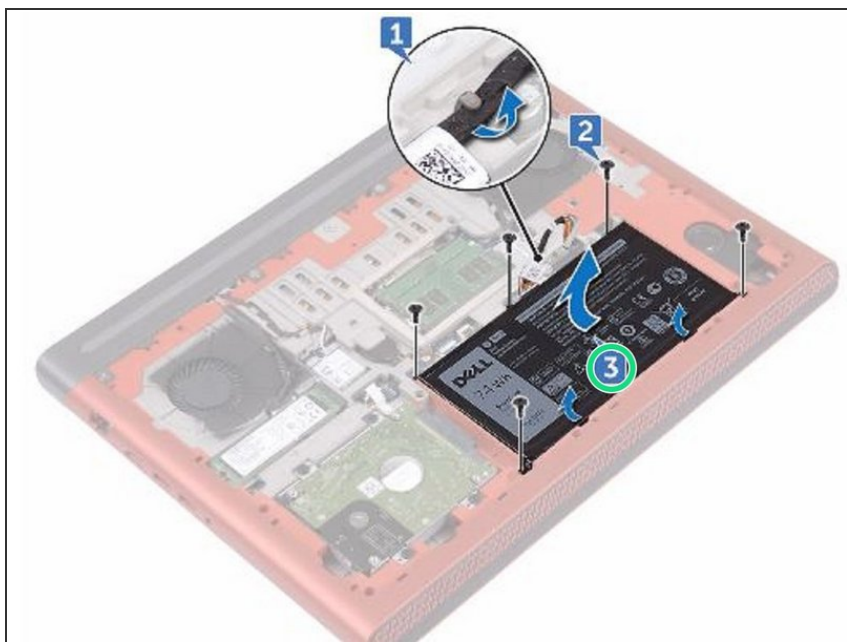


- Slide the **NEW** battery in the slot on the computer base and align the screw holes on the battery with the screw holes on the computer base.

Step 6 — Replace the Screws

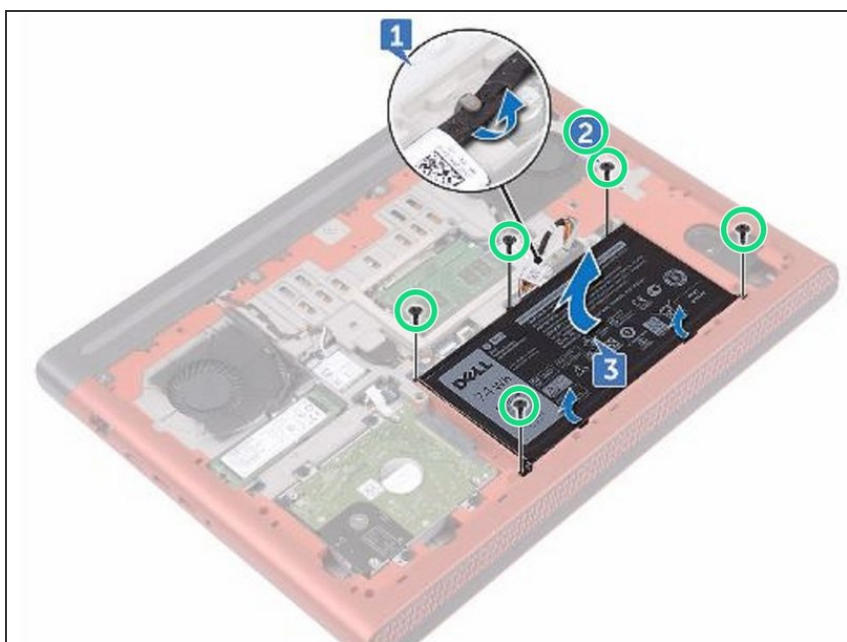

- Replace the five screws (M2x4 T8) that secure the battery to the computer base.

Step 7 — Route the Battery Cable

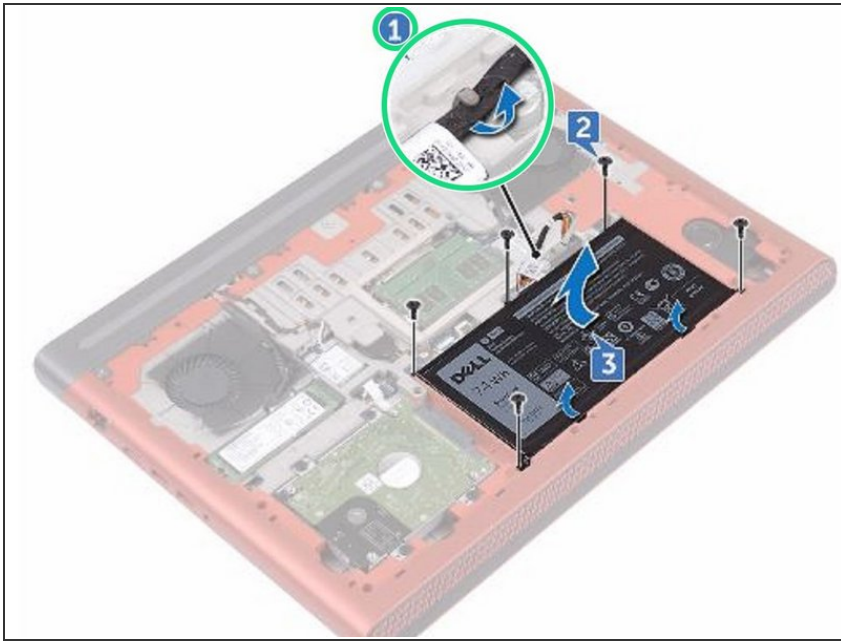

- Route the battery cable through the routing guides on the computer base.