




Dell Inspiron 1545 Memory Module Replacement


Written By: Terrence15

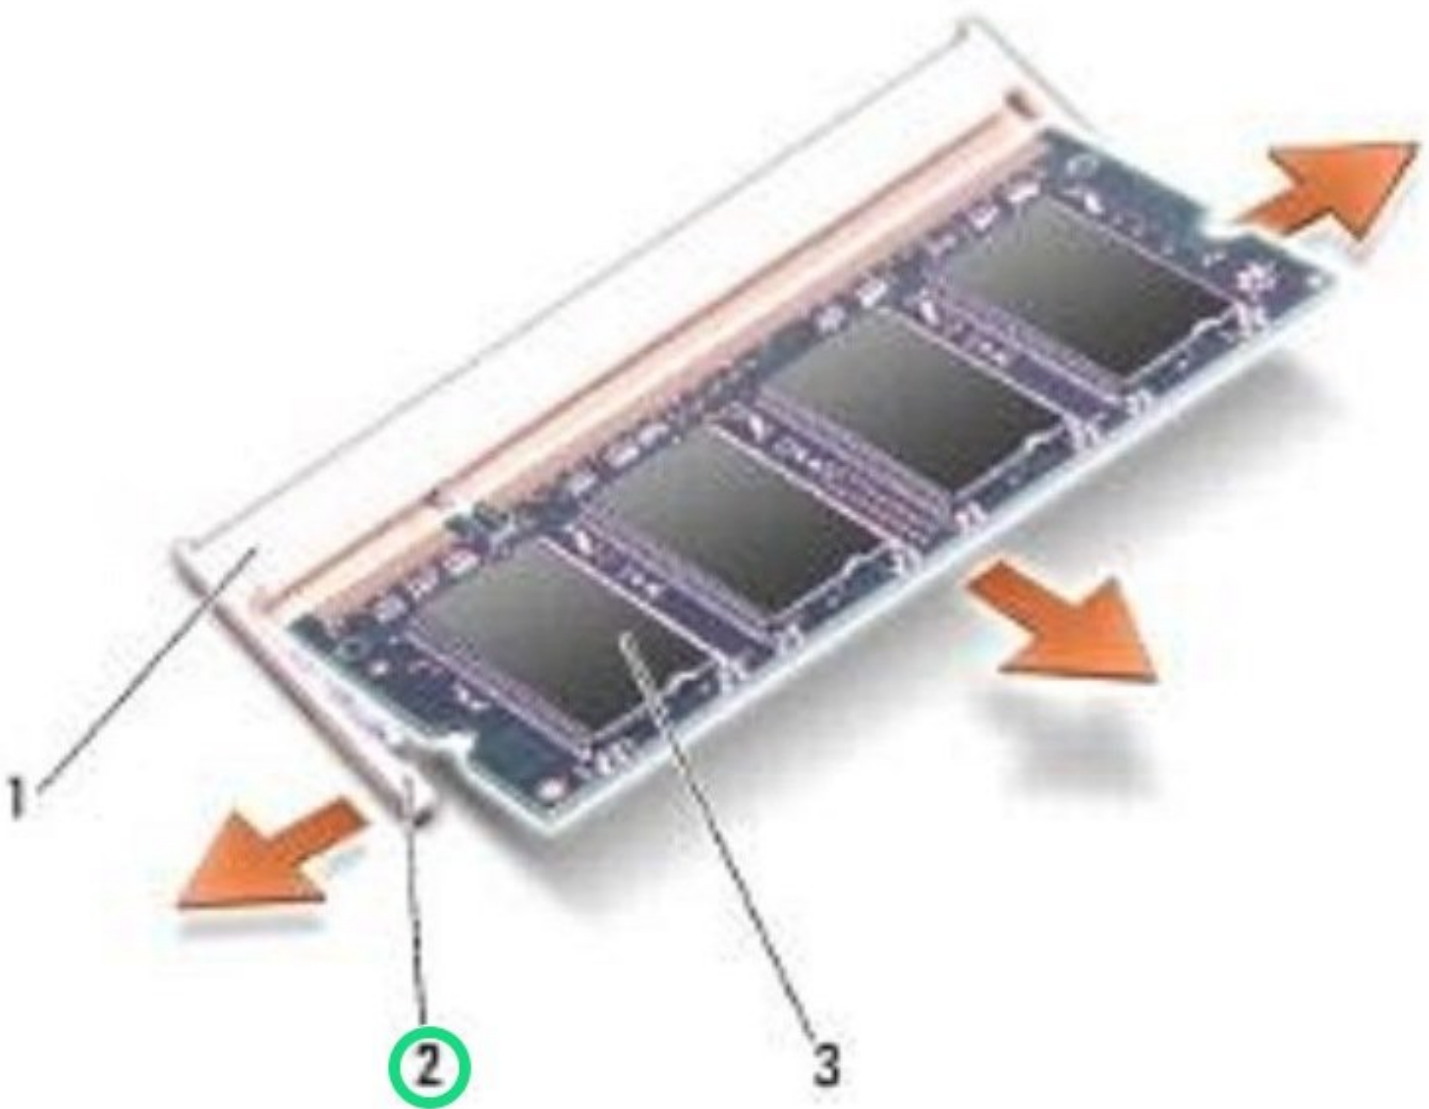

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.

Step 1 — Popping up the Memory Module

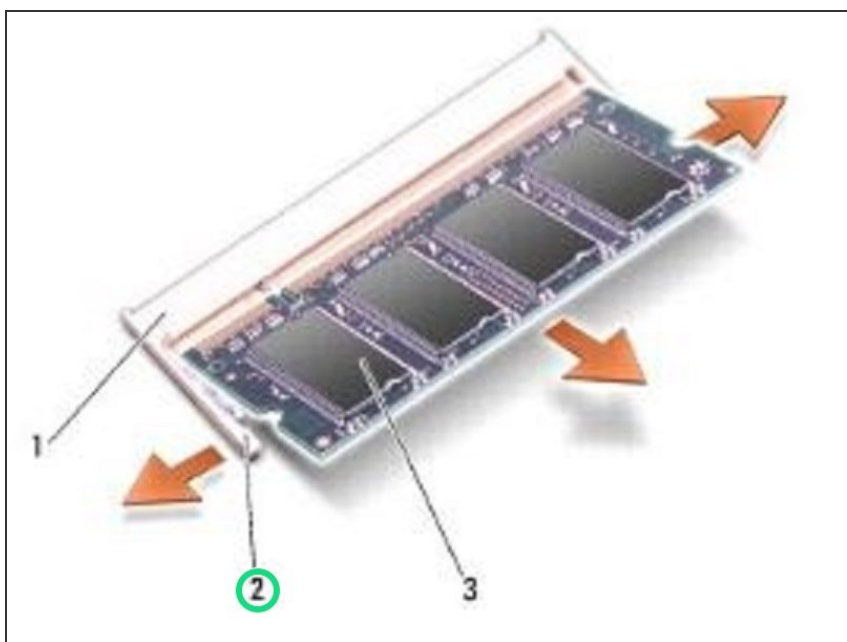


⚠ CAUTION: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

ⓘ NOTICE: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.


- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the module pops up.

Step 2 — Remove the Memory Module

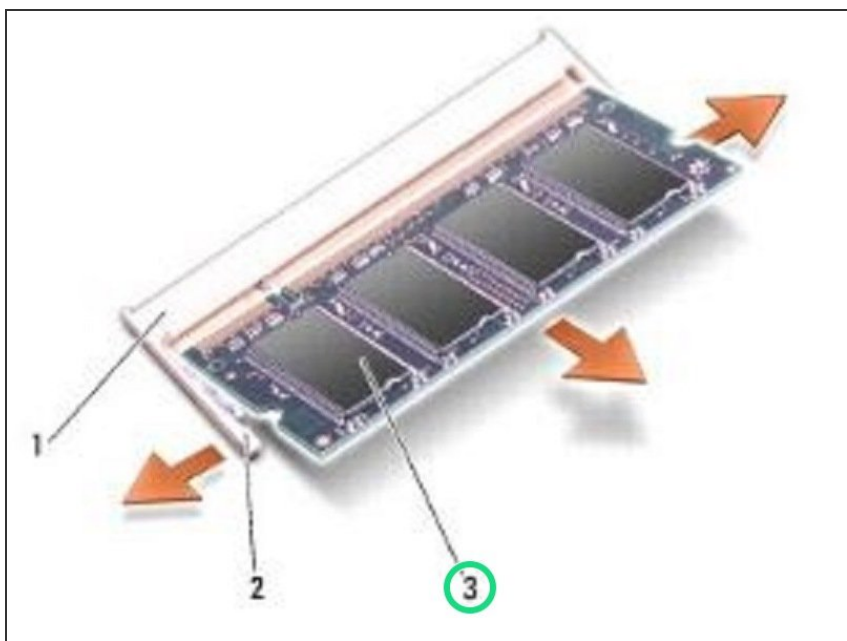


- Remove the memory module from the connector.

Step 3 — Align the Notch

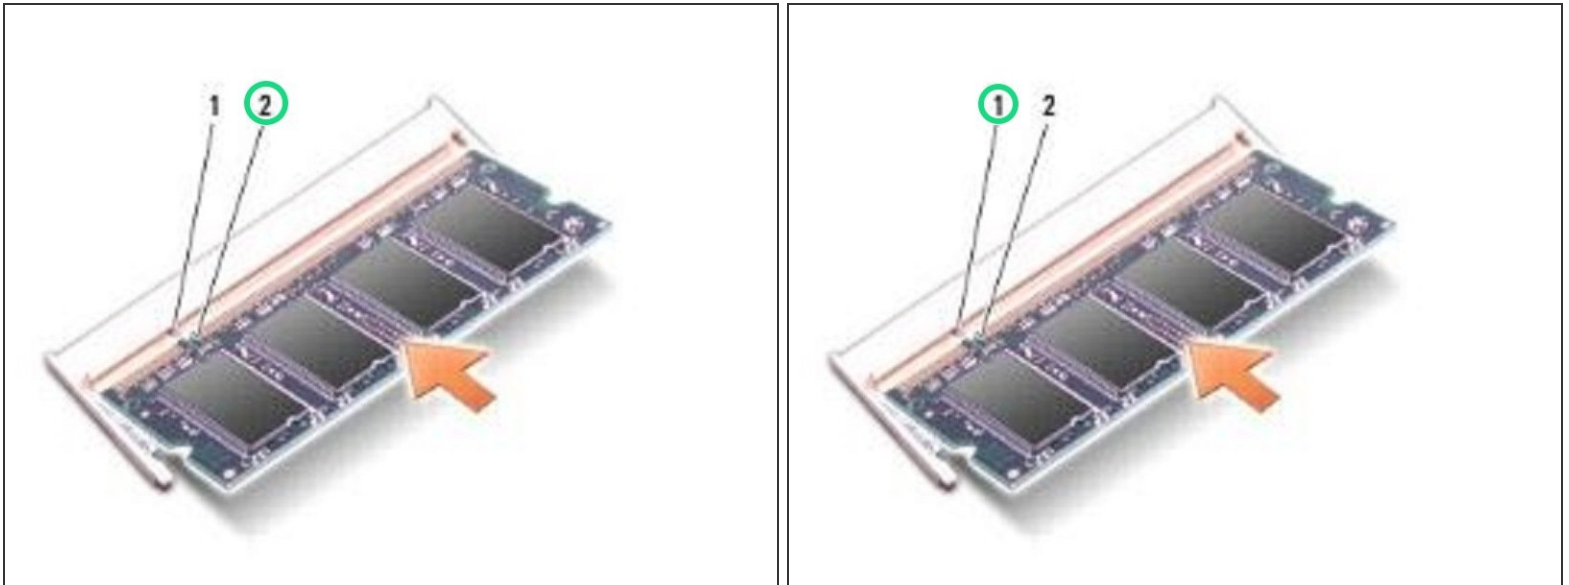

- Align the notch in the edge of the **NEW** memory module with the tab in the memory module connector.

Step 4 — Sliding the Module

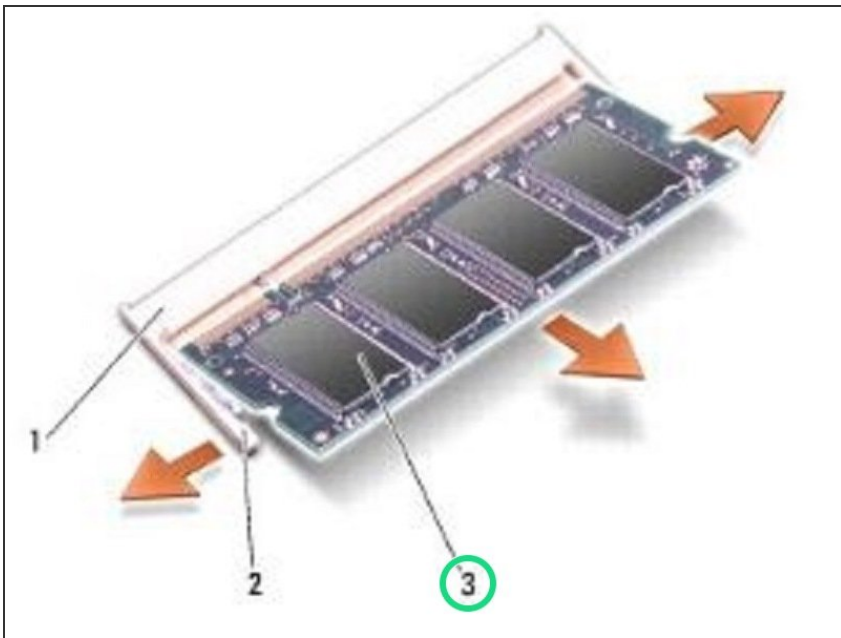

- Slide the module firmly into the slot at a 45-degree angle, and press the module down until it clicks into place. If you do not hear the click, remove the module and reinstall it.

i NOTE: If the memory module is not installed properly, the computer may not boot.

