




Dell Inspiron 1546 Hard Drive Replacement

Written By: Terrence15

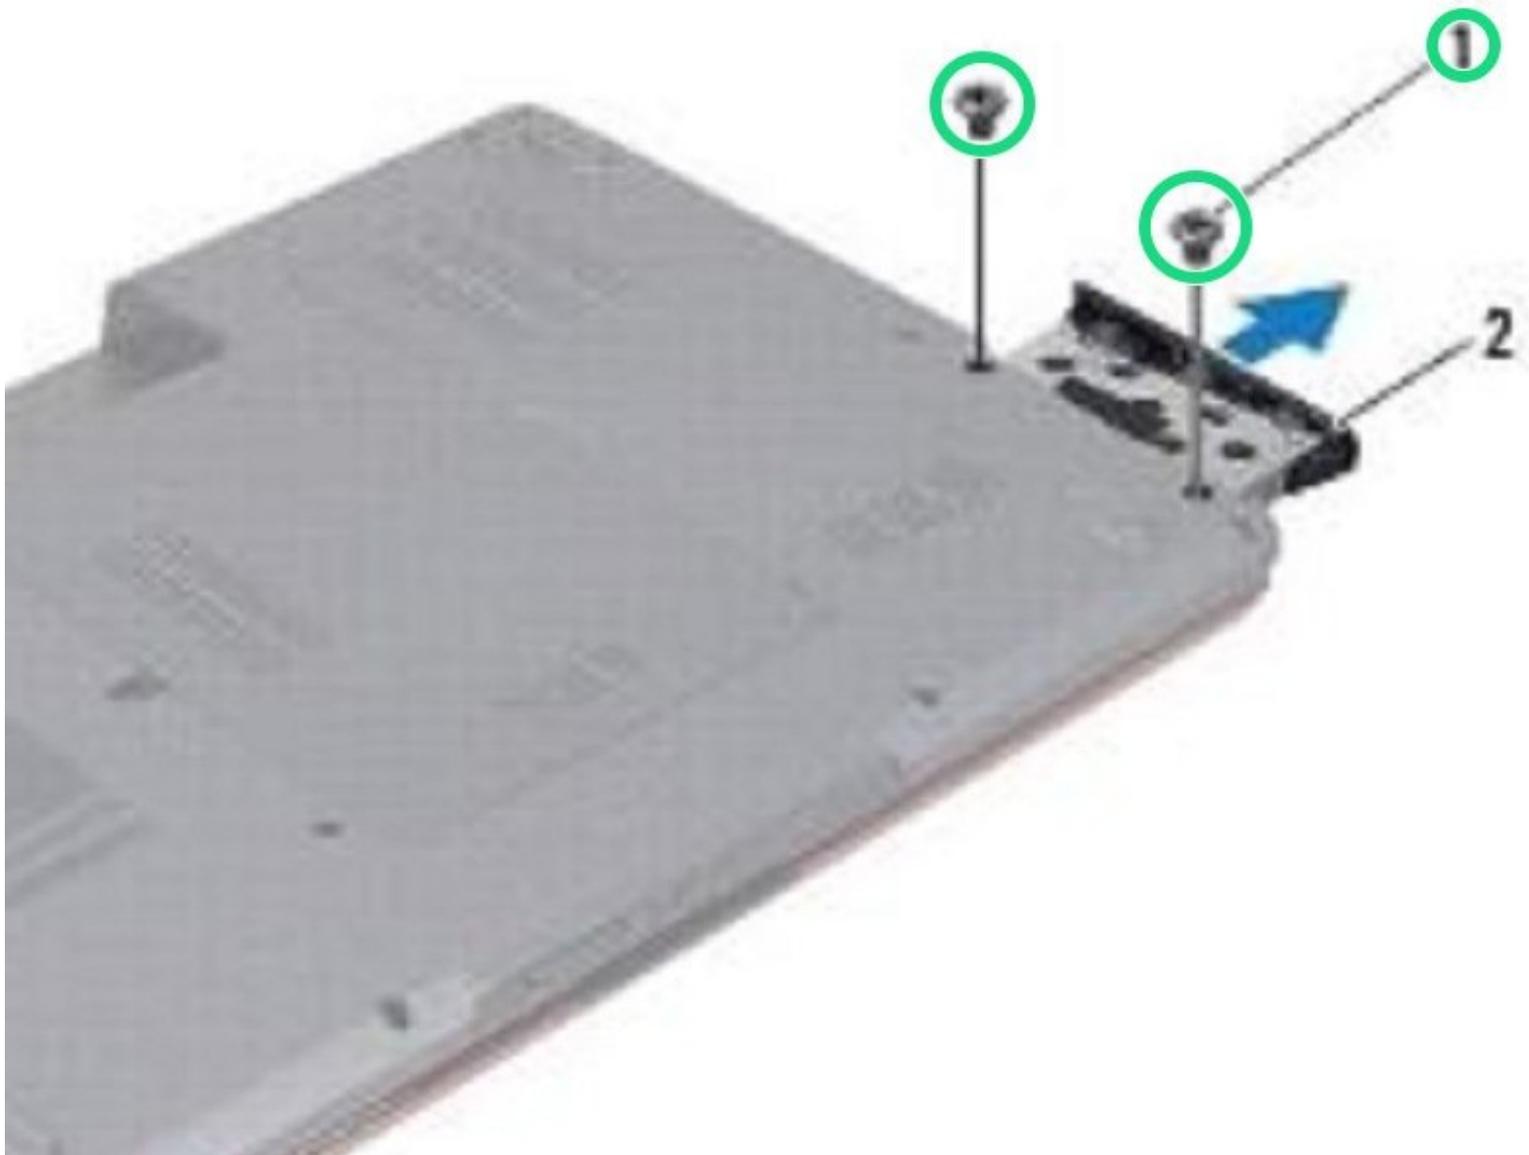


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screws

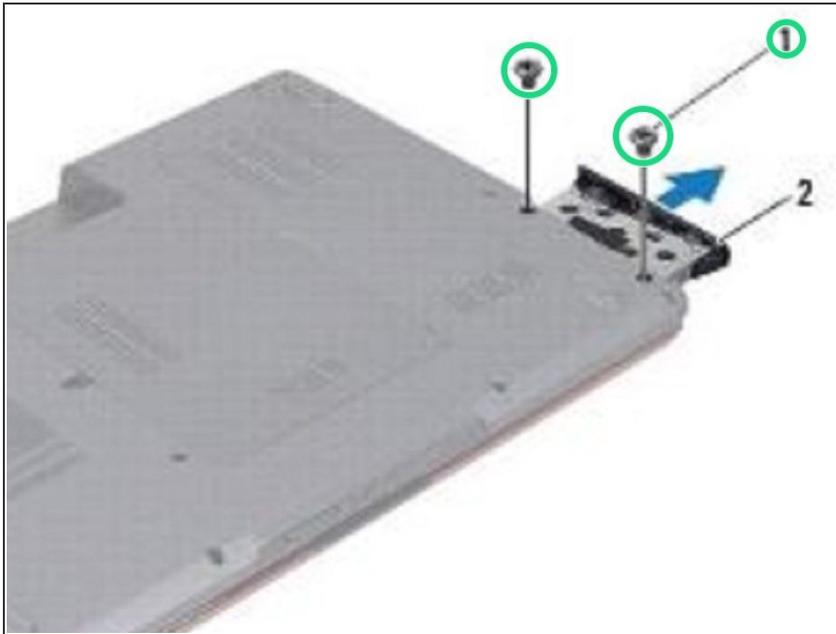


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Remove the two screws that secure the hard drive assembly to the computer base.

Step 2 — Sliding the Hard Drive Assembly

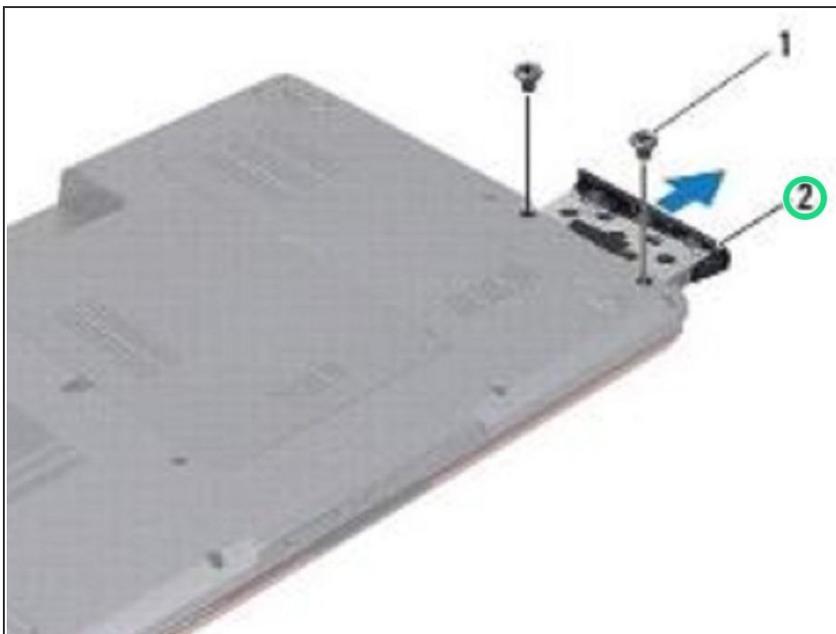



- Slide the hard drive assembly out of the hard drive compartment.

Step 3 — Remove the Screws

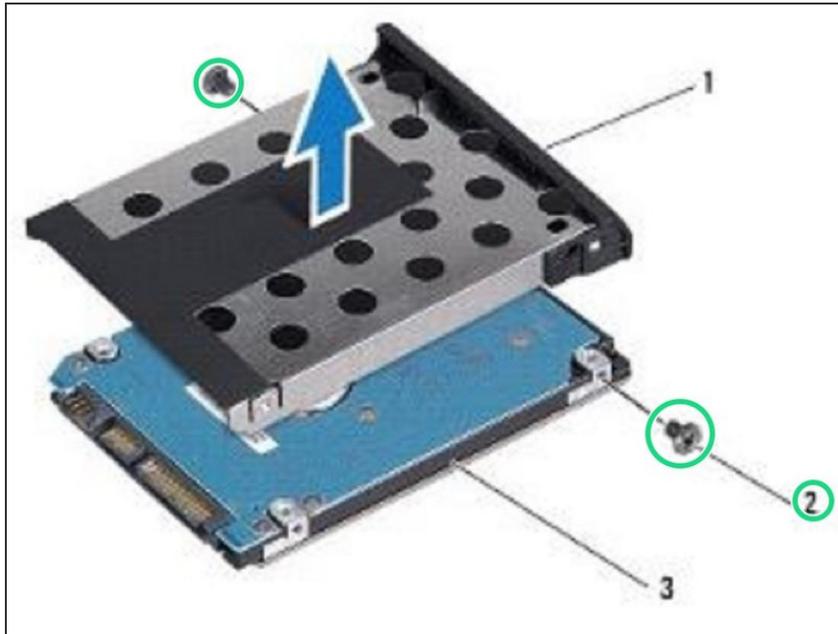


- Remove the two screws that secure the hard drive bezel to the hard drive.

Step 4 — Lifting the Hard Drive

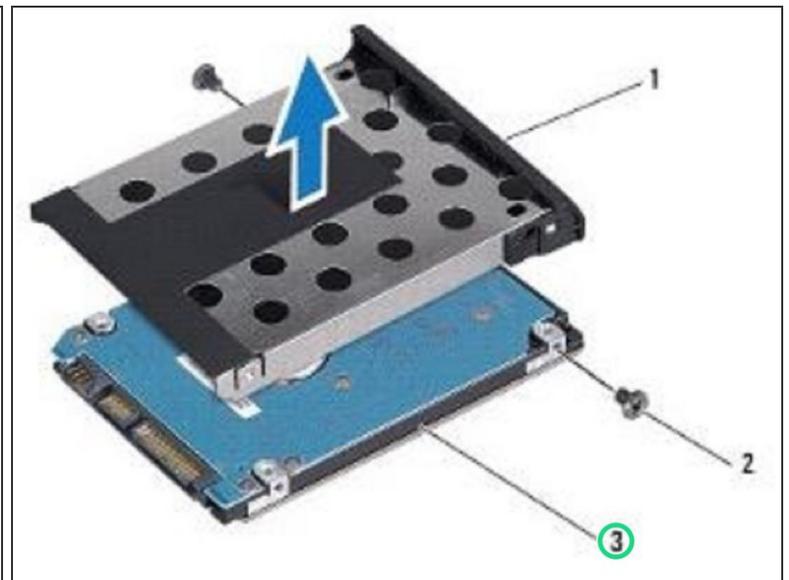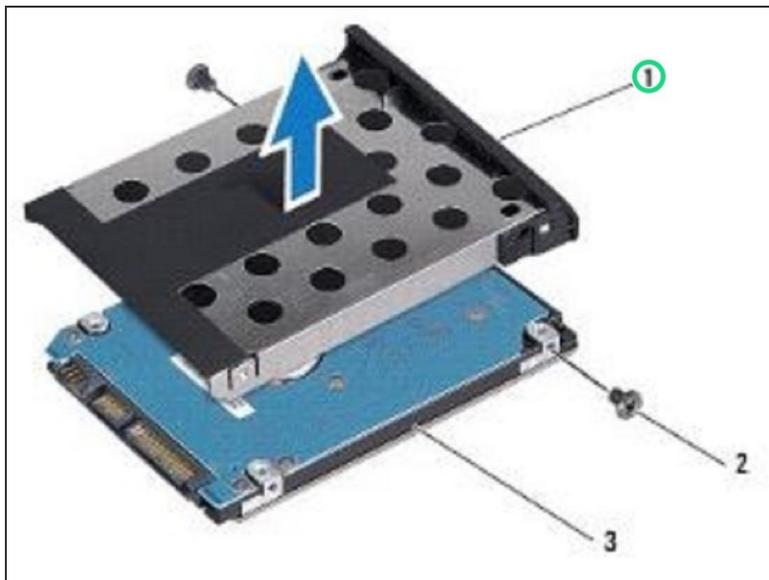


- Lift the hard drive bezel off the hard drive.

Step 5 — Align the Screw Holes

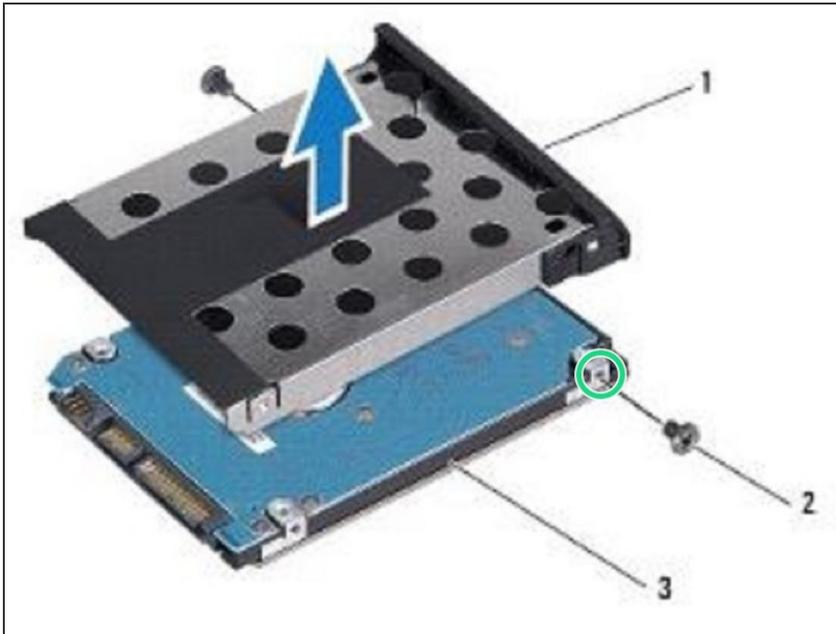


- Align the screw holes on the hard drive bezel with the holes on the **NEW** hard drive.

Step 6 — Replace the Screws

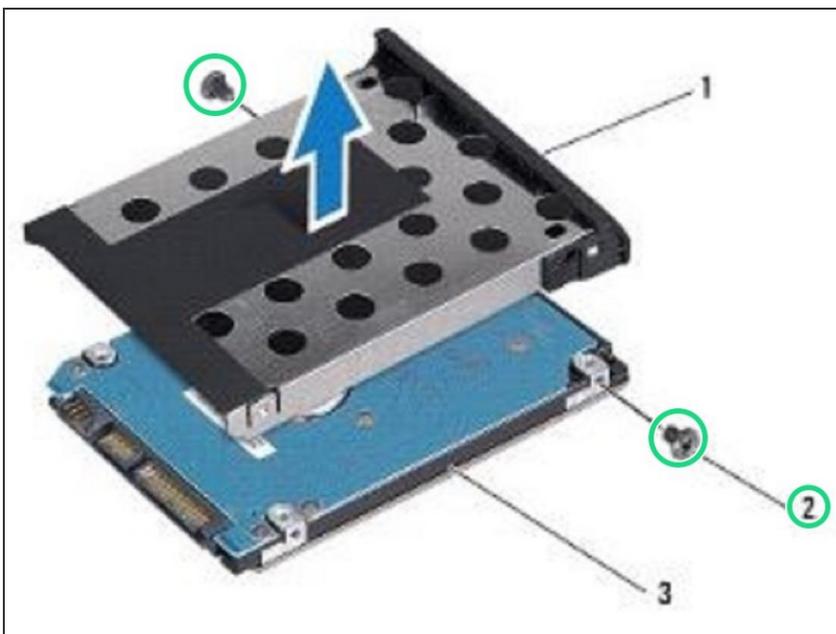


- Replace the two screws that secure the hard drive bezel to the hard drive.

Step 7 — Sliding the Hard Drive Assembly

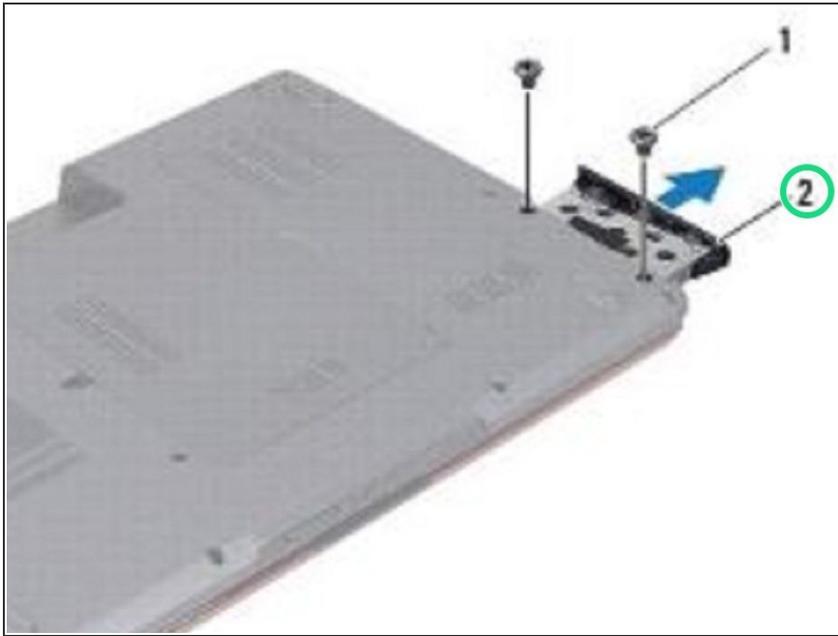

- Slide the hard drive assembly into the hard drive compartment until it is fully seated.

Step 8 — Replace the Screws

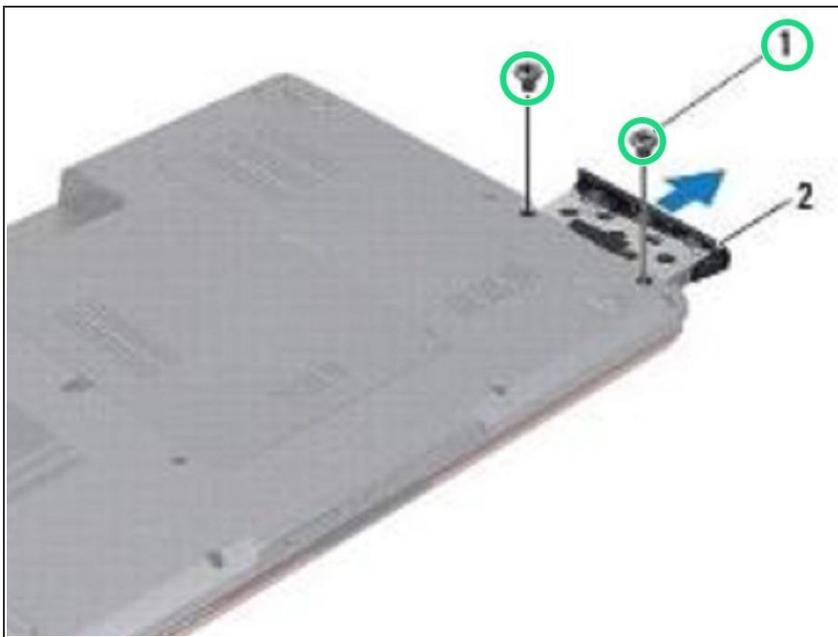

- Replace the two screws that secure the hard drive assembly to the computer base.