




Dell Inspiron n5110 Hard Drive Replacement

Written By: Terrence15

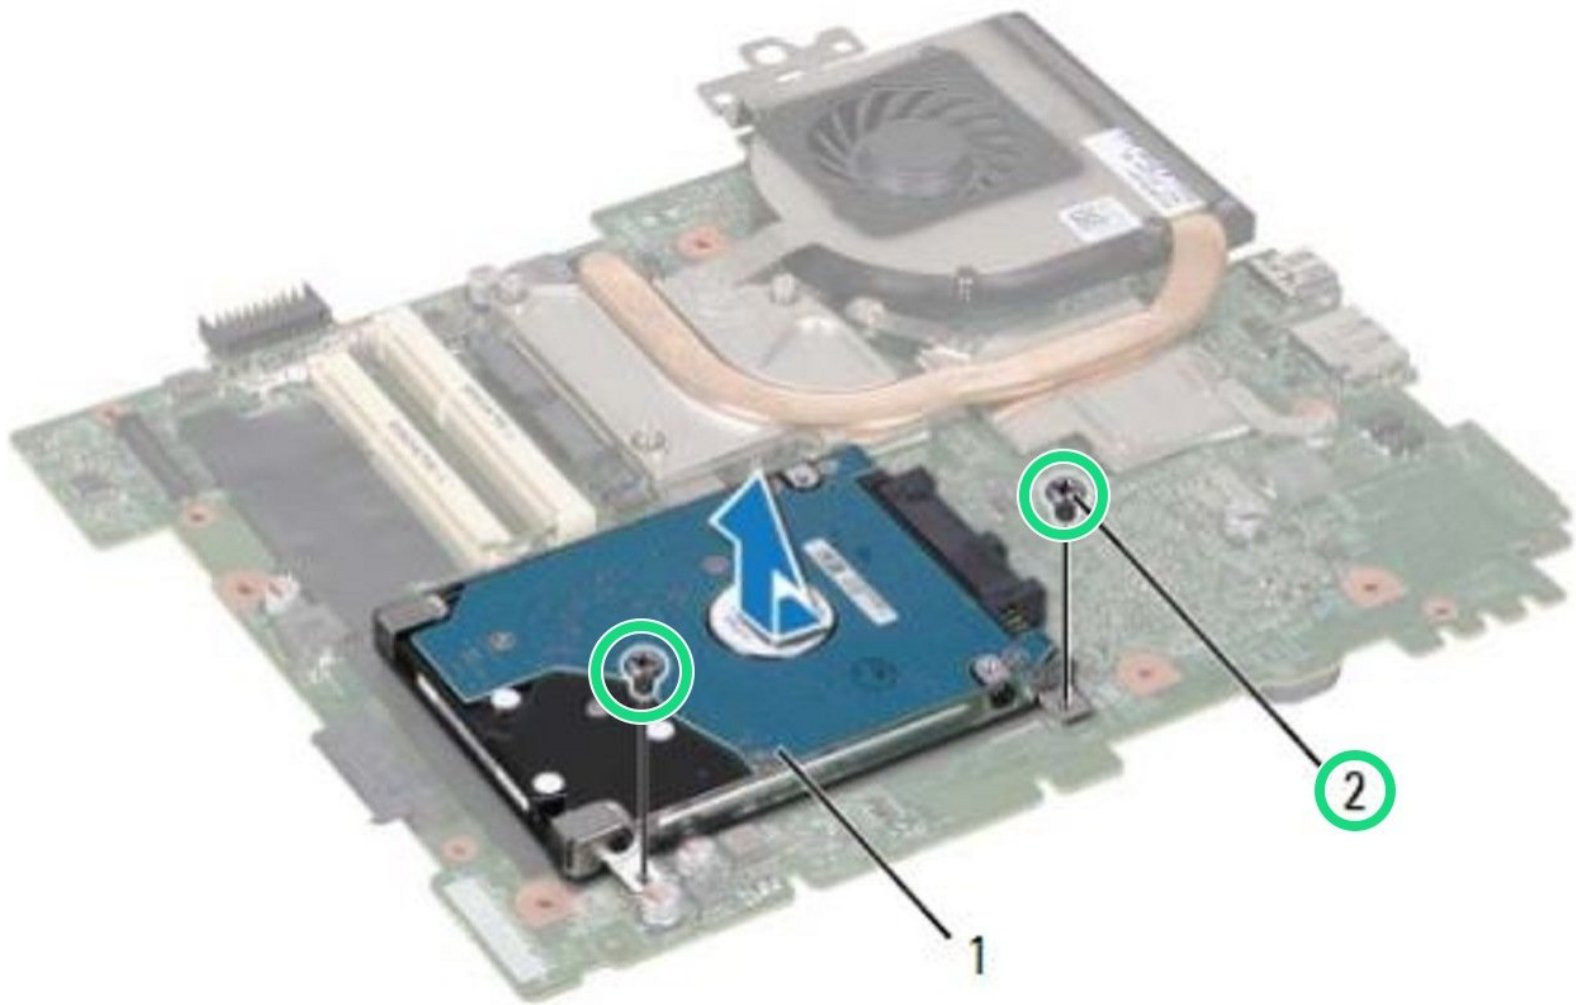

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Hard Drive.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screws

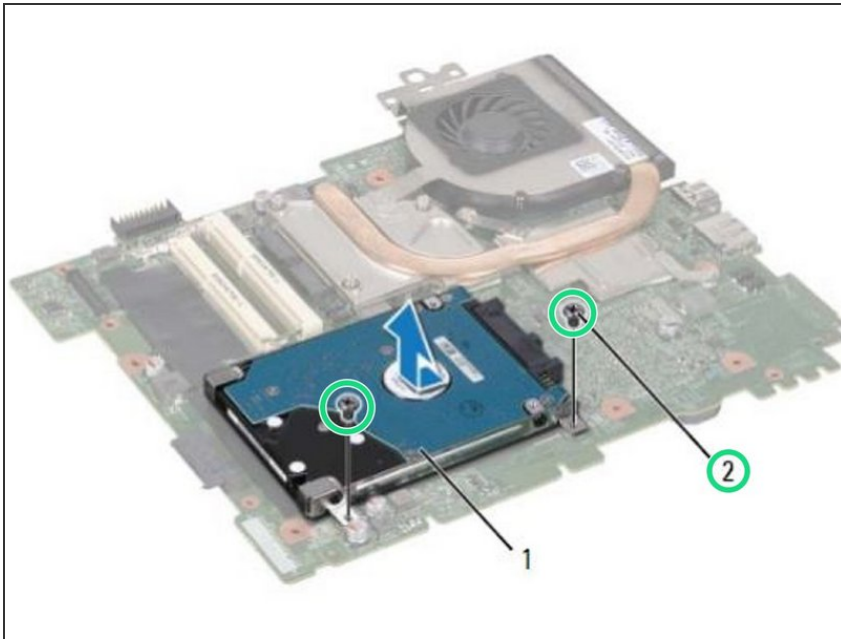


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in ["Before You Begin"](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Remove the two screws that secure the hard-drive assembly to the system board.

Step 2 — Sliding the Hard Drive Assembly

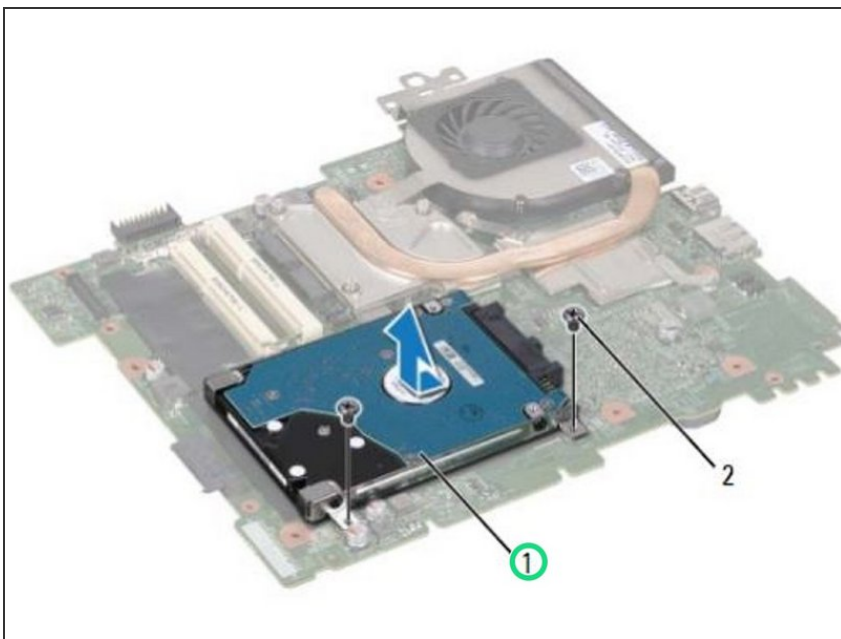

- Slide the hard-drive assembly to disconnect it from the system-board connector.

Step 3 — Lifting the Hard-Drive Assembly

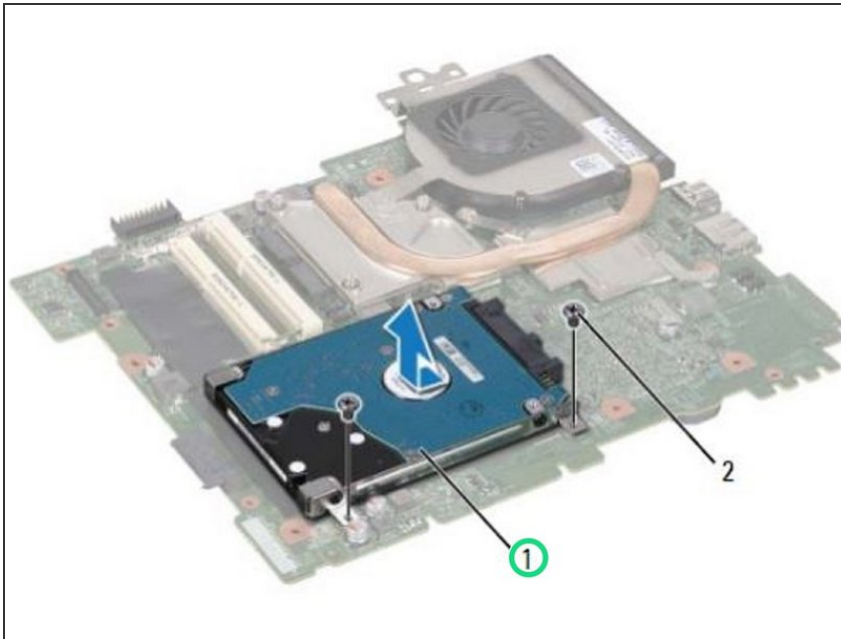

- Lift the hard-drive assembly off the system board.

Step 4 — Remove the Screws



- Remove the four screws that secure the hard drive to the hard-drive bracket.

Step 5 — Lifting the Hard Drive




- Lift the hard drive away from the hard-drive bracket.

Step 6 — Placing the Hard Drive




- Place the **NEW** hard drive in the hard-drive bracket.

Step 7 — Replace the Screws

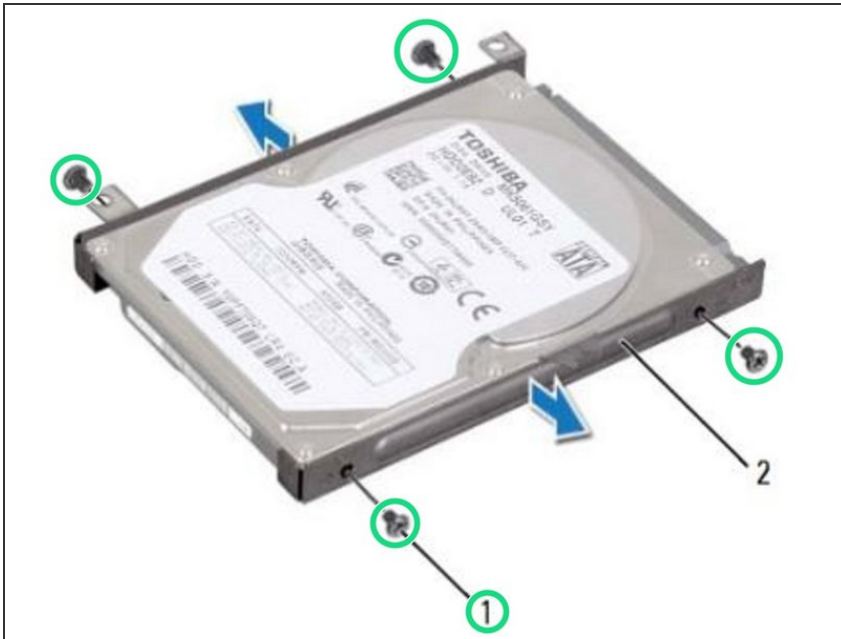


- Replace the four screws that secure the hard drive to the hard-drive bracket.

Step 8 — Placing the Hard-Drive Assembly

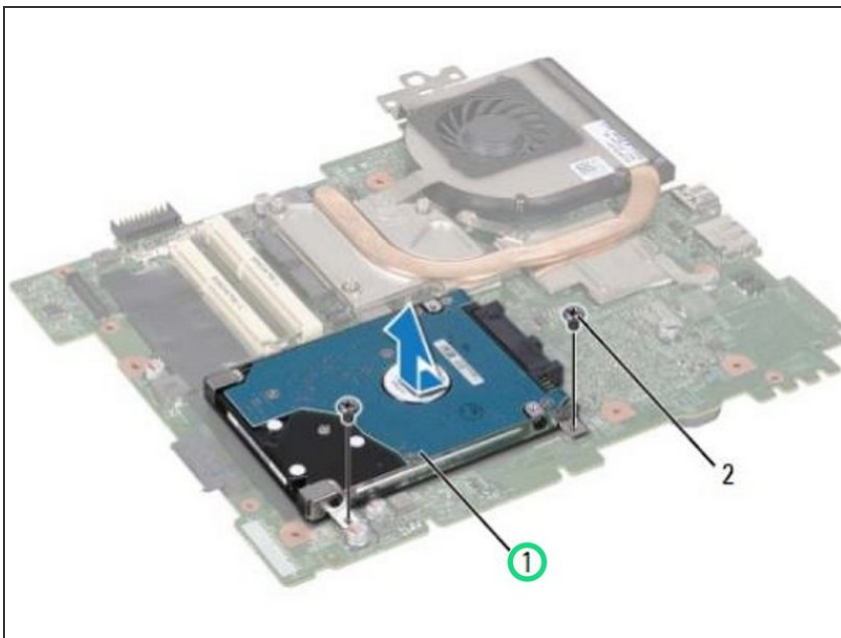


- Place the hard-drive assembly on the system board.

Step 9 — Sliding the Hard-Drive Assembly

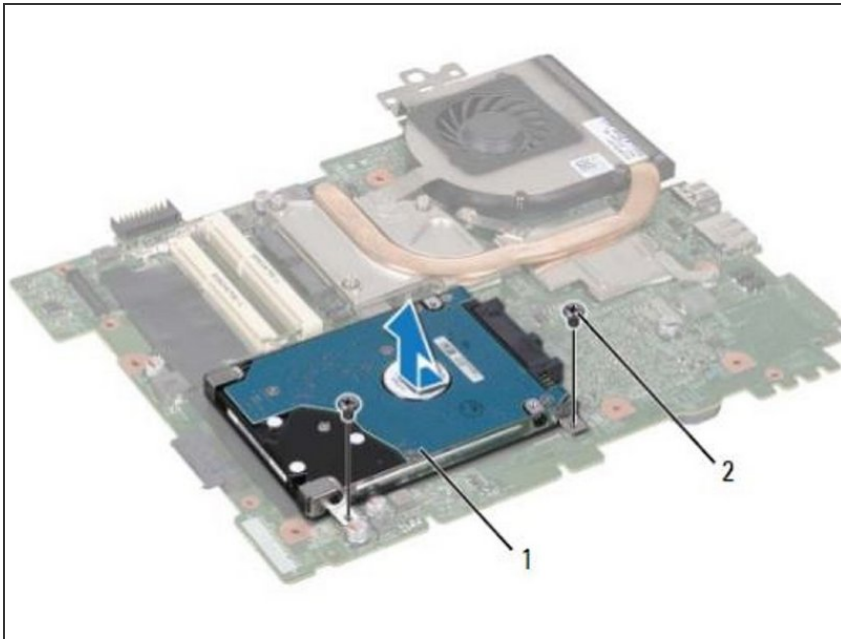

- Slide the hard-drive assembly to connect it to the system-board connector.

Step 10 — Replace the Screws

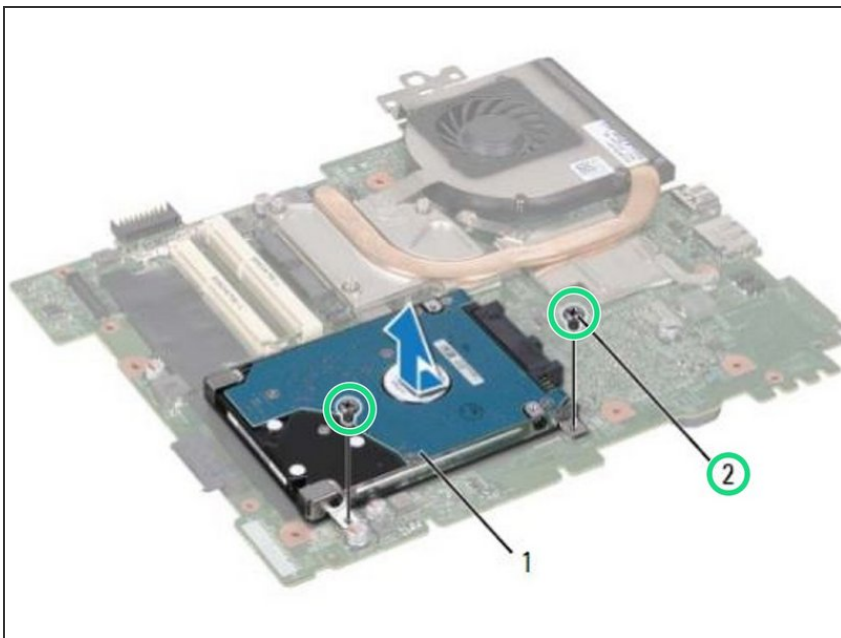

- Replace the two screws that secure the hard-drive assembly to the system-board.