




Dell Inspiron 15z 1570 Battery Replacement

Written By: Terrence15

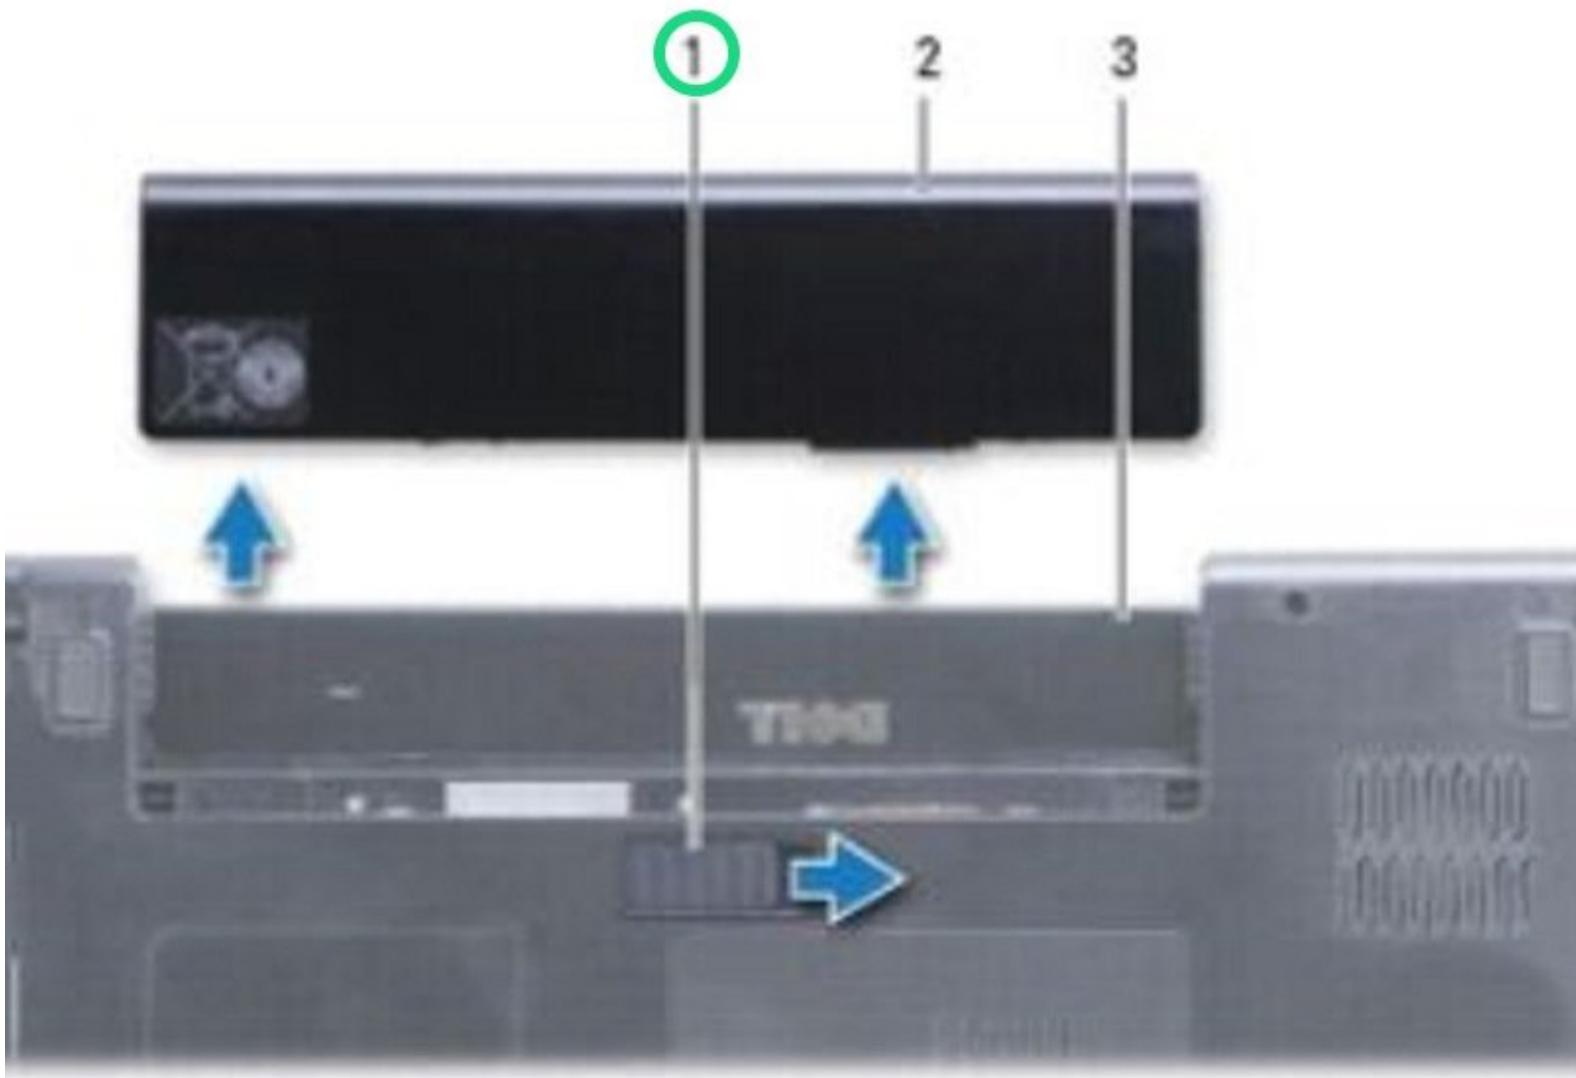

INTRODUCTION


In this guide, we will be showing you how to remove and replace the Battery.



TOOLS:

- [Anti-Static Wrist Strap](#) (1)
-

Step 1 — Sliding the Latch

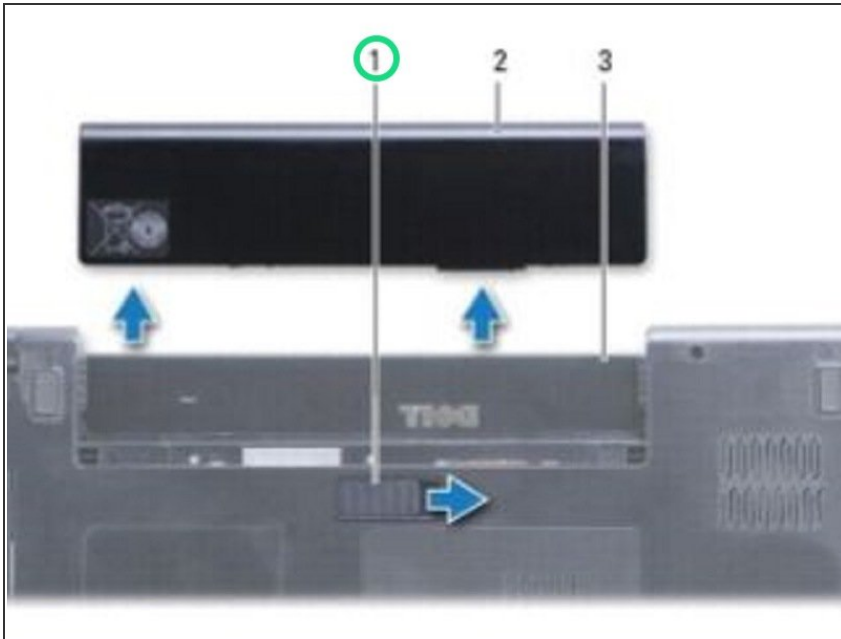


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface.


- Turn the computer upside down on a clean, flat surface.
- Slide and click the battery release latch.

Step 2 — Sliding the Battery

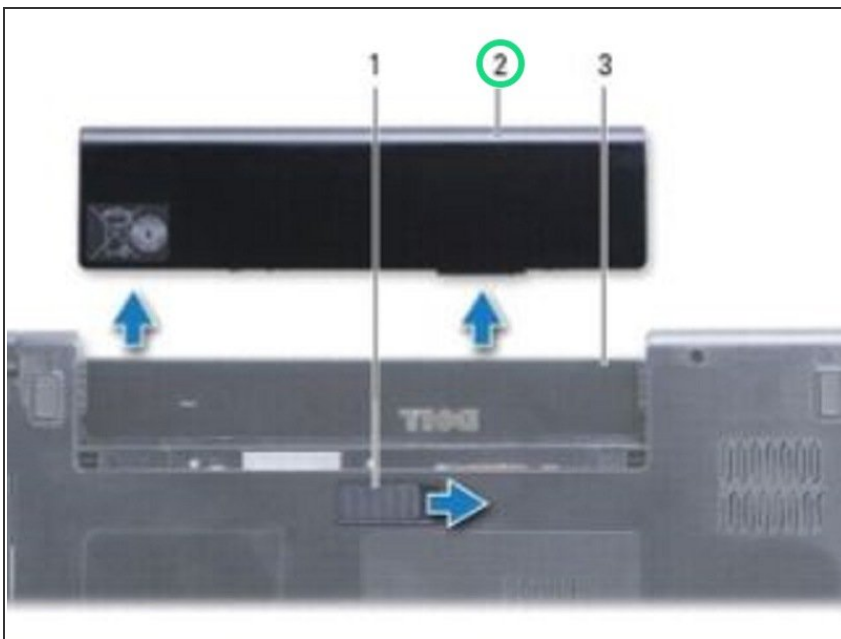

- Slide the battery out of the battery bay.

Step 3 — Sliding the Battery

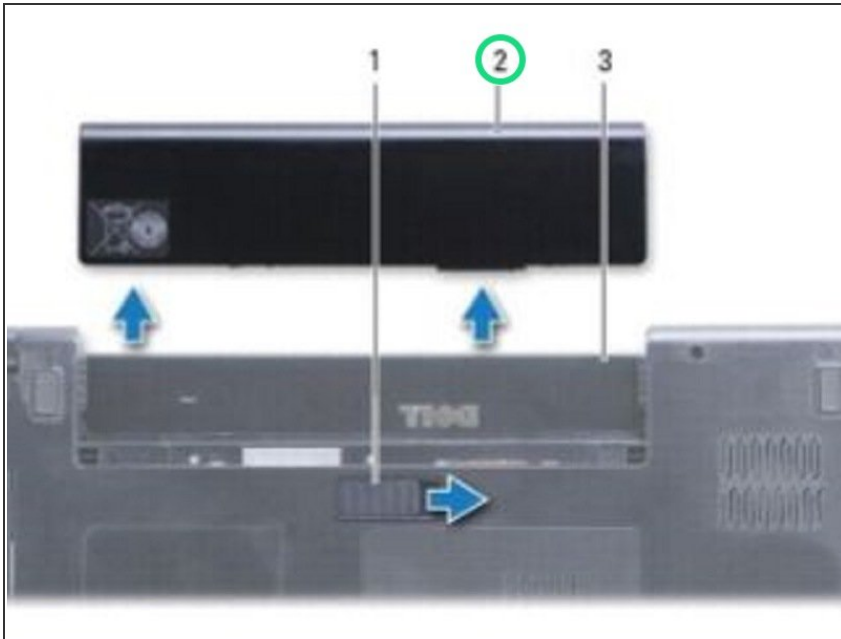

- Slide the battery into the battery bay until it clicks into place.