



# Purple SmartVP Camera Replacement

Replace a malfunctioning camera to take pictures and video again with your Purple SmartVP.

Written By: Brian Maulucci



 **TOOLS:**


- [Spudger](#) (1)
  - [T9 Torx Screwdriver](#) (1)
  - [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Camera





- Remove the top bar by removing the 5cm hex T10 screws on the back of the device as shown. Then gently pull off the top bar from the main component.

## Step 2

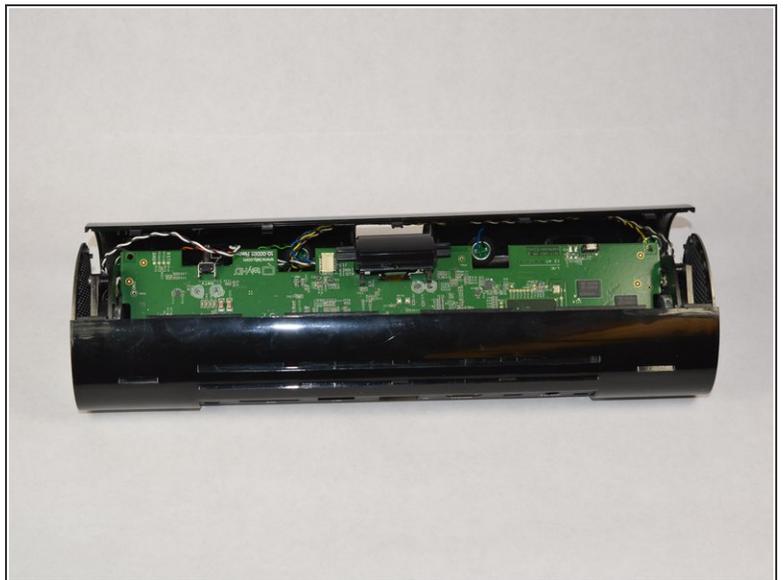



- Remove the 1.2 cm hex T9 screws and gently open up the device.

### Step 3

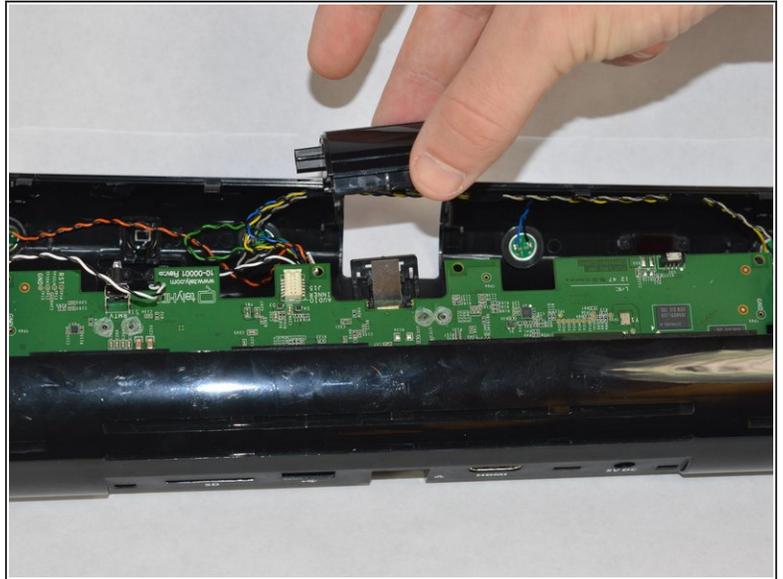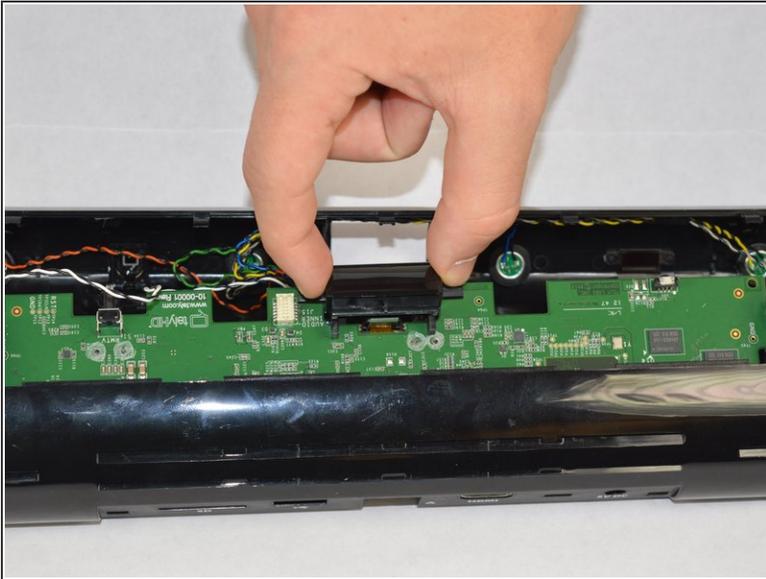


- Detach the camera cover from the motherboard. Be very careful to not damage any of the components on the motherboard.

### Step 4

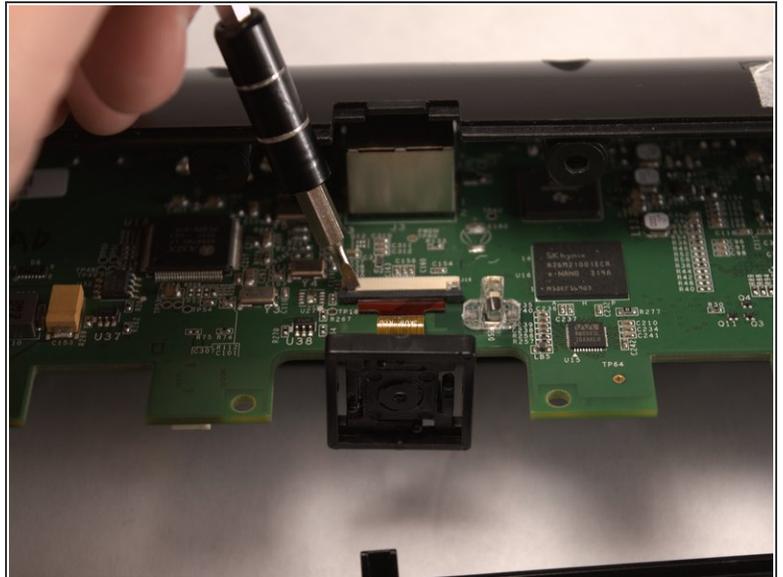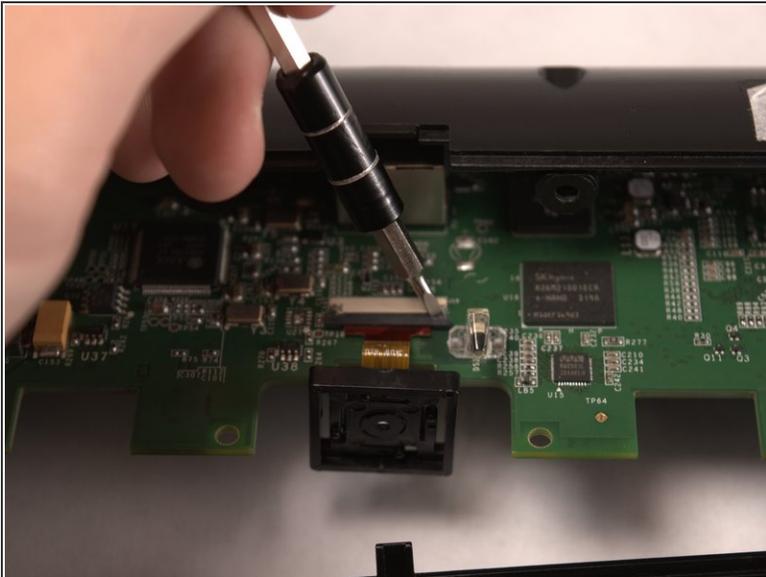

- Use a plastic spudger to push the black sliding cable connector away from the white bracket.

## Step 5

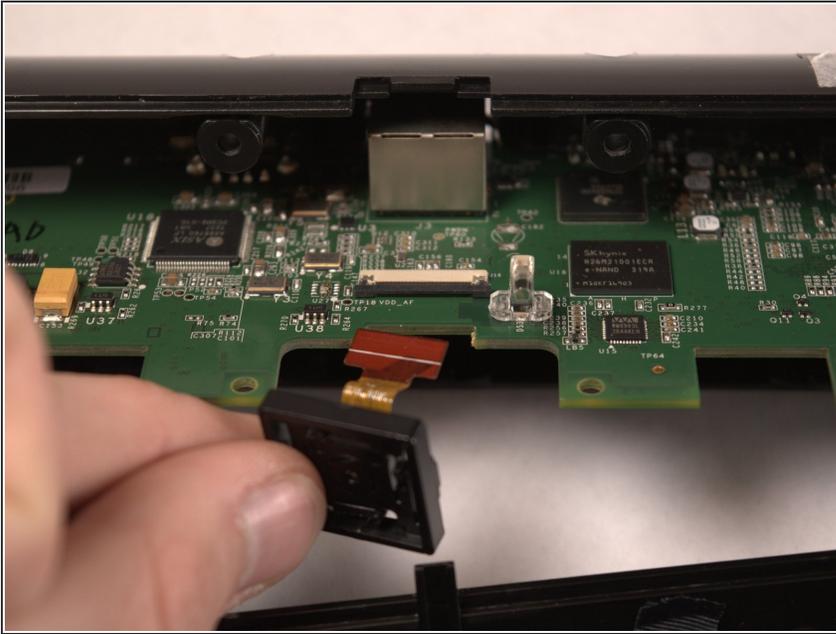

- Gently remove the ribbon cable from the connector.

To reassemble your device, follow these instructions in reverse order.