


# **Black and Decker PHV1810 Motor Replacement**

Written By: Cade Bennett



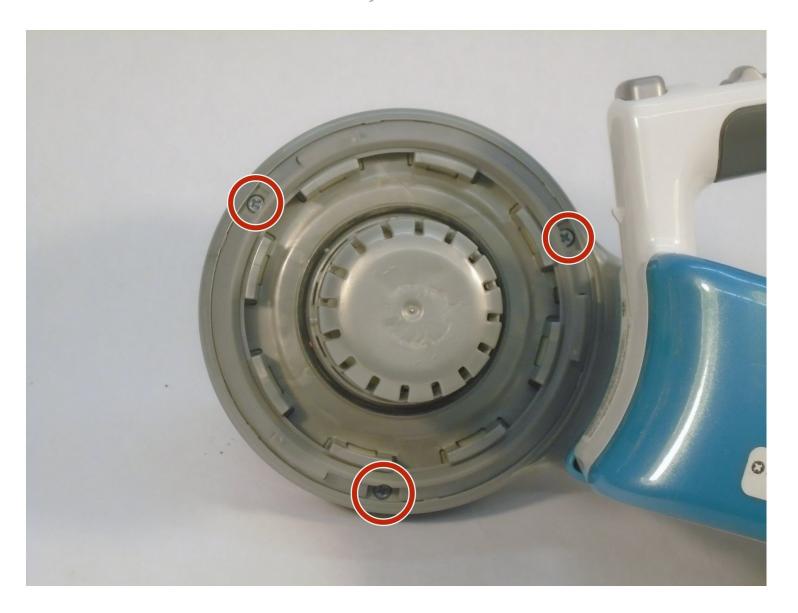

64 Bit Driver Kit (1)


### Step 1 — Nozzle, Filter, and Catch Bowl






• To take off the nozzle, filter, and catch bowl first start off by pushing in the button identified with a red square and twist that part of the device toward the handle portion of the vacuum and it should click and pop off the chassis.

## Step 2

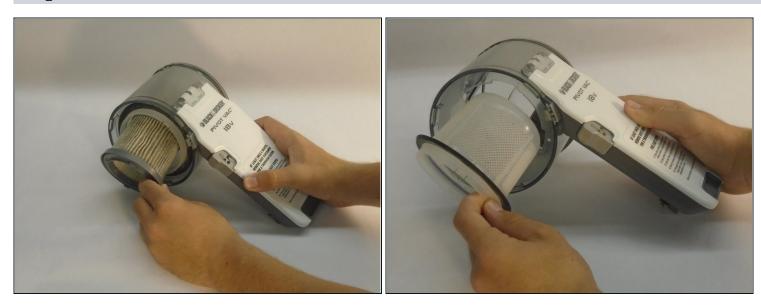

• Once the nozzle, filter and dust bowl have been removed each part can be removed from the nozzle section of the device.

# Step 3 — Motor

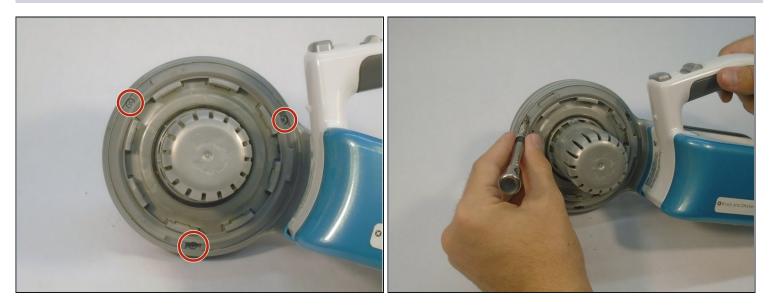

• Remove the three screws.

## Step 4






Flip the hand vac over and remove two screws.

### Step 5




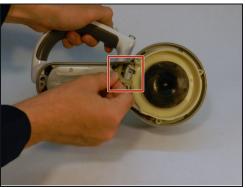



- Once you have successfully unscrewed the five screws holding the cover on you should be able to take the cover off.
- Remove the L-shaped plastic hook.
- Once the L shaped hook has been removed the motor will easily fall out of place.

## Step 6

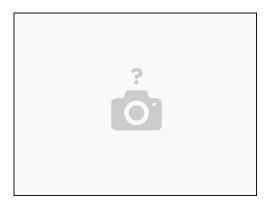

- Once the motor has been removed from its home the two wires that are giving it power can easily be removed by pulling on them carefully.
- This will then allow for you to replace the motor.

To reassemble your device, follow these instructions in reverse order.