


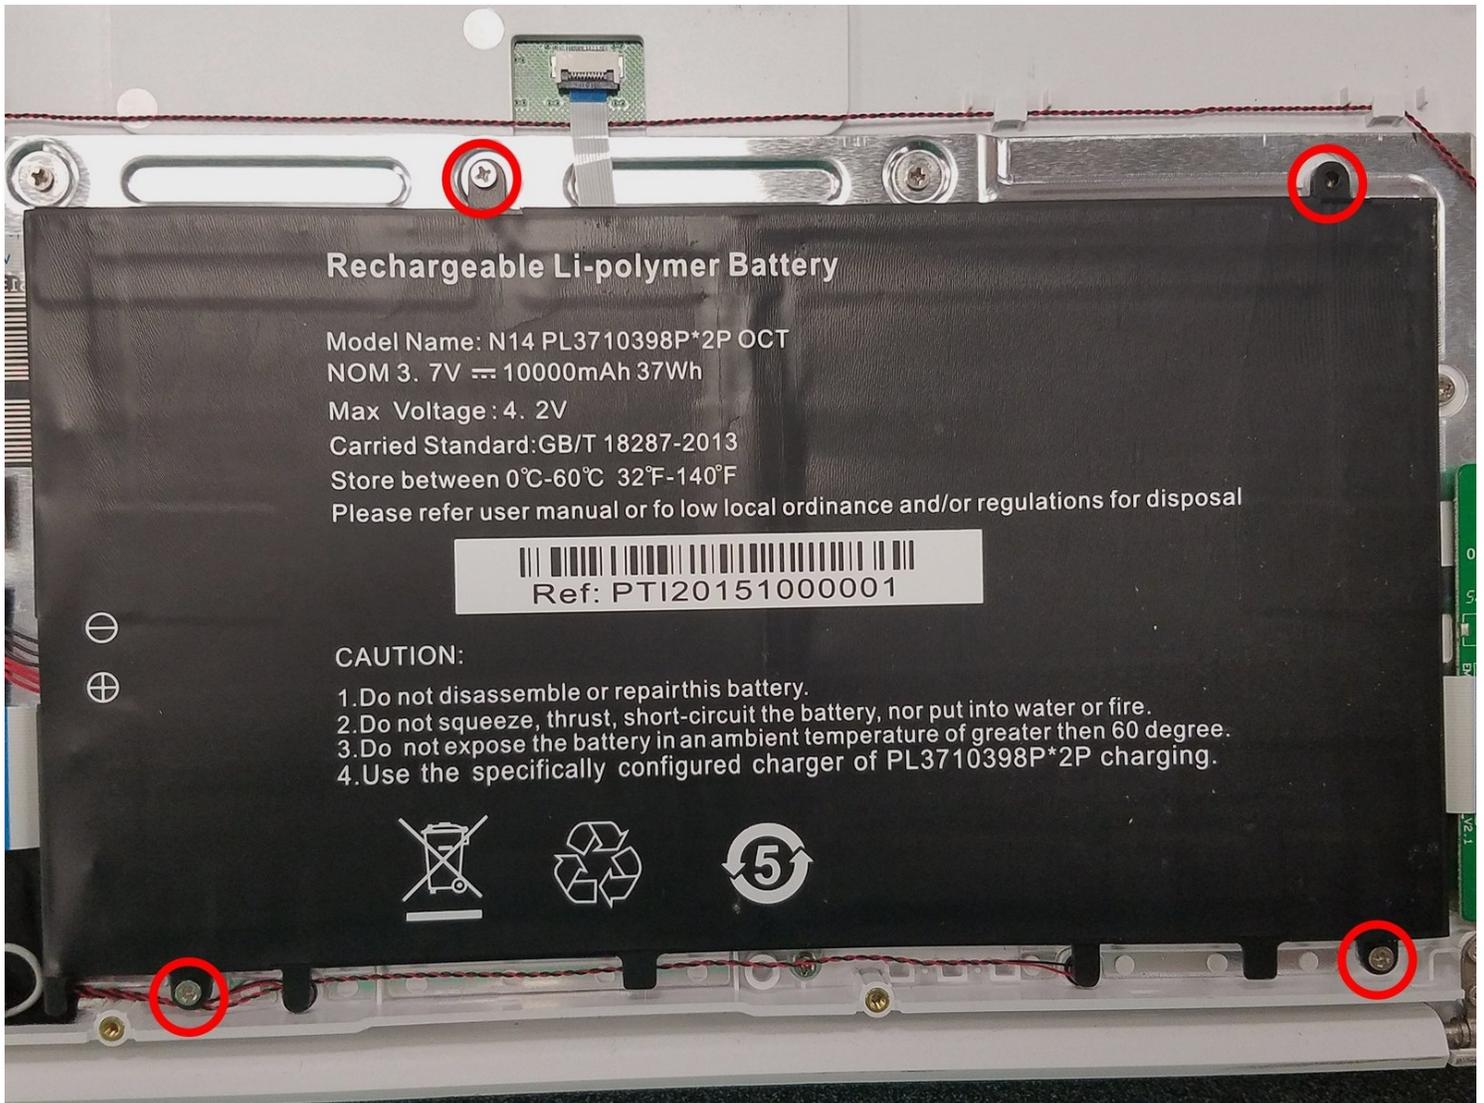

Vulcan Venture II Battery Replacement

This guide will cover how to remove and then...

Written By: Parish Brandt



INTRODUCTION

This guide will cover how to remove and then replace the battery of a Venture Vulcan II laptop.

TOOLS:


JIS #00 Screwdriver (1)

Step 1 — Back Panel




- Use a J00 screwdriver to unscrew the 10 back-plate screws.

Step 2

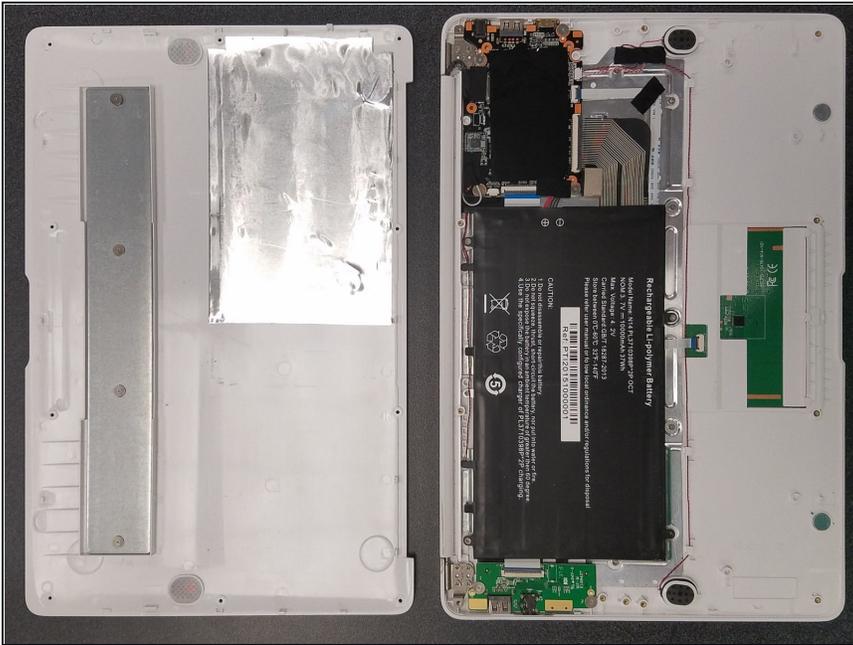


- Gently separate the back panel from the laptop.

Step 3 — Battery

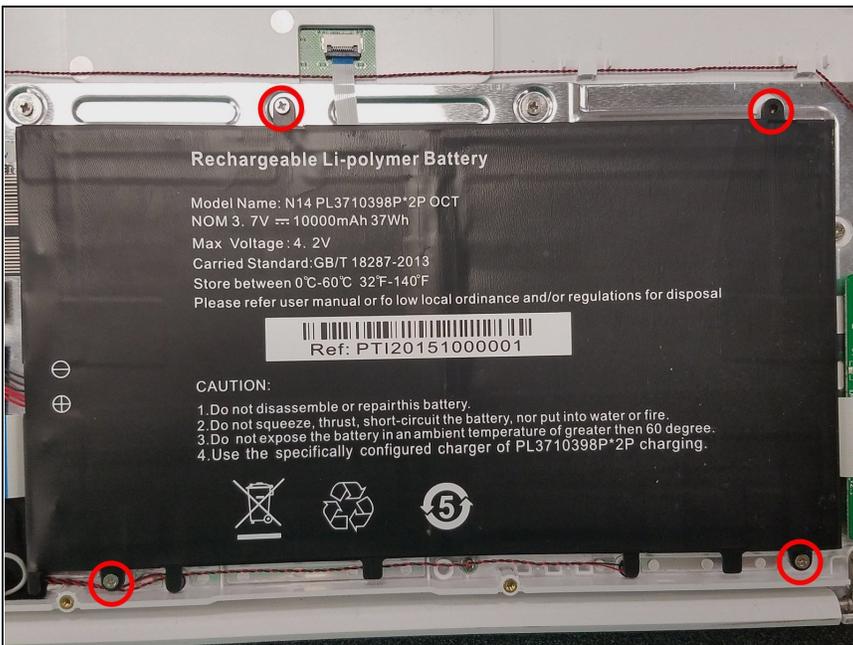


- Use a J00 screwdriver to unscrew the 4 battery screws .

Step 4

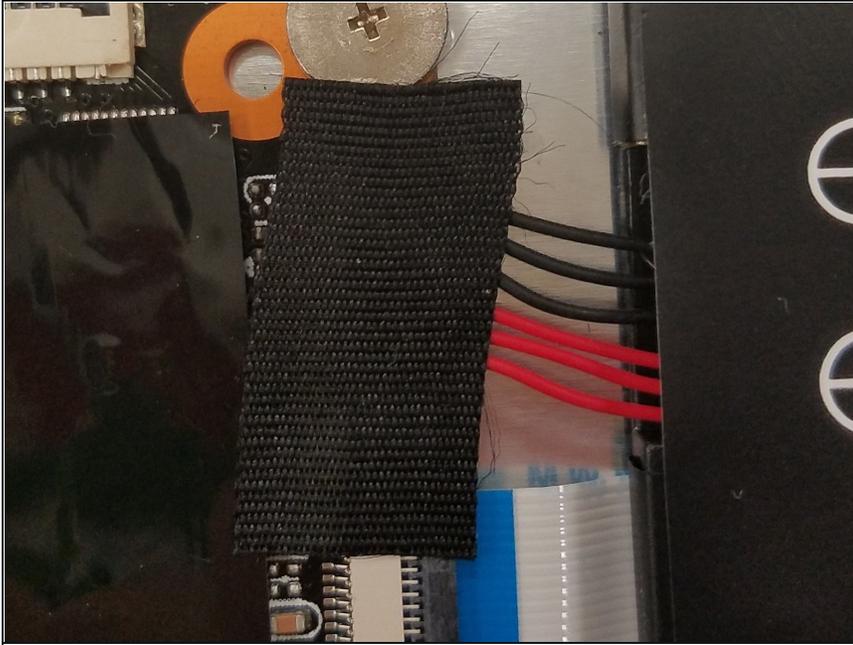

- Remove the black adhesive strip covering the battery connector.

Step 5

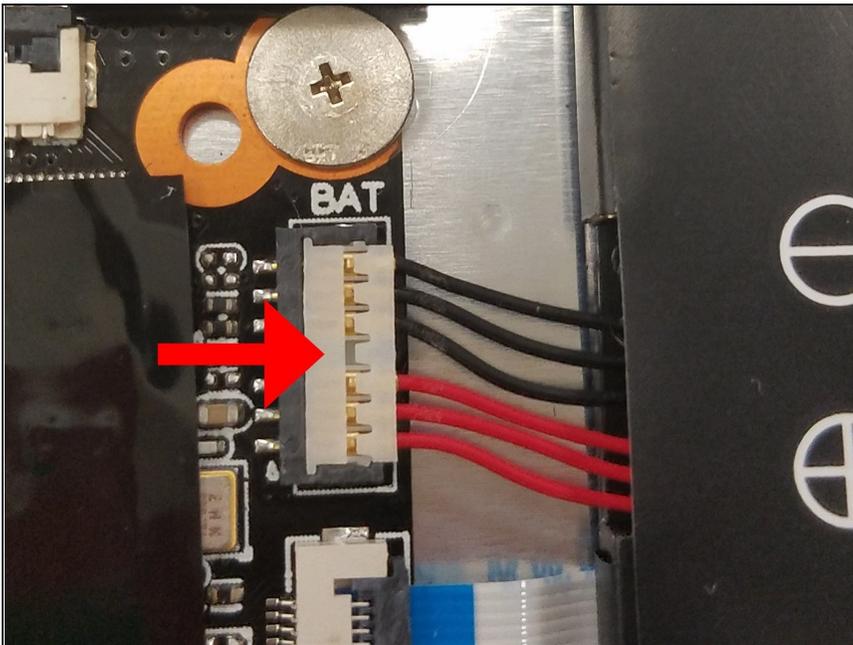

- Gently remove the battery connector by slowly applying pressure on the connector in the direction of the battery.

To reassemble your device, follow these instructions in reverse order.

