



Farberware FSTO100 Door Handle Replacement

The door is cracked, will not fully close, or hinges are busted. This guide is specific in fixing the door handle that tends to get loose.

Written By: Jack Cate



INTRODUCTION

Use this guide to glue the door handle back to its original position so that it is possible to open the door.



TOOLS:


- [Polyurethane Glue](#) (1)
-

Step 1 — Door Handle



- The door handle may fall off if overused or not glued properly.

Step 2

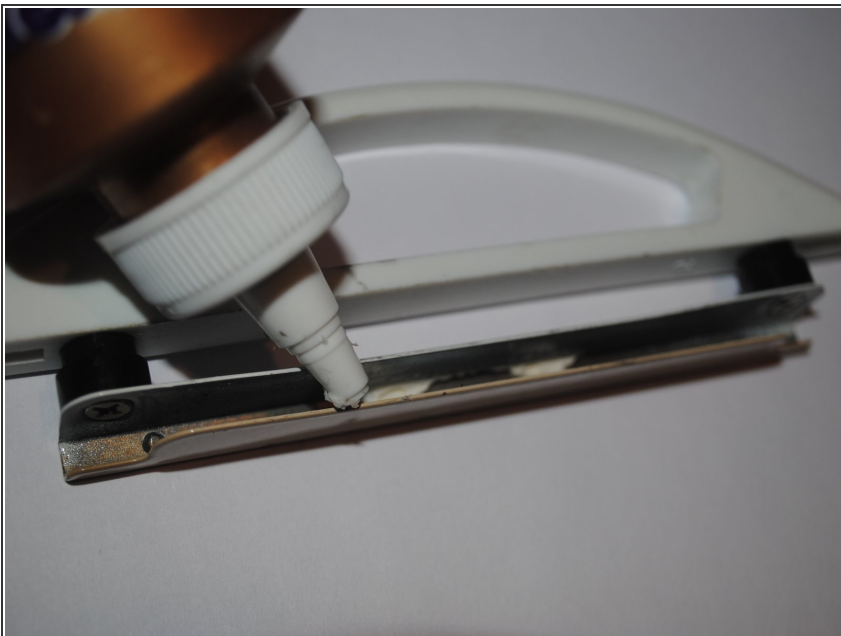


- Apply glue to the inside of the bracket on the handle.

Step 3



- Replace the handle in its original position on the door.

Step 4

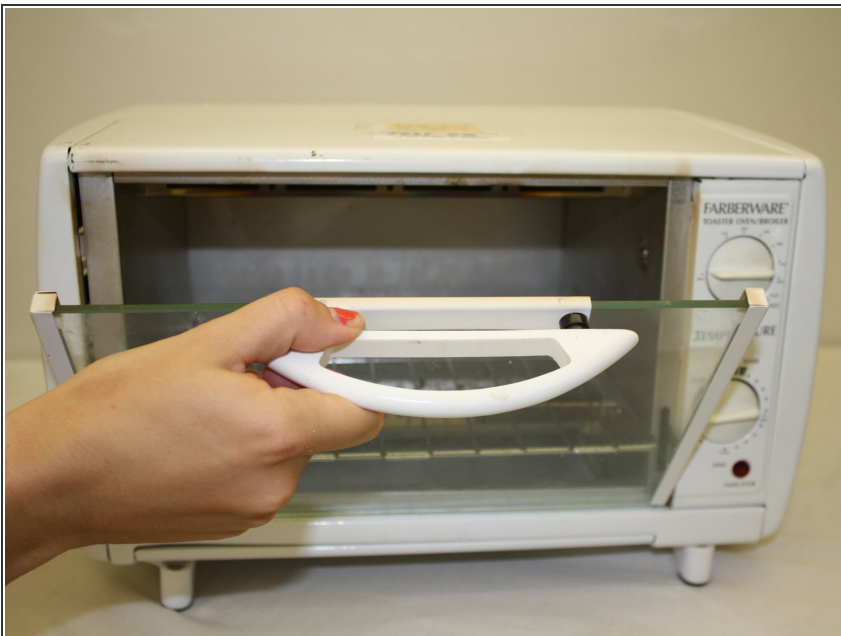

- Hold firmly for a minute to allow glue to properly set.

To reassemble your device, follow these instructions in reverse order.