

ZTE Tempo Front Speaker Replacement

Guide to replacing the front speaker on ZTE Tempo.

Written By: omar



INTRODUCTION

This guide shows how to replace the front speaker on the ZTE Tempo.



TOOLS:

- iFixit Opening Tools (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery





- Use a plastic opening tool to pry open the back case.
- Use a Phillips #0 screwdriver to remove the eight 5mm screws.
- Use a plastic opening tool to remove the midframe.

Step 2







- Use a plastic opening tool to lift the press-fit connector up and disconnect the battery ribbon cable.
- Lift the battery up and remove it from the phone.

Step 3 — Front Speaker








• Use a plastic opening tool to unplug the wires by pulling them to the side.

Step 4

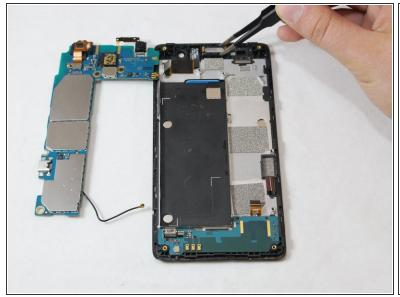



Use metal tweezers to remove the front speaker.

To reassemble your device, follow these instructions in reverse order.