



Dell Latitude D430 Battery Replacement

This guide serves to show you how to efficiently remove the battery from the Dell Latitude D430.

Written By: Ahlie Hussien



INTRODUCTION


This guide will take you through the steps to remove your Dell Latitude D430's battery. Make sure your laptop is completely turned off and unplugged from a power source. Before starting make sure you are wearing an anti-static wrist band or working in an uncarpeted area because static shocks may damage your components.

Step 1 — Battery



- Turn the laptop over and make the bottom of the laptop face up.

Step 2

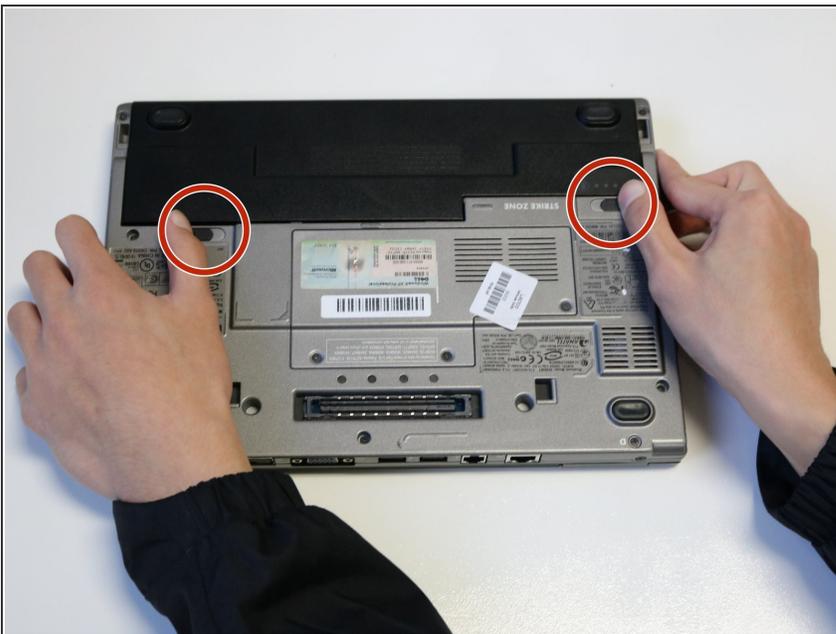


- Place your fingers on the black latches indicated in the picture.

Step 3



- Side them until you hear a click.

Step 4

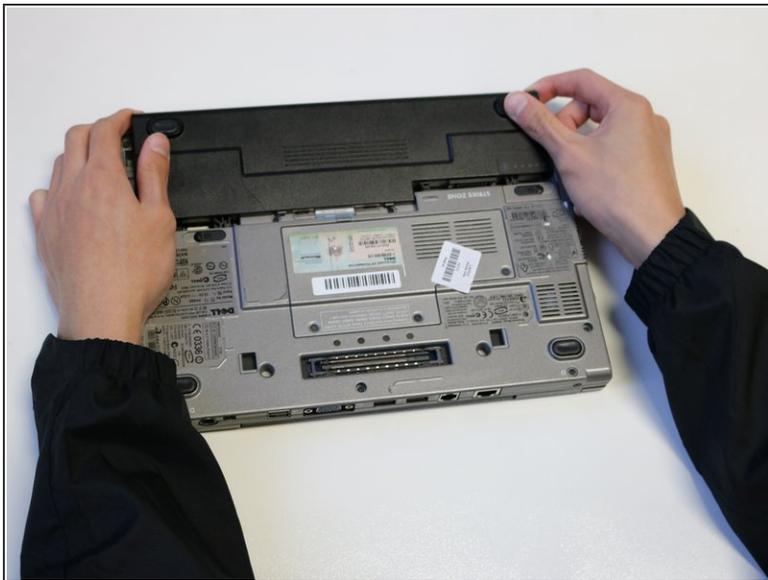

- Place both hands over the edge of the battery and pull up.

To reassemble your device, follow these instructions in reverse order.