



# Vizio SmartCast Tablet Remote XR6P Power Button Replacement

Replace the power button to correct the unresponsive remote tablet.

Written By: Wilmer Arriaga



---

## INTRODUCTION

If the tablet remote does not turn on or off after pressing the power switch, it is possible that the button is broken. This guide will show you how to replace the power button.

---

### **TOOLS:**

- [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Back Cover



- Obtain the black plastic spudger tool from the iFixit toolkit. Position the device as shown in the picture. Insert the flat end of the spudger directly in the space above the power button between the back cover and front screen.

## Step 2



- Gently pry up on the plate with the spudger. You may hear some cracking noises as you work the spudger around your device, this is normal.

## Step 3





- Pry around the edges of the tablet with your fingers until you have successfully removed the back of the device.

## Step 4 — Power Button



- Using the pointy end of the black plastic spudger, carefully remove the black tape covering the plug.

## Step 5

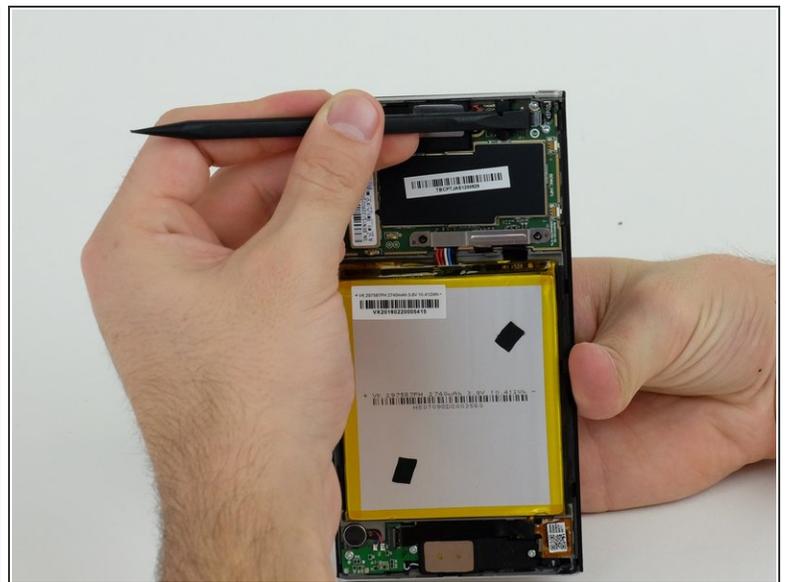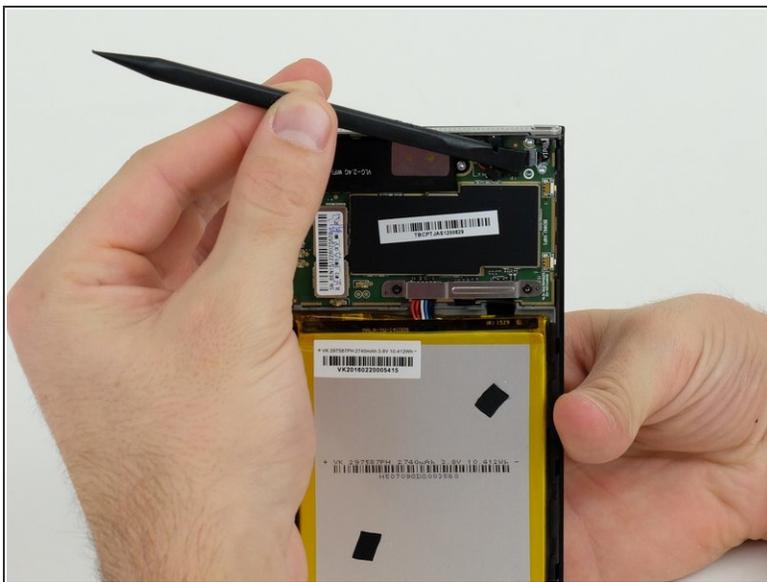


- Use the flat end of the spudger to pry the ribbon holder upwards.

## Step 6



- Obtain the tweezers and gently pull the black ribbon until it comes out of the holder.

## Step 7

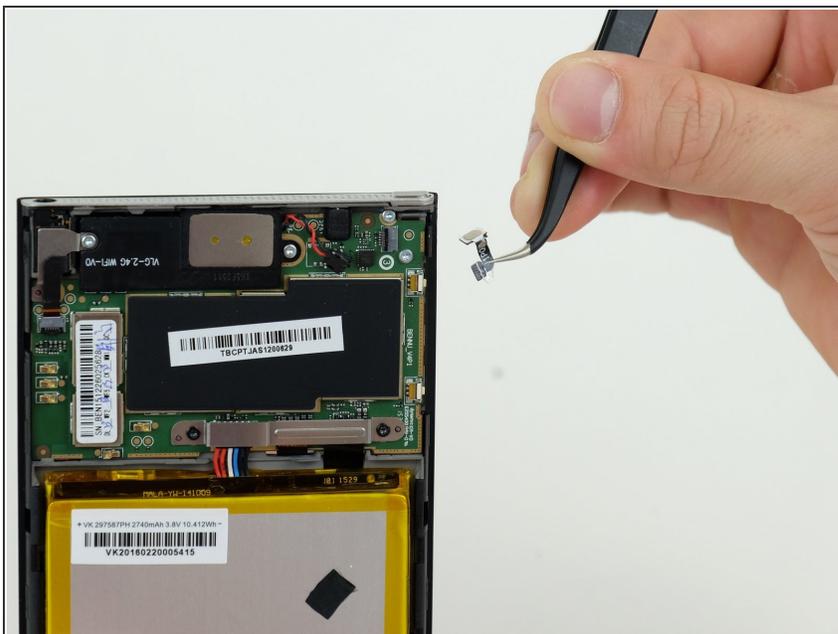

- Continue pulling the black tab until you have completely removed the power button from the device.

To reassemble your device, follow these instructions in reverse order.