



Kyocera DuraForce Pro Headphone Jack Replacement

Replacing the headphone jack of Kyocera DuraForce Pro.

Written By: Dylan Ulbricht





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Headphone Jack






- Flip the phone on its side so that the volume button is facing up.
- Use the plastic opening tool to remove outer case of the phone.
- Remove the 8 screws around the outer portion of the phone with a JIS #0 screwdriver.

Step 2






- Remove the 2 screws with the same screwdriver bit.
- Remove battery from the phone with plastic opening tool.

Step 3

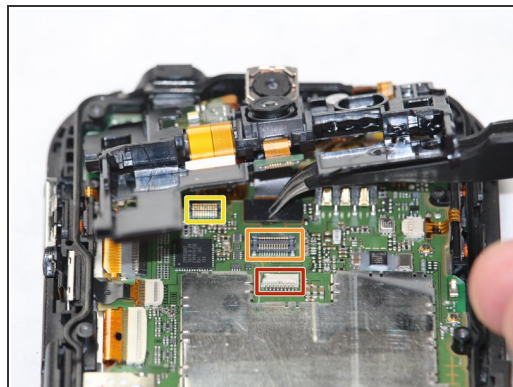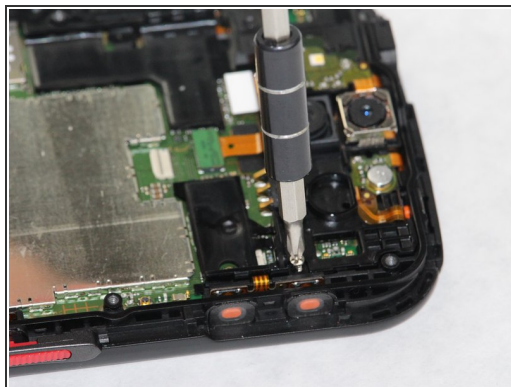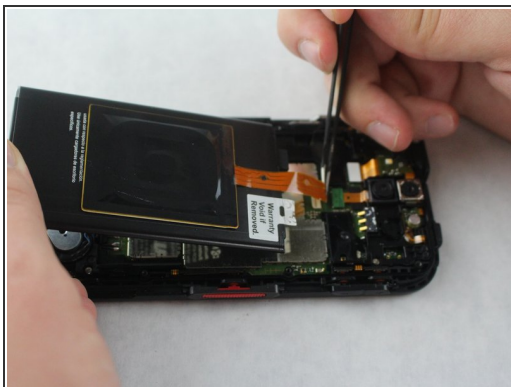

- Once the battery pops out, use tweezers to gently pull the ribbon out along with it.
- Remove the 2 screws along the sides of the mounting bracket, then remove the bracket.

Step 4

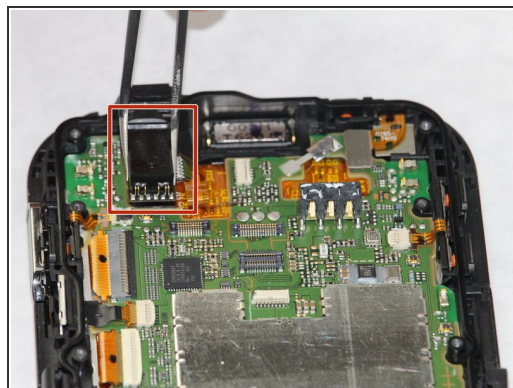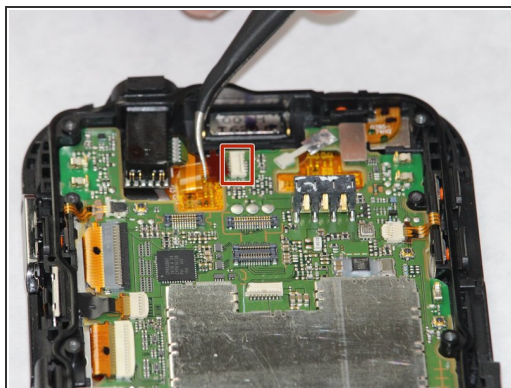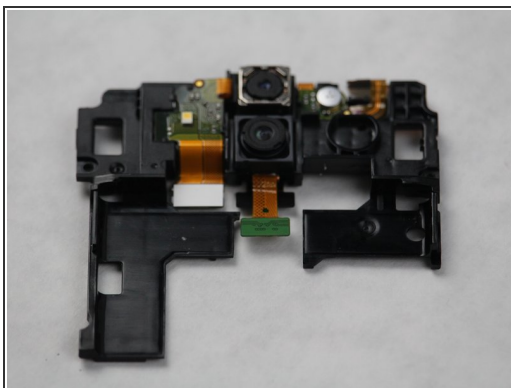

- Remove final ribbon cable, lift the latch up, and then slide it down. The audio jack will then slide out.

To reassemble your device, follow these instructions in reverse order.