

Casio G'zOne Commando Verizon MIL-SPEC Motherboard Replacement

How to replace a Casio G'zOne Commando Verizon MIL-SPEC motherboard.

Written By: Zack Almeida



This document was generated on 2020-11-28 07:08:51 AM (MST).

INTRODUCTION

In this guide, we will be completely tearing the phone down to remove the whole motherboard and replace it with a new one.



TOOLS:


- iFixit Opening Tools (1)
- Spudger (1)
- Tri-point Y0 Screwdriver (1)

Step 1 — Battery



 Slide the slider on the back of the phone to the free position.

Step 2

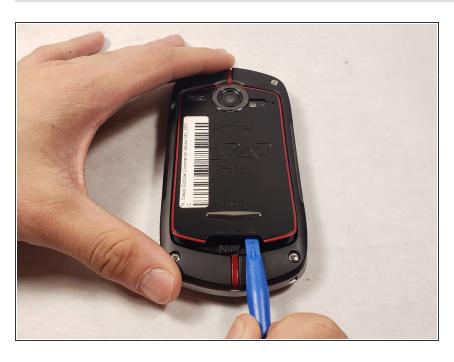

 Using a plastic opening tool, gently lift open the back panel from bottom of the panel.

Step 3





Pull the white battery tab upwards and remove the battery.

Step 4 — **Motherboard**



 Remove the four 6mm Y0 screws from the corners of the device.

Step 5




 Remove the four 5mm Y0 screws from the back of the device.

Step 6



 Using a spudger, pry away the motherboard from its compartment, by inserting the spudger in the compartment and lifting upwards until fully out.

Step 7

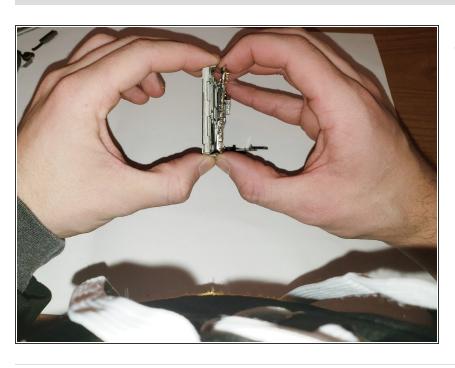

 Lastly, using your hands, separate the motherboard from its compartment.

To reassemble your device, follow these instructions in reverse order.